


ENGINE SYSTEM – GENERAL INFORMATION

PISTON PIN DIAMETER (G61250)

GENERAL PROCEDURES

 NOTE:

The piston and piston pin are a matched pair. Do not mix up the components.

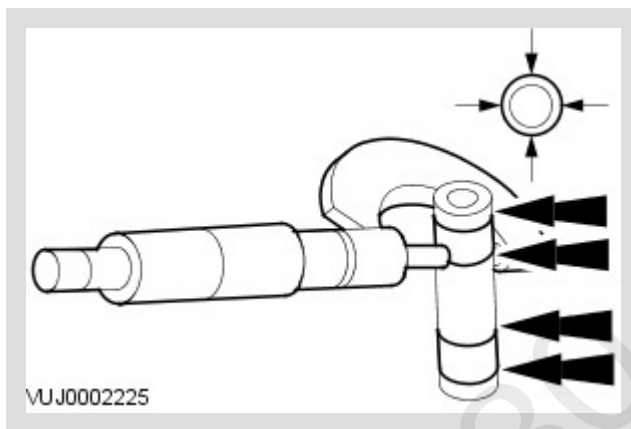

Measure the piston pin diameter.

Measure the diameter in two directions.

If the values are not to specification, install a new piston and a new piston pin.