

ENGINE SYSTEM – GENERAL INFORMATION


PISTON PIN TO BORE DIAMETER (G61245)

GENERAL PROCEDURES

1.

NOTE:

The piston and piston pin form a matched pair. Do not mix up the components.

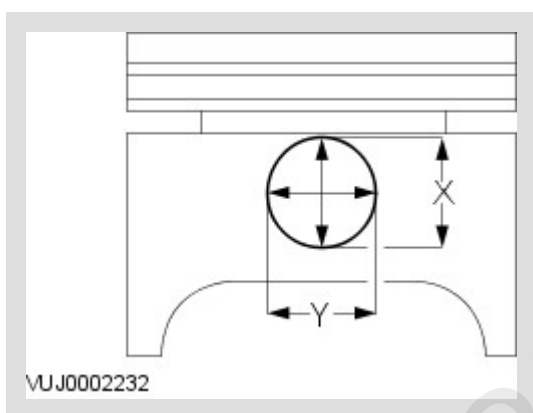

Measure the diameter of the piston pin bore.

Measure the diameter in two directions.

If the values are not to specification, install both a new piston and a new piston pin.