

ENGINE SYSTEM – GENERAL INFORMATION


PISTON RING END GAP (G61248)

GENERAL PROCEDURES

1.

⚠ CAUTION:

Do not mix up the piston rings. Install the piston rings in the same position and location.

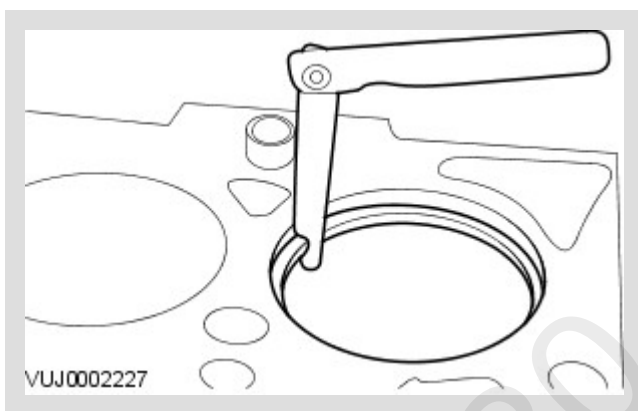

Using the Feeler Gauge, measure the piston ring gap.

The values given in the specification refer to a gauge ring used during production.