

FUEL SYSTEM – GENERAL INFORMATION

LOW-PRESSURE FUEL SYSTEM BLEEDING (G1509631)

GENERAL PROCEDURES

WARNING:

Avoid flames, sparks or lighted substances.

CAUTION:

This procedure is necessary if any of the following fuel system components are removed, disconnected or replaced:

- Fuel tank
- Low pressure fuel pump
- Low pressure fuel lines
- Fuel filter
- Fuel cooler

1. Before handling any components within the fuel system make sure that the fuel health and safety guidelines are followed. For additional information, refer to: [Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions](#) (100-00 General Information, Description and Operation) / [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2.

CAUTION:

Do not start the engine.

Repeat the following procedure 3 times.

1. Set the ignition to the ON position.
2. Wait for 65 seconds.
3. Set the ignition to the OFF position.

3.

 CAUTION:

Do not crank the engine for more than 20 seconds.

Start the engine and allow to idle for 60 seconds.

cmjjaGFyZG1vcnRvbjsyMDIwLTASLTE3VDE5OjExOjQ0Ujc1M1e7OTAuMTk5LjEyMS4xMTc7

mcx30.com