

CLIMATE CONTROL SYSTEM – GENERAL INFORMATION

AIR CONDITIONING COMPRESSOR COMMISSIONING

(G1704335)

GENERAL PROCEDURES

ACTIVATION

⚠ CAUTION:

Failure to follow this instruction may result in damage to the component.

1. Set the ignition to the on position, make sure the Air Conditioning (A/C) is in the off position.
2. Start the engine and allow to run for a minimum of 5 minutes.
3. Set the heater controls to 22°C, with the fan speed set to 75%.
4. Switch on the A/C system.
5. Open all air vents in the instrument panel.
6. Run the A/C system for a minimum of 5 minutes, while the engine is still at idle speed.
7. Once this is achieved the compressor is stabilized, with the oil being distributed evenly throughout the system.