

CLIMATE CONTROL

AMBIENT AIR TEMPERATURE SENSOR (G2323709)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- The Ambient Air Temperature (AAT) sensor is an integral part of the left door mirror and cannot be removed. A new door mirror must be installed.

1. Disconnect the startup battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the left door mirror.
Refer to: [Door Mirror](#) (501-09 Rear View Mirrors, Removal and Installation).

INSTALLATION

1. Install the left door mirror.
Refer to: [Door Mirror](#) (501-09 Rear View Mirrors, Removal and Installation).
2. Connect the startup battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).