

AUXILIARY CLIMATE CONTROL (G2413277)

DIAGNOSIS AND TESTING

PRINCIPLES OF OPERATION

For a detailed description of the auxiliary climate control system, refer to the relevant description and operation section of the workshop manual. REFER to: [Auxiliary Climate Control](#) (412-02 Auxiliary Climate Control, Description and Operation).

DTC INDEX

For a list of Diagnostic Trouble Codes (DTCs) that could be set on this vehicle, please refer to Section 100-00. REFER to: [Diagnostic Trouble Code Index - DTC: Rear HVAC Control Module \(RHVAC\) - Without Rear Air Conditioning](#) (100-00 General Information, Description and Operation).