

PUBLISHED: 17-OCT-2019
2020.0 DEFENDER (LE), 412-02

AUXILIARY CLIMATE CONTROL

AUXILIARY BLOWER (G2323733)

mcx30.com

REMOVAL



NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the auxiliary climate control assembly.

Refer to: [Auxiliary Climate Control Assembly](#) (412-02 Auxiliary Climate Control, Removal and Installation).

- 3.

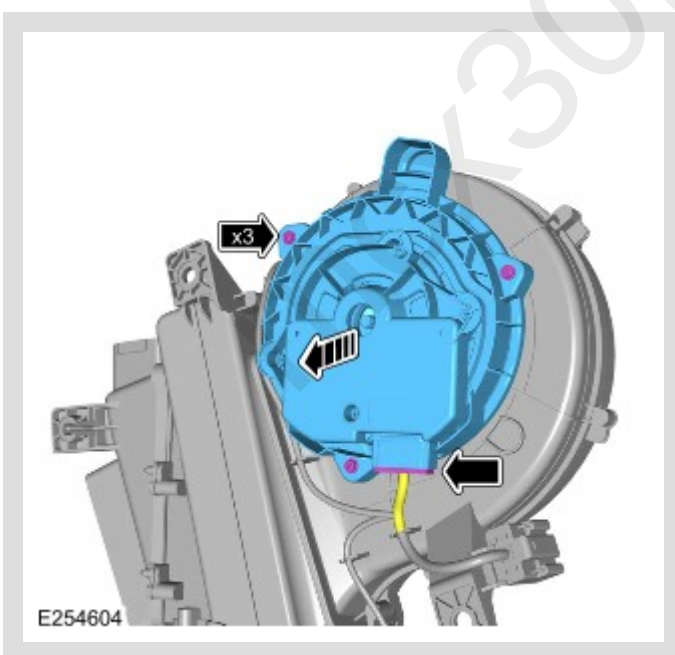

- Disconnect the electrical connector from the auxiliary blower.
- Remove the 3 screws.
- Remove the auxiliary blower.

INSTALLATION

1.

- Install the auxiliary blower.
- Install and tighten the 3 screws.
Torque: 1.5Nm
- Connect the electrical connector to the auxiliary blower.

2.

Install the auxiliary climate control assembly.

Refer to: [Auxiliary Climate Control Assembly](#) (412-02 Auxiliary Climate Control, Removal and Installation).

3.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).