

PUBLISHED: 05-AUG-2019
2020.0 DEFENDER (LE), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

FRONT DOOR BASS SPEAKER (G2413602)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for the left side components, right side components are similar.

1. Remove the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

- 2.

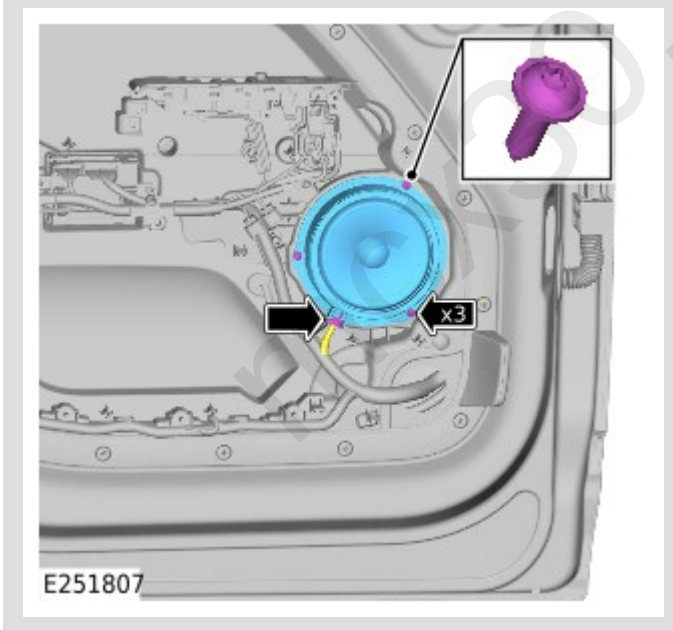

- Disconnect the electrical connector from the front door bass speaker.
- Remove the 3 bolts.
- Remove the front door bass speaker.

INSTALLATION

1.

- Install the front door bass speaker.
- Install and tighten the 3 bolts.
Torque: 1.7Nm
- Connect the electrical connector to the front door bass speaker.

2.

Install the front door trim panel.

Refer to: [Front Door Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

cmjjaGFyZG1vbnRvbjsyMDIwLTASLTE4VDEwOjEzOjUyLjk6OVVo7OTIuNDAuMTg5LjUzOw==

mcx30.com