

PUBLISHED: 19-NOV-2019
2020.0 DEFENDER (LE), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

FRONT DOOR TWEETER SPEAKER (G2413604)


mcx30.com

REMOVAL

 NOTE:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for the left side components, right side components are similar.

1.

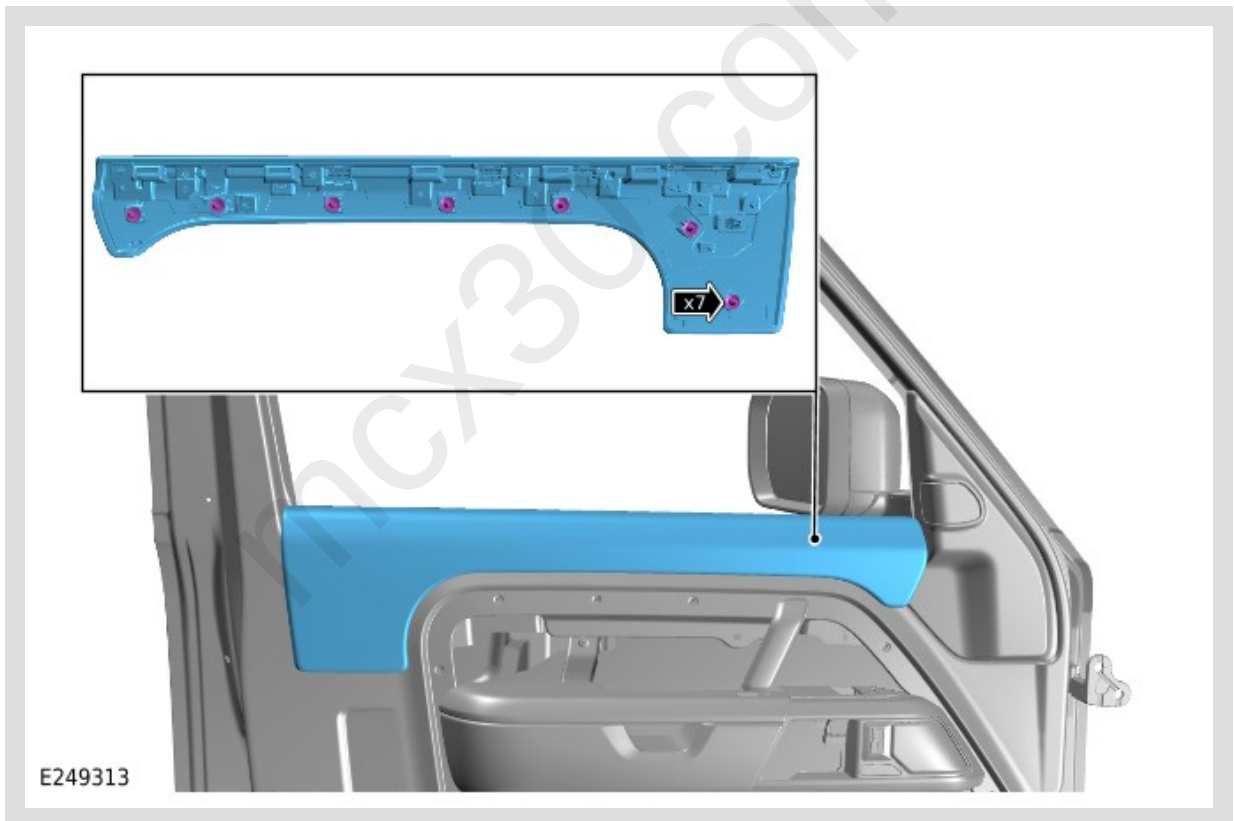


- Release the 7 clips.
- Remove the front door upper trim panel.

2.

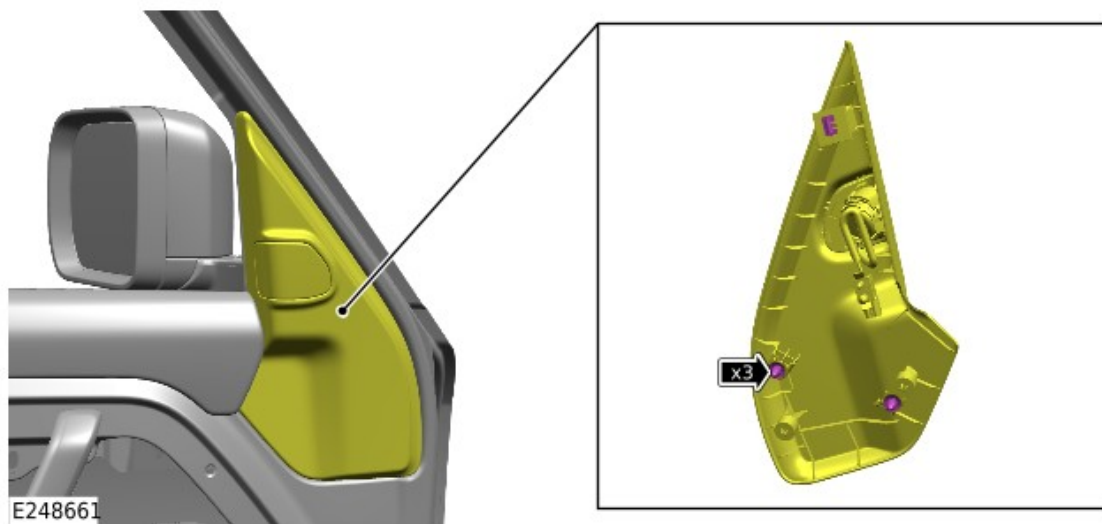


- Release the 3 clips.
- Release the door mirror trim panel.

3.

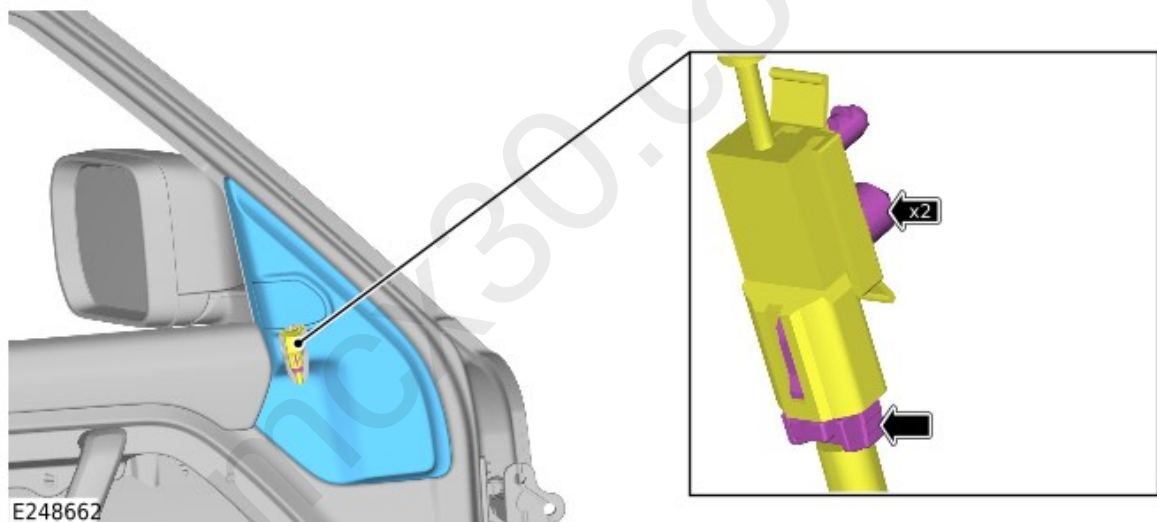

- Release the 2 clips.
- Disconnect the electrical connector.
- Remove the door mirror trim panel.

4.

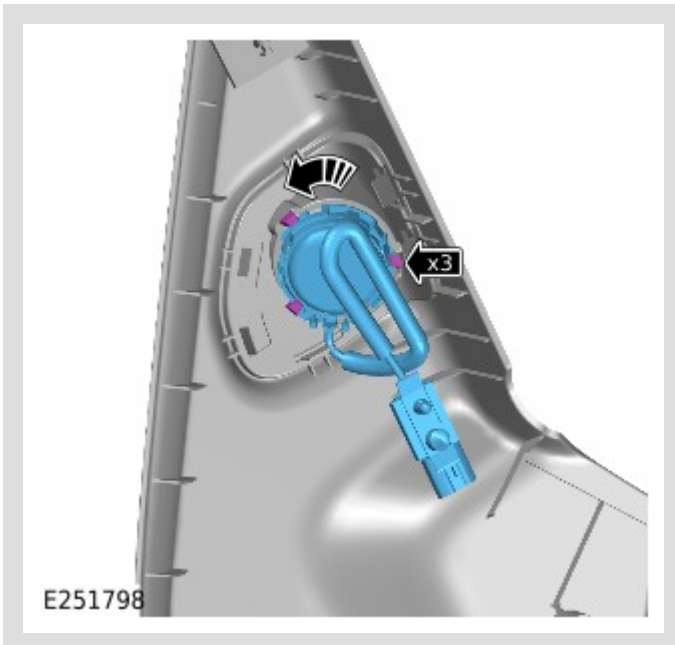

Remove the front door tweeter speaker.

INSTALLATION

1. Install the front door tweeter speaker.

- 2.
- Install the wiring harness into the 2 clips.
 - Connect the electrical connector to the front door tweeter speaker.

- 3.
- Install the door mirror trim panel.
 - Install the 3 door mirror trim panel clips.

- 4.
- Install the front door upper trim panel.
 - Install the 7 front door upper trim panel clips.