

PUBLISHED: 15-JUL-2020
2020.0 DEFENDER (LE), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

STEERING WHEEL SWITCH (G2423986)

mcx30.com


REMOVAL

 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for the left side components, right side components are similar.


1. Make the airbag Supplementary Restraint System (SRS) safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Disconnect the startup battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).
3. Remove the driver airbag module.
Refer to: [Driver Airbag](#) (501-20B Supplementary Restraint System, Removal and Installation).

4.

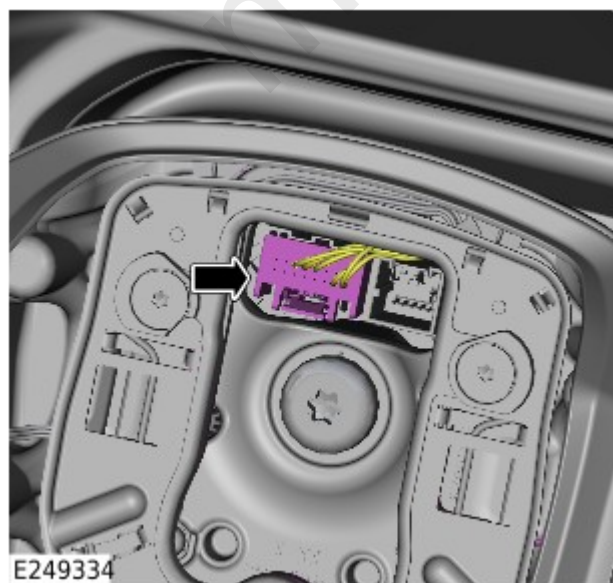


Disconnect the electrical connector.

5.

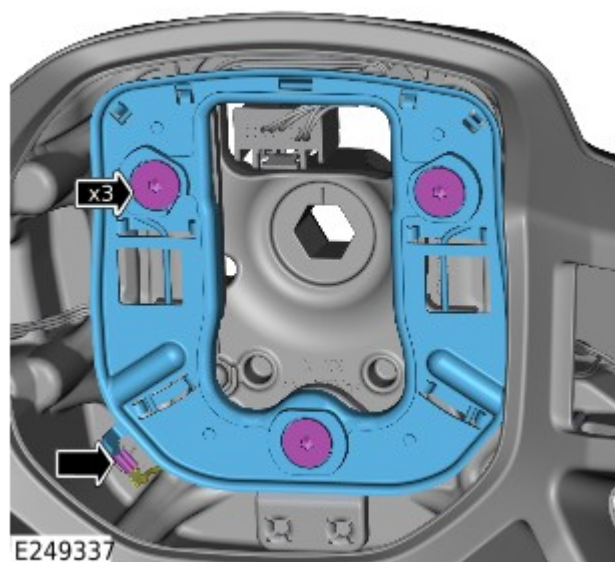


- Disconnect the electrical connector.
- Remove the 3 bolts.
- Remove the horn switch.

6.

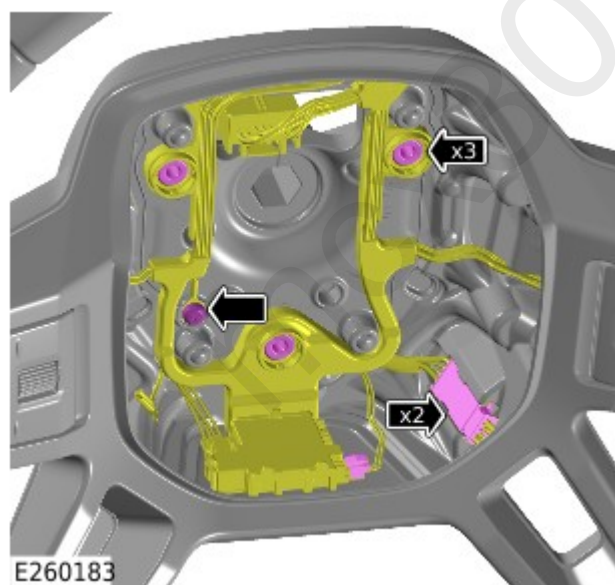


- Remove the bolt.
- Release the 3 wiring harness clips.
- Disconnect the 2 electrical connectors.

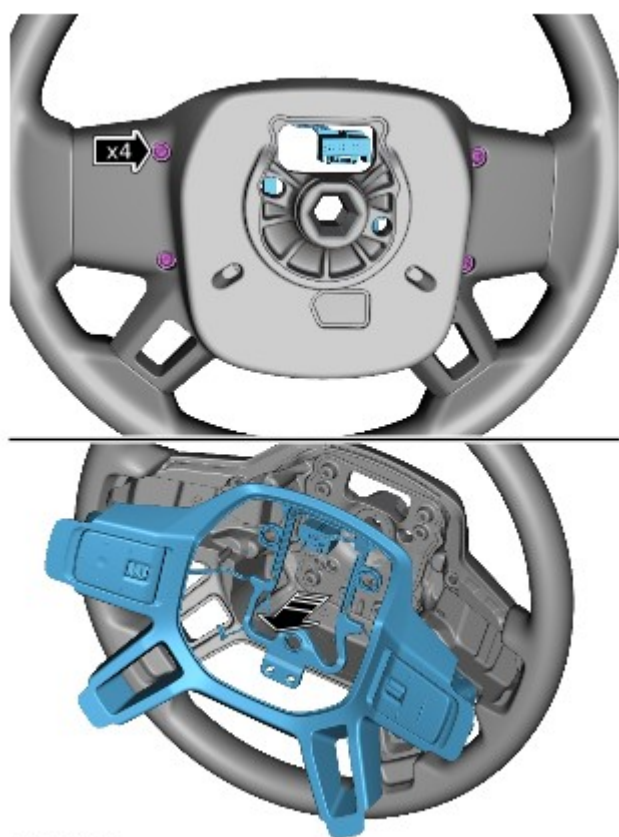

E249339


- Remove the 4 bolts.
- Remove the steering wheel cover.

8.

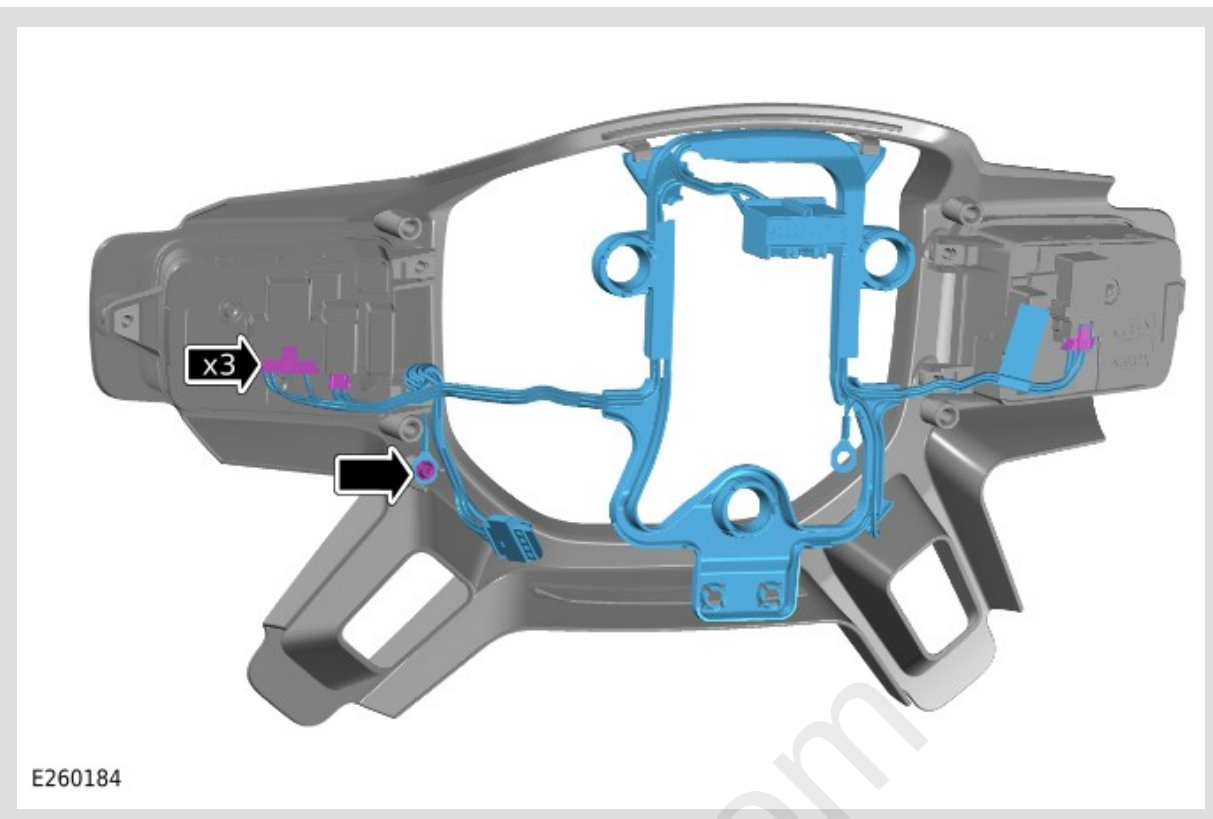

- Remove the bolt.
- Disconnect the 3 electrical connectors.
- Remove the steering wheel wiring harness.

9.

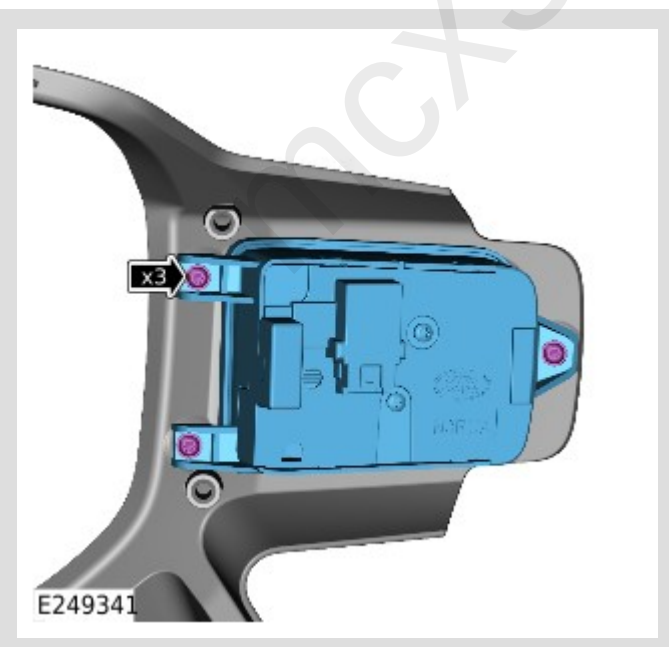

- Remove the 3 bolts.
- Remove the steering wheel switch.

INSTALLATION

1.

- Install the steering wheel switch.

- Install the 3 bolts.

Torque: 1.5Nm

2.

- Connect the 3 electrical connectors to the steering wheel switches.

- Install the steering wheel wiring harness.

- Install and tighten the bolt.

Torque: 1.7Nm

3.

- Install the steering wheel cover.

- Install and tighten the 4 bolts.

Torque: 1.6Nm

4.

- Reposition the steering wheel wiring harness into the correct location.

- Install and tighten the steering wheel wiring harness bolt.

Torque: 1.7Nm

- Connect the electrical connector to the steering wheel switch.

5.

- Install the horn switch.

- Install and tighten the 3 horn switch bolts.

Torque: 6.5Nm

- Connect the electrical connector to the horn switch.

6.

Install the driver airbag module.

Refer to: [Driver Airbag](#) (501-20B Supplementary Restraint System, Removal and Installation).

7.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).