

PUBLISHED: 14-AUG-2020
2020.0 DEFENDER (LE), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

TELEMATIC CONTROL UNIT MODULE (G2416531)

mcx30.com

REMOVAL

 NOTES:

- For vehicles with secure tracker feature installed.
- The Telematics Control Unit Module (TCU) must be placed into service mode by the owner before proceeding - **The service mode feature is not applicable for NAS markets.**
- Service mode disables all alert triggers except movement alert.
- The TCU can be put into 'Service Mode' in 3 ways:
 - - Through the Call Centre - The owner calls the Telematics Service Provider and requests to set the vehicle in to 'Service Mode'.
 - - Through the InControl® Remote smartphone App - The owner enables 'Service Mode'.
 - - Through the InControl® website - The owner enables 'Service Mode'.
- If the TCU is not set into service mode, then communication to and from the TCU may be lost, which may prevent the vehicle starting. **Failure to do so may result in any warranty claim being rejected.**
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. The InControl® system must be put in to service mode by the customer.

2. NOTE:

This step is only required for 90 vehicles.

Remove the left rear quarter trim panel.

Refer to: [Rear Quarter Trim Panel - 90](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

NOTE:


This step is only required for 110 vehicles.

Remove the left loadspace trim panel.

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Left Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

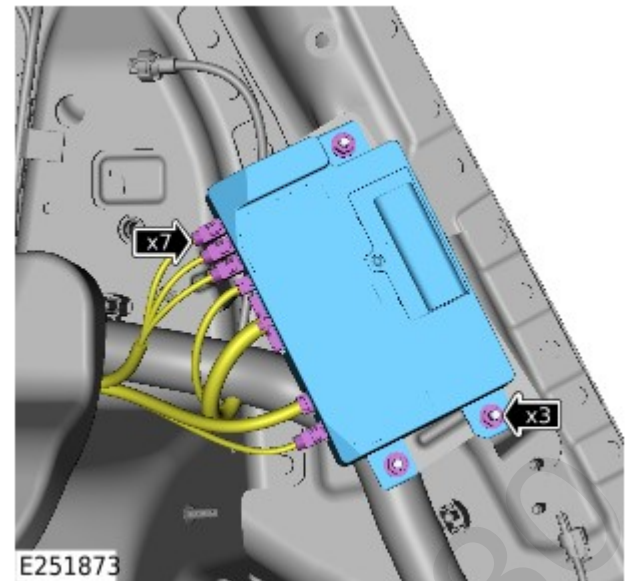

- Disconnect the 7 electrical connectors.
- Remove the 3 nuts.
- Remove the Telematic Control Unit Module (TCU) from the mounting bracket.

INSTALLATION

1.

- Install the TCU.
- Install and tighten the 3 nuts.
Torque: 7Nm
- Connect the 7 electrical connectors.

2.

 NOTE:

This step is only required for 110 vehicles.

Install the left loadspace trim panel.

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Left Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

 NOTE:

This step is only required for 90 vehicles.

Install the left rear quarter trim panel.

Refer to: [Rear Quarter Trim Panel - 90](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

The customer must remove the InControl© system from service mode.