

PUBLISHED: 24-JUL-2020
2020.0 DEFENDER (LE), 415-01

INFORMATION AND ENTERTAINMENT SYSTEM

WI-FI ANTENNA – LEFT HAND DRIVE (G2724055)

mcx30.com

REMOVAL

⚠ CAUTION:

Do not use excessive force to remove the component. Make sure that all fixings are fully released.

△ NOTE:

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- Make sure that the retaining clips are correctly installed.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

- 2.




- Remove the 4 bolts.
- Remove the instrument panel passenger side trim panel.

3.


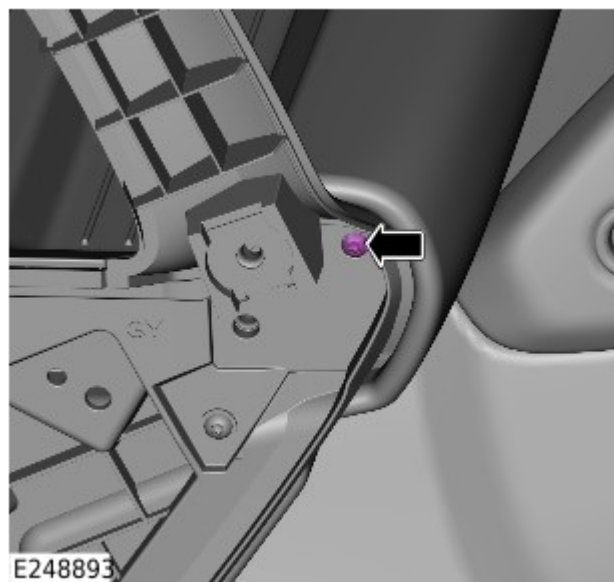


Remove the bolt.

4.

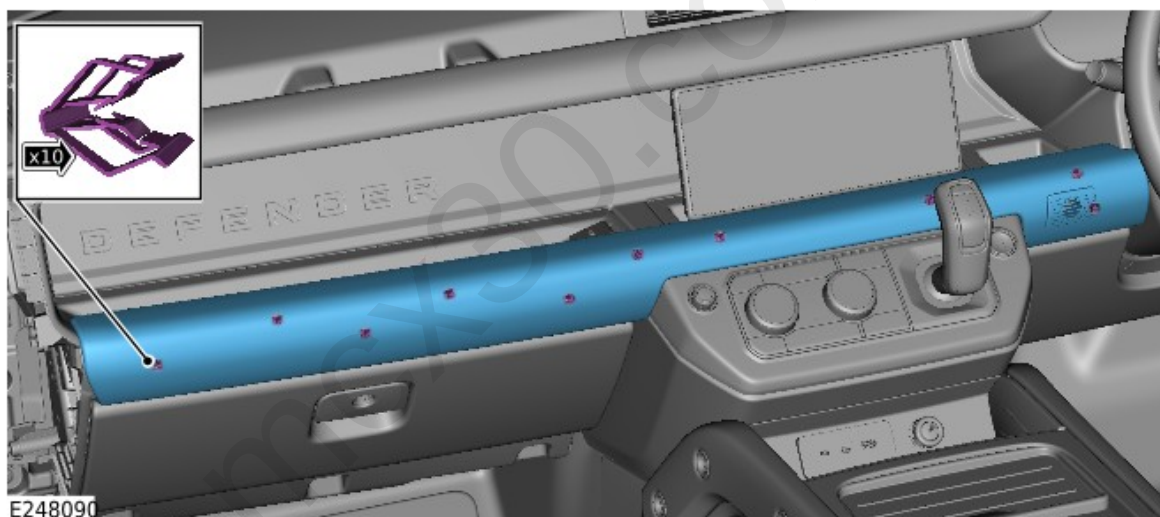

- Release the 10 clips.
- Remove the instrument panel lower surround trim.

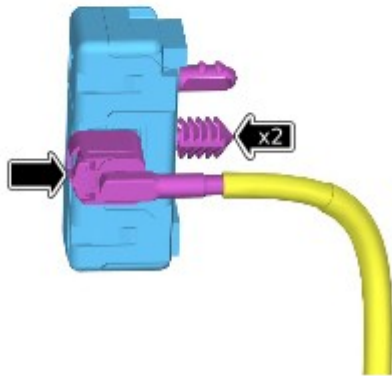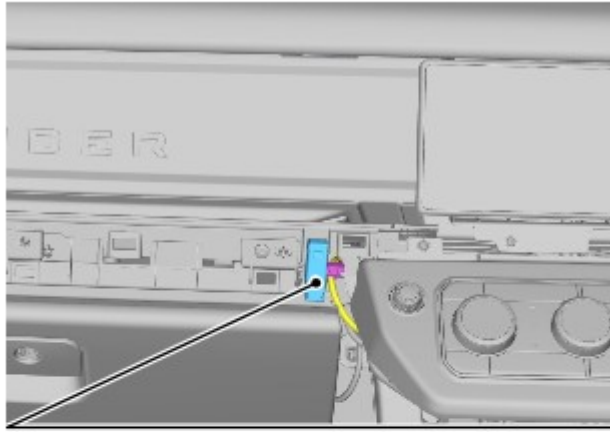

E251943

- Disconnect the electrical connector.
- Release the 2 clips.
- Remove the WiFi antenna.

INSTALLATION

1.

- Install the WiFi antenna.
- Install the 2 clips.
- Connect the electrical connector to the WiFi antenna.

2.

- Install the instrument panel lower surround trim.
- Install the 10 clips.
- Install and tighten the bolt.
Torque: 1.7Nm

3.

- Install the instrument panel passenger side trim panel.
- Install and tighten the 4 bolts.
Torque: 2.5Nm

4.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).