

PUBLISHED: 17-JUL-2019
2020.0 DEFENDER (LE), 417-01

EXTERIOR LIGHTING

HEADLAMP SWITCH (G2409912)

mcx30.com

REMOVAL

 NOTE:


- The headlamp switch is an integral component of the Steering Wheel Module (SWM) and cannot be serviced separately.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the steering wheel.

Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).

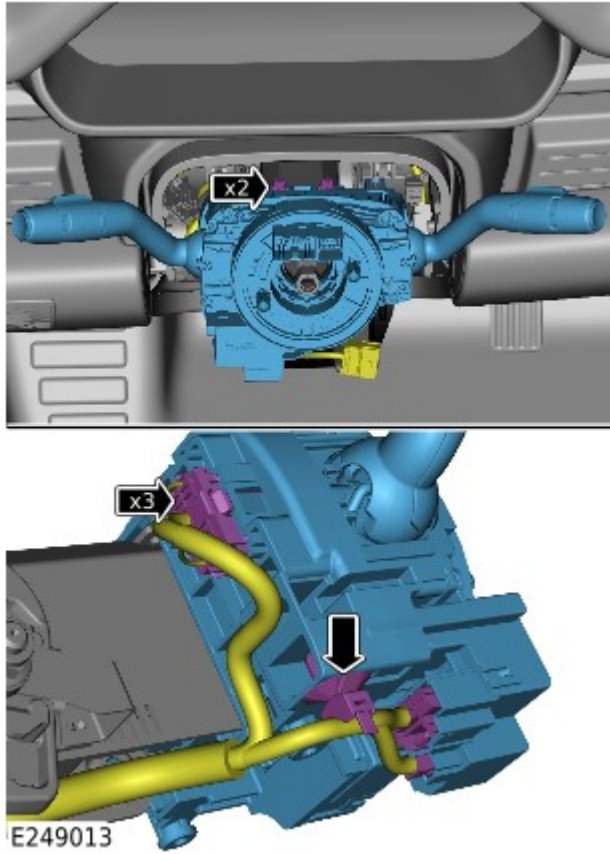

- Remove the 2 bolts.
- Disconnect the 3 electrical connectors.
- Release the clip.
- Remove the Steering Wheel Module (SWM).

INSTALLATION

1.

- Connect the 3 electrical connectors.
- Install the clip.
- Install the Steering Wheel Module (SWM).
- Install and tighten the 2 bolts.

Torque: 1.9Nm

2.

Install the steering wheel.

Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).

3.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).