

PUBLISHED: 24-SEP-2013
2020.0 DEFENDER (LE), 417-02

INTERIOR LIGHTING

SECOND ROW INTERIOR LAMP (G1605005)

mcx30.com

REMOVAL

 NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.


The following step(s) applies to:

Low level light unit

1.

 NOTES:


- LH illustration shown, RH is similar.
- This step must be repeated on both sides.

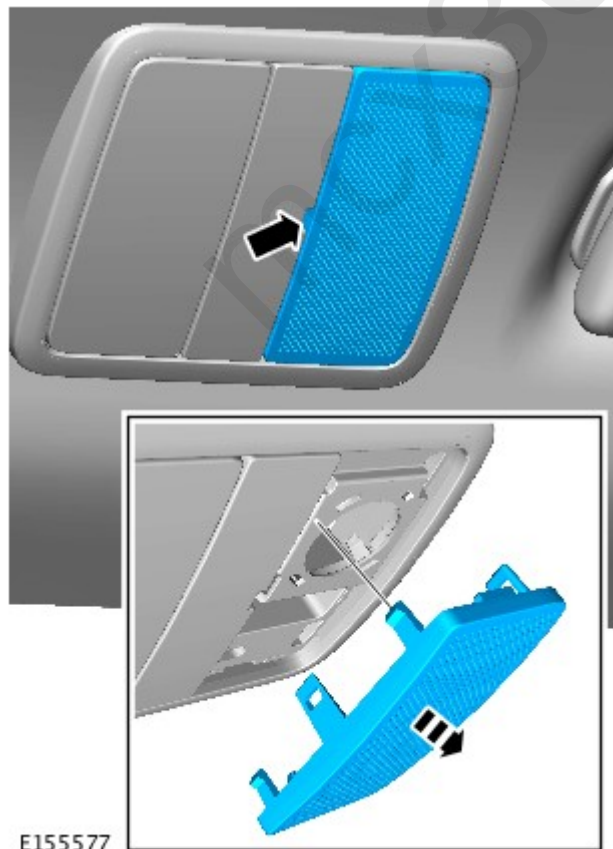

2.

 NOTES:

- LH illustration shown, RH is similar.
- This step must be repeated on both sides.


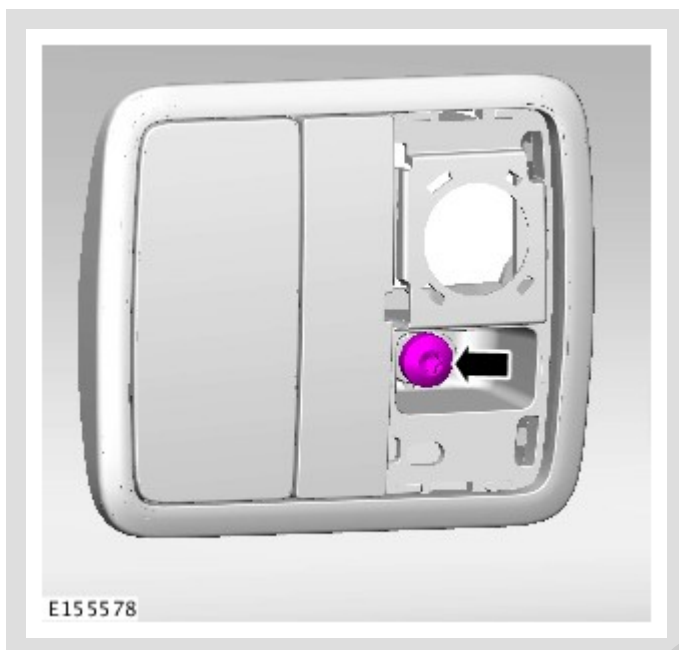


Torque: 6Nm

3.

 NOTES:

- This step must be repeated on both sides.
- LH illustration shown, RH is similar.

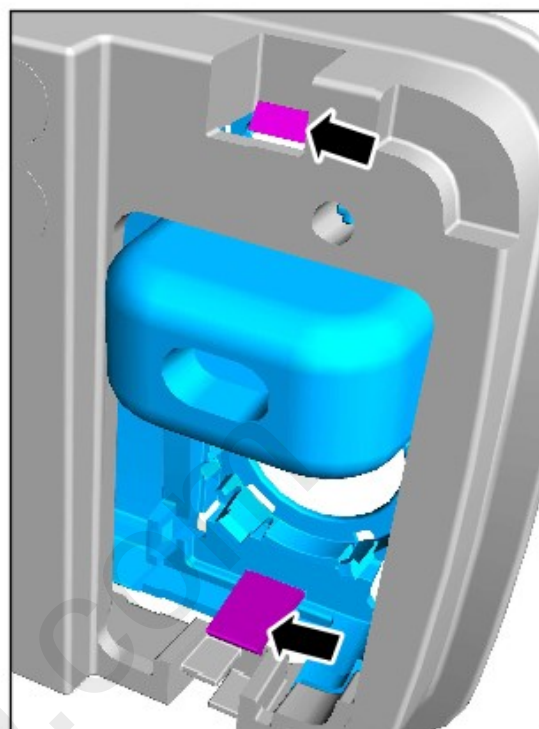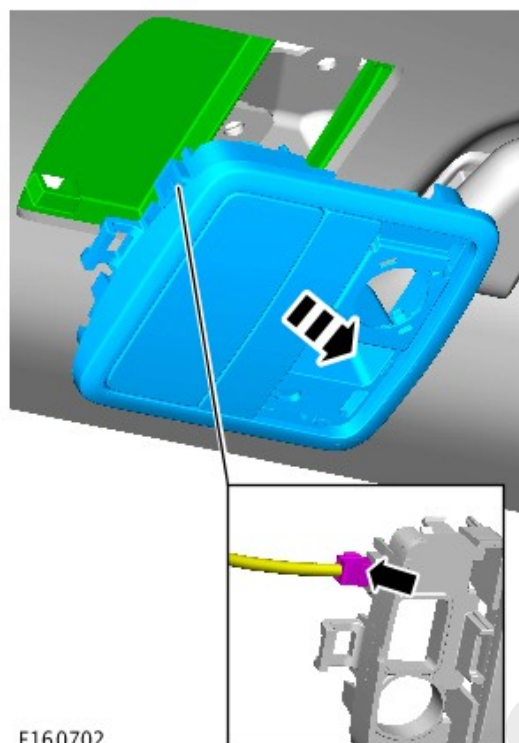

The following step(s) applies to:
Medium level light unit

4.

 NOTES:


- This step must be repeated on both sides.
- RH illustration shown, LH is similar.



5.

 NOTES:

- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

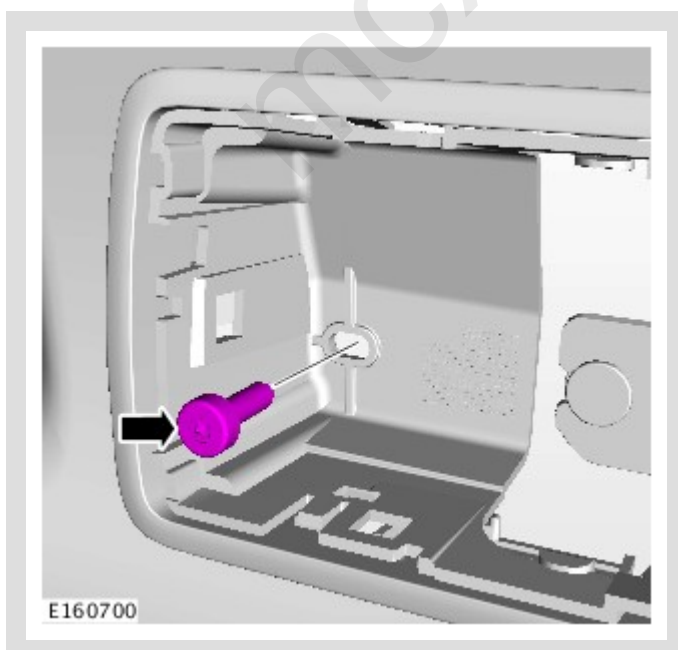


Torque: 6Nm

6.

 NOTES:

- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

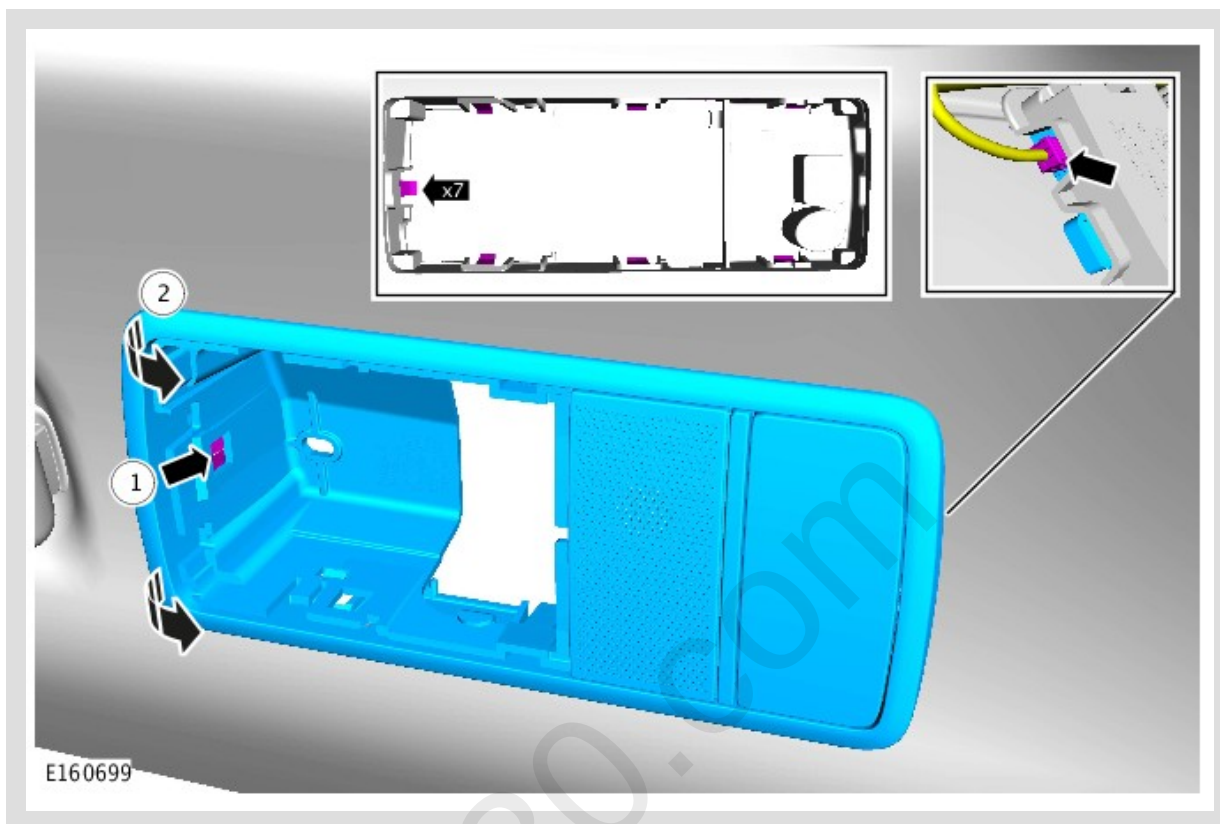


The following step(s) applies to:

High level light unit

7.

 NOTES:


- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

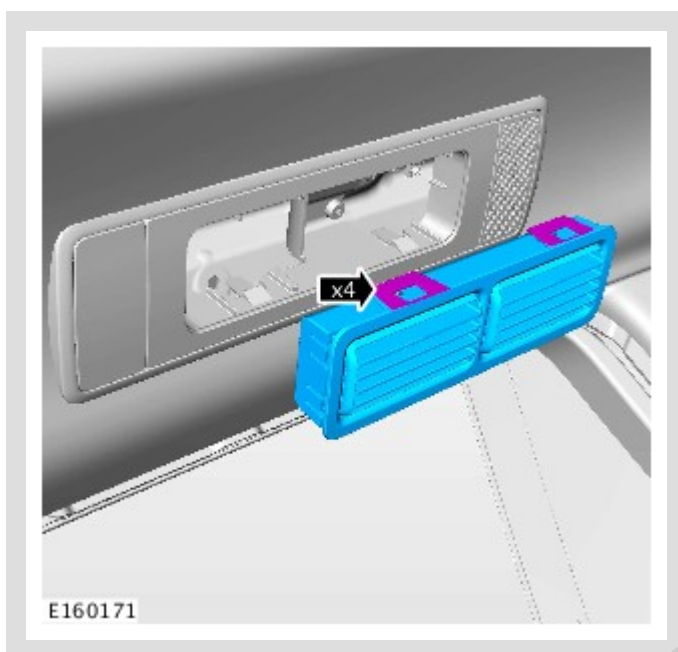

8.

 NOTES:

- This step must be repeated on both sides.
- RH illustration shown, LH is similar.

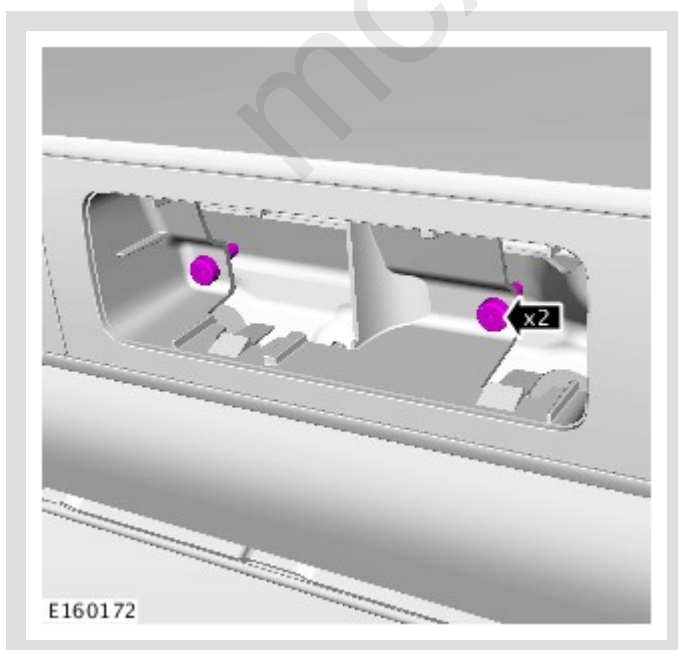


Torque: **6Nm**

9.

 NOTE:

RH illustration shown, LH is similar.

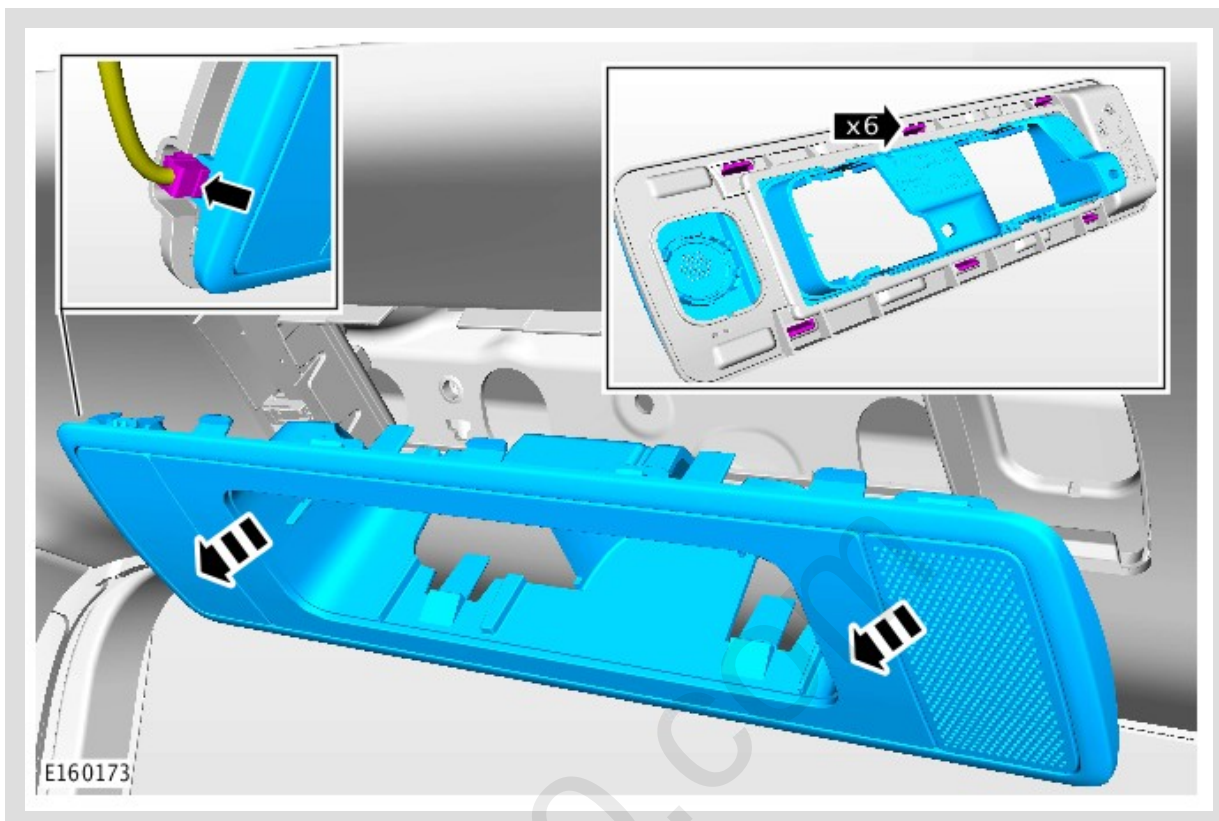

INSTALLATION

1. To install, reverse the removal procedure.