

PUBLISHED: 05-AUG-2019
2020.0 DEFENDER (LE), 419-10

MULTIFUNCTION ELECTRONIC MODULES

DRIVER SEAT MODULE (G2323871)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL


**WARNINGS:**

- To avoid accidental deployment, the Restraints Control Module (RCM) backup power supply must be depleted. Wait at least 2 minutes after disconnecting the startup battery ground cable(s) before doing any repair or adjustment to the Supplementary Restraint System (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.
- Do not probe the Supplementary Restraint System (SRS) electrical connectors.

**NOTES:**

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

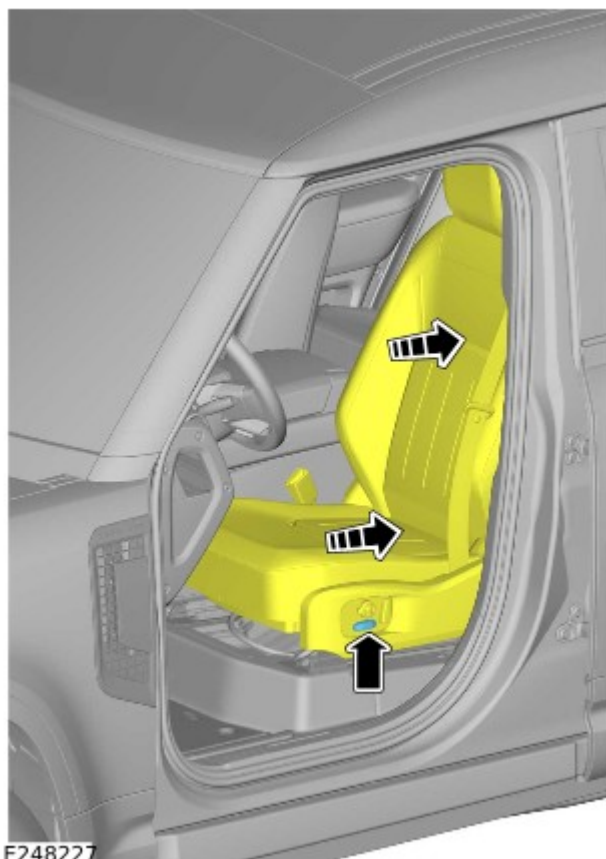


Position the front row seat backward.

2.




Remove the 2 front row seat track bolts.

3.

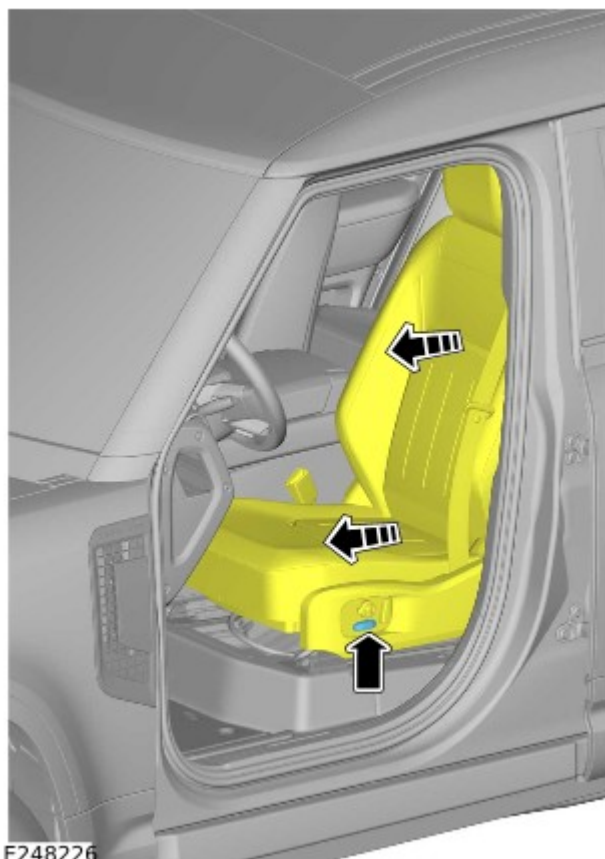


Position the front row seat forward.

4.

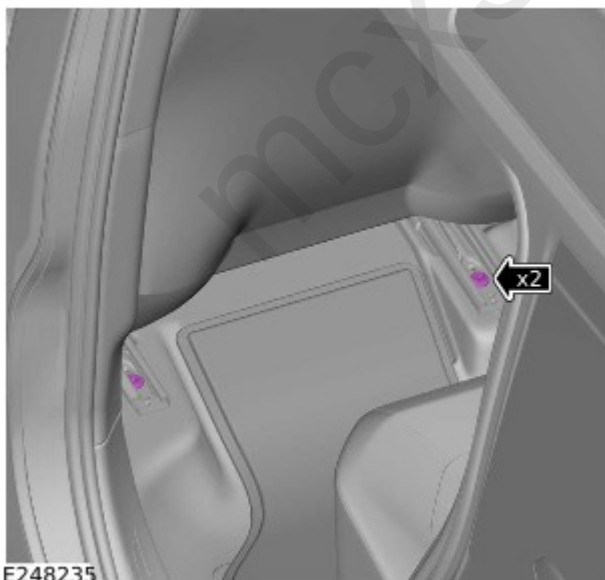

Remove the 2 front row seat track bolts.

5.

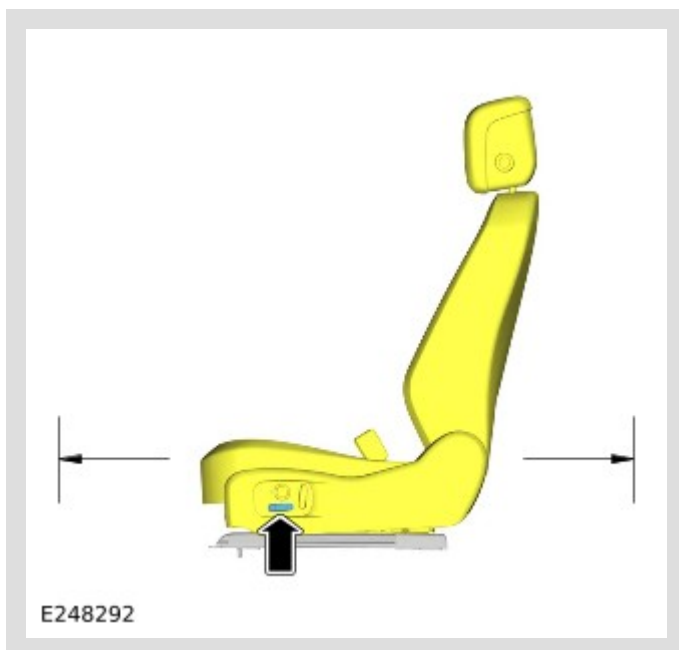

Reposition the front row seat to the center position.

6.

Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

7.

Make the Supplementary Restraint System (SRS) safe.


Refer to: [Supplementary Restraint System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

8.

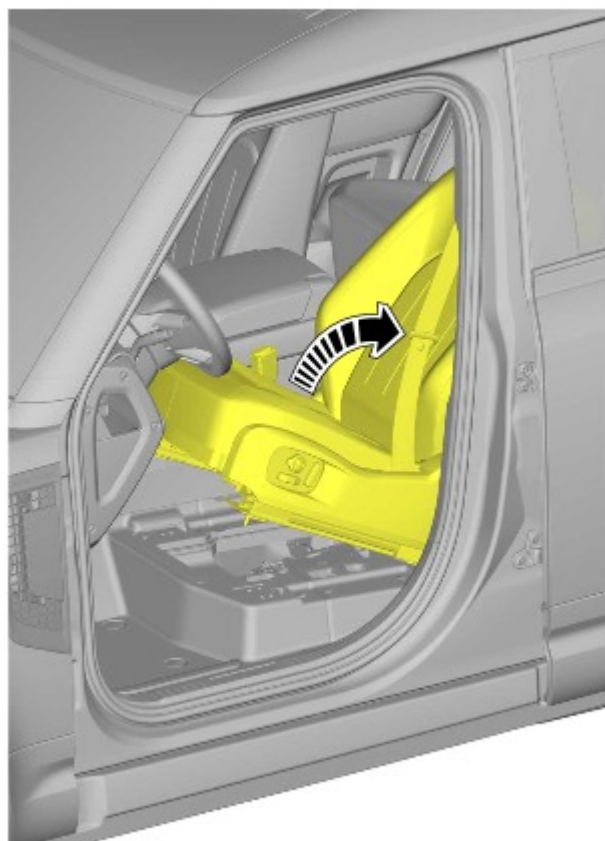


Carefully tip the front row seat.

9.

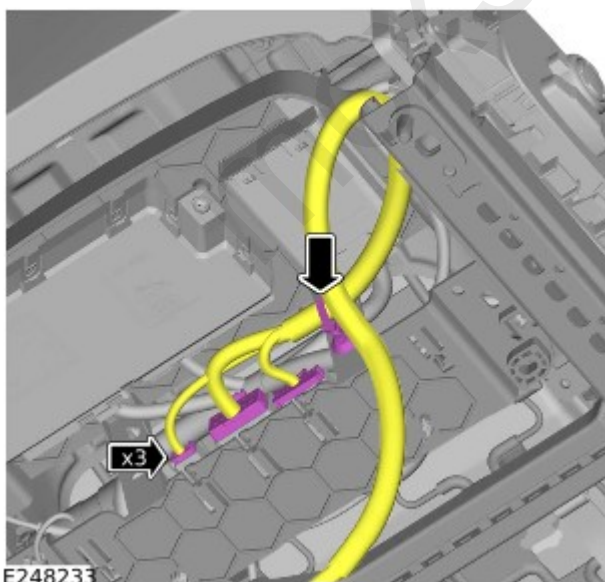

- Disconnect the 3 electrical connectors.
- Release the wiring harness clip.

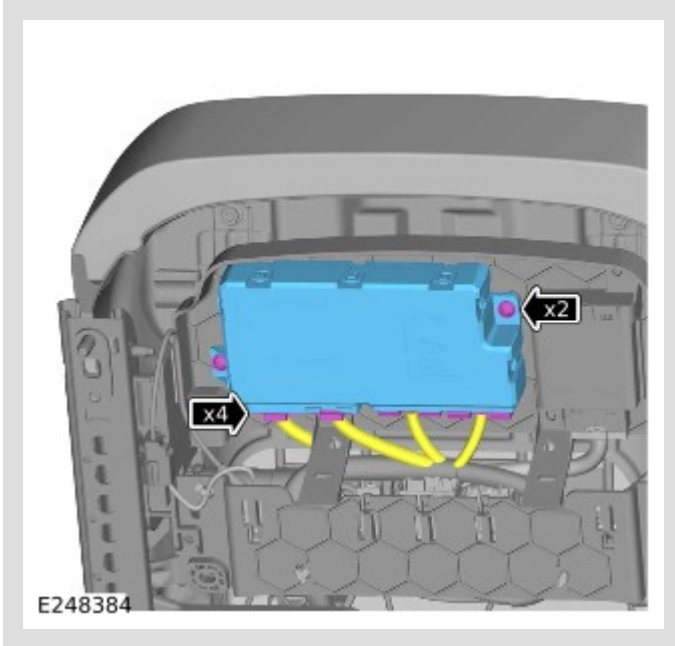

- Disconnect the 4 electrical connectors.
- Remove the 2 screws.
- Remove the Driver Seat Module (DSM).

INSTALLATION

1.

- Install the Driver Seat Module (DSM).
- Install and tighten the 2 screws.
Torque: 6Nm
- Connect the 4 electrical connectors.

2.

- Connect the 3 electrical connectors.
- Install the wiring harness clip.

3.

Carefully tip the front row seat.

4.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

5.

Position the front row seat forward.

6.

- Install and tighten the 2 rear seat track bolts.
Torque: 48Nm

7.

Position the front row seat backward.

8.

- Install and tighten the 2 front seat track bolts.
Torque: 48Nm

9.

Reposition the front row seat to center position.

10.

If a new component has been installed, configure using Jaguar Land Rover approved diagnostic equipment.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)