

PUBLISHED: 06-APR-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

B-PILLAR UPPER TRIM PANEL - 110 (G2344731)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

- 2.

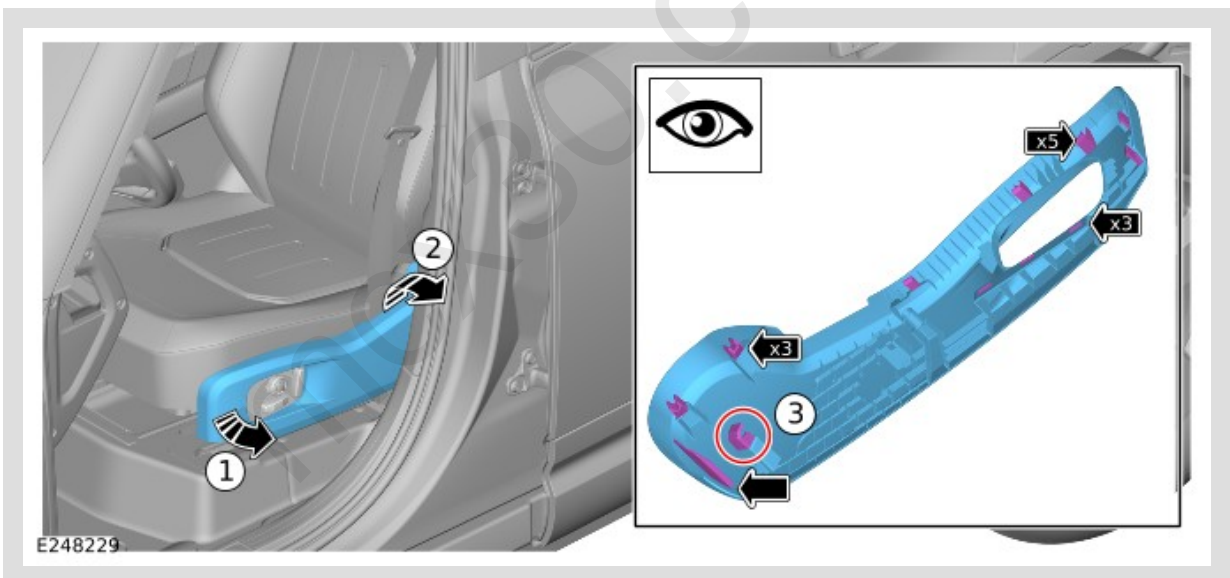


- Release the 12 clips as the sequence shown.
- Remove the front row seat side trim.

3.

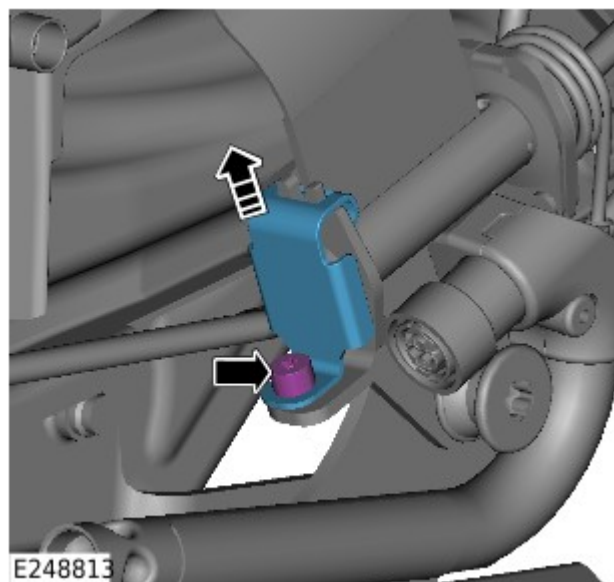


- Remove the bolt.
- Remove the seatbelt pretensioner cover.

4.

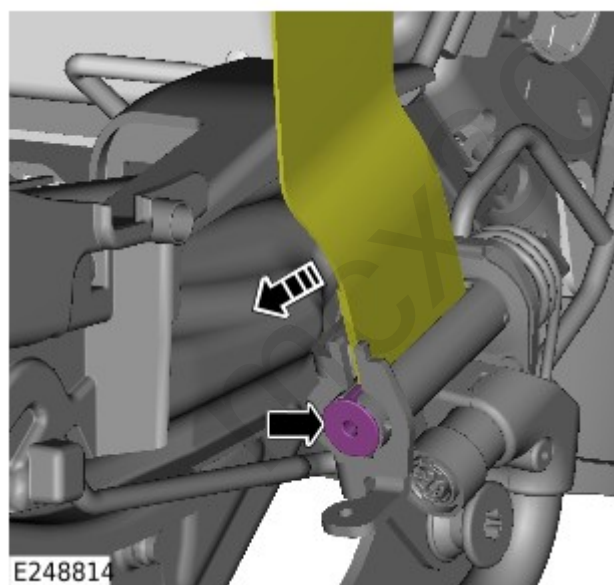


- Release the seatbelt pretensioner cotter pin.
- Release the front row seatbelt.

5.

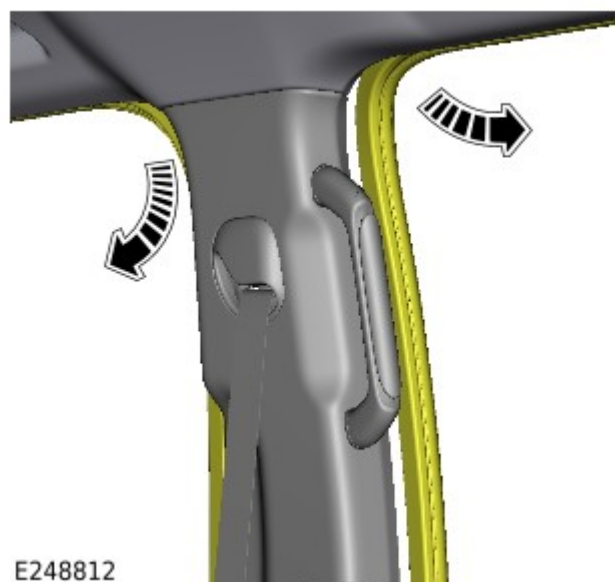


Release the front and rear door aperture seal for access.

6.

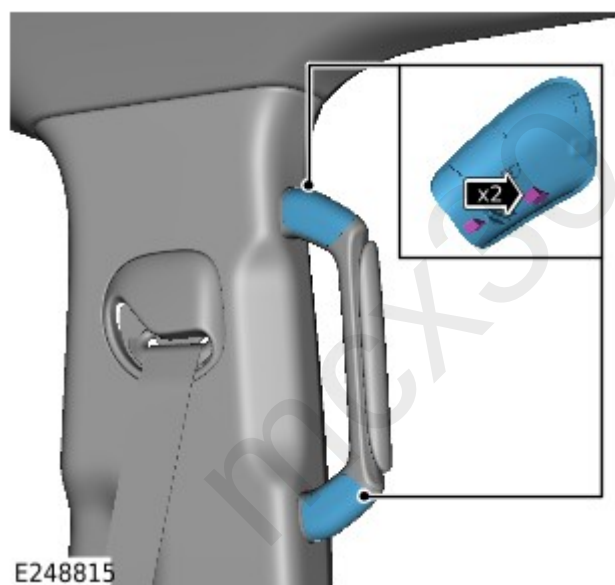

- Release the 2 covers from 2 clips.
- Remove the 2 passenger assist handle covers.

7.

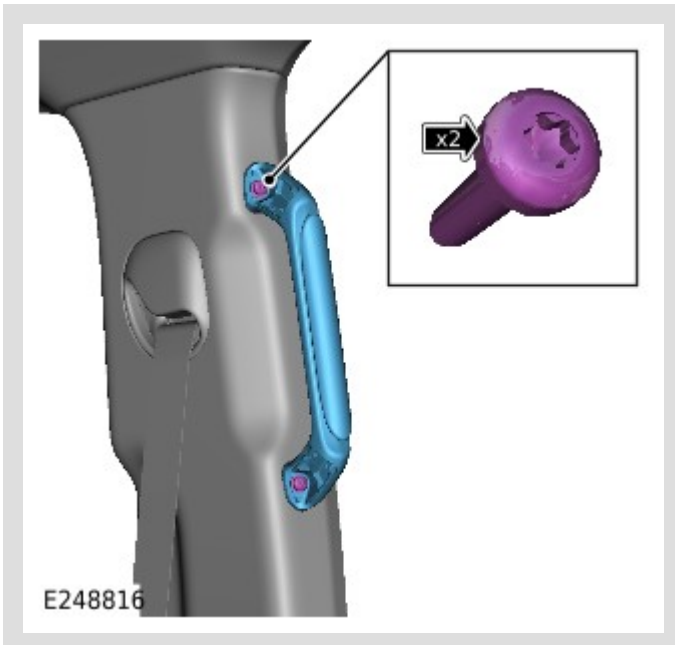


- Remove the 2 bolts.
- Remove the passenger assist handle.

8.



Release the 4 clips.

9.

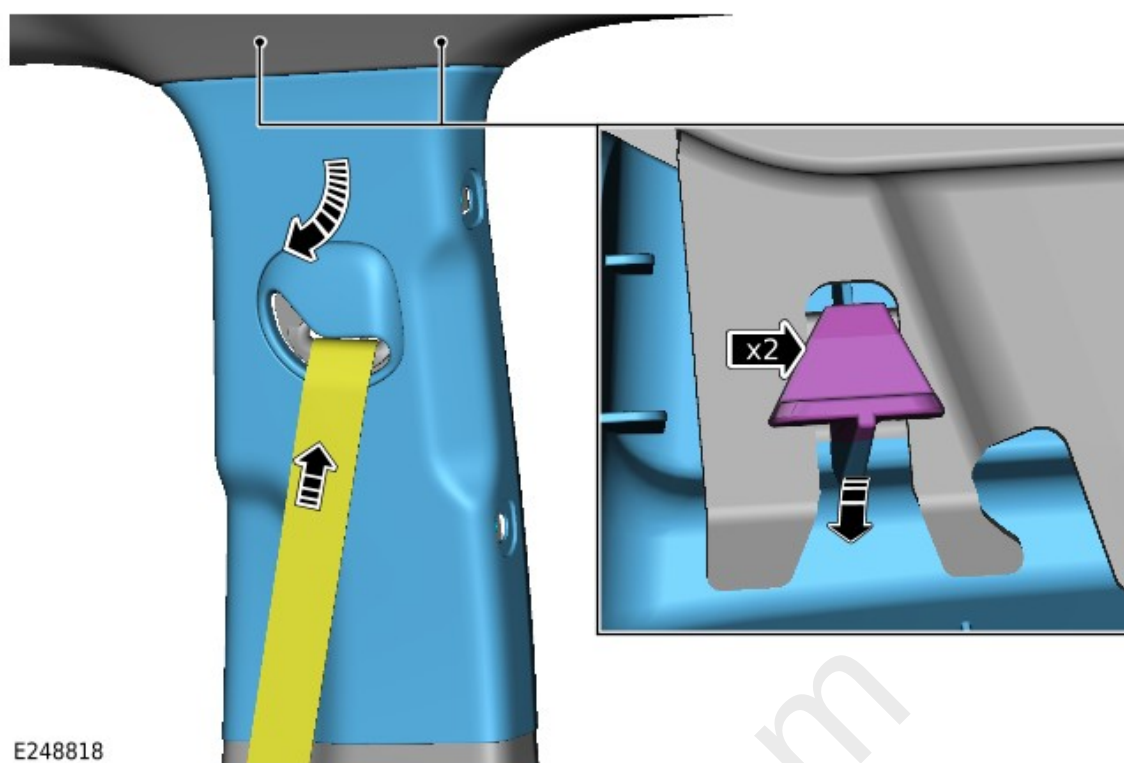


Remove the b-pillar trim panel from the 2 clips.

10.

NOTE:

Do not complete this step if component removed for access only

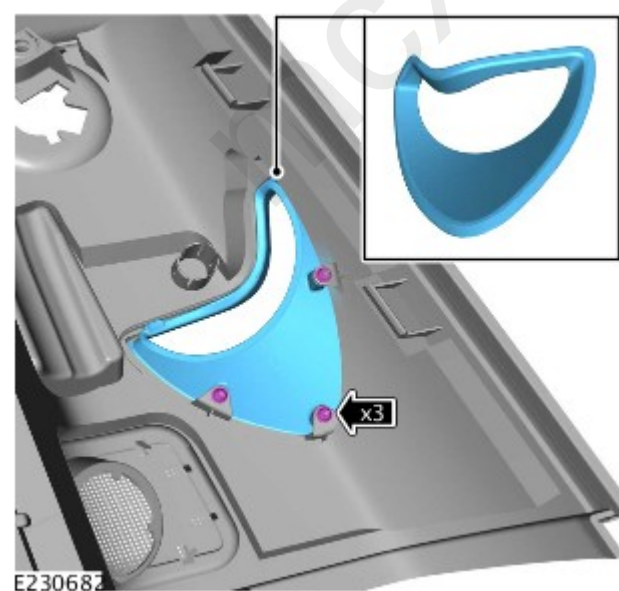

- Release the 3 clips.
- Remove the seatbelt upper anchor cover.

INSTALLATION

1.



NOTE:

Only complete this step if previously removed.

- Install the seatbelt upper anchor cover.
- Install the 3 clips.

2.

- Install the b-pillar trim panel.
- Install the 6 clips.

3.

- Install the passenger assist handle.
- Install and tighten the 2 bolts.
Torque: 7Nm
- Install the 2 passenger assist handle covers.
- Install the 2 upper cover clips.
- Install the 2 lower cover clips.

4.

Reposition the door aperture seals in the correct location.

5.

- Reposition the front row seatbelt.
- Install the seatbelt pretensioner cotter pin.

6.

- Install the seatbelt pretensioner cover.
- Install and tighten the bolt.
Torque: 5Nm

7.

Install the front row seat trim cover to the 12 clips.

8.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).