

PUBLISHED: 21-JAN-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

D-PILLAR TRIM PANEL - 110 (G2344733)

mcx30.com

REMOVAL


⚠ CAUTION:

Make sure that excessive force is not used. Failure to follow this instruction may result in damage to the vehicle.

△ NOTE:


- This procedure contains illustrations for right side components, left side components are similar.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

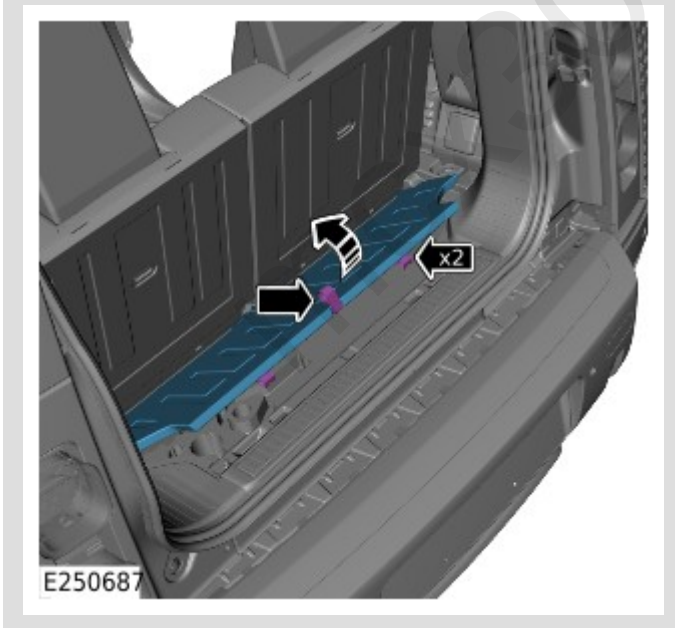


Remove the loadspace floor trim.

2.

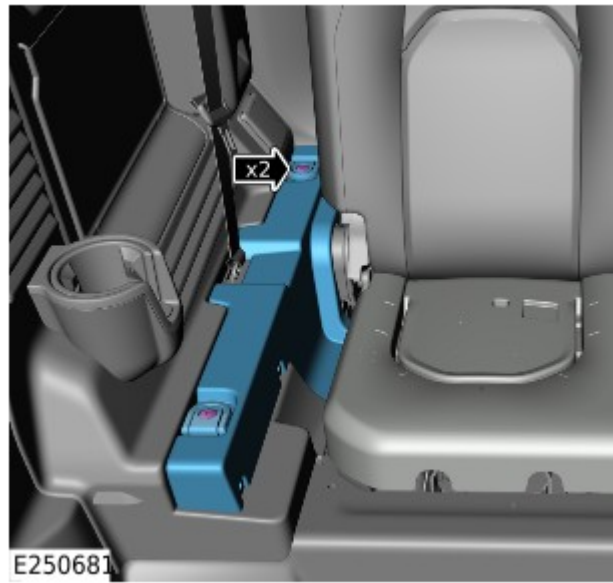

- Remove the 2 bolts.
- Remove the loadspace lower side trim.

3.

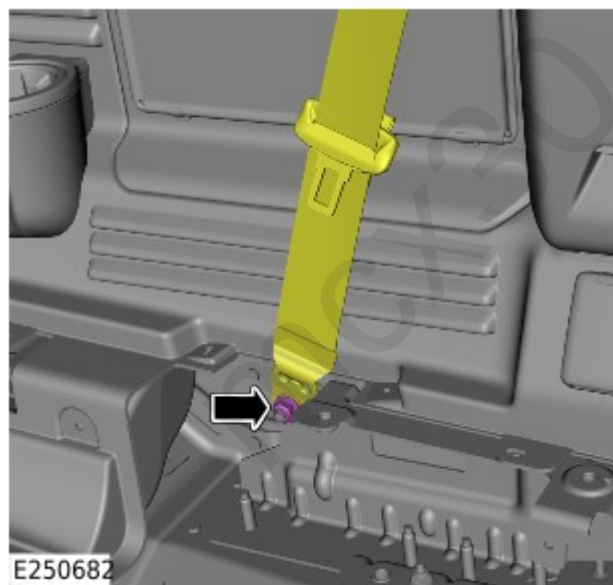

Remove the third row seatbelt anchor nut.

4.




Release the tailgate weatherstrip.

5.



Release the loadspace upper trim panel.

6.

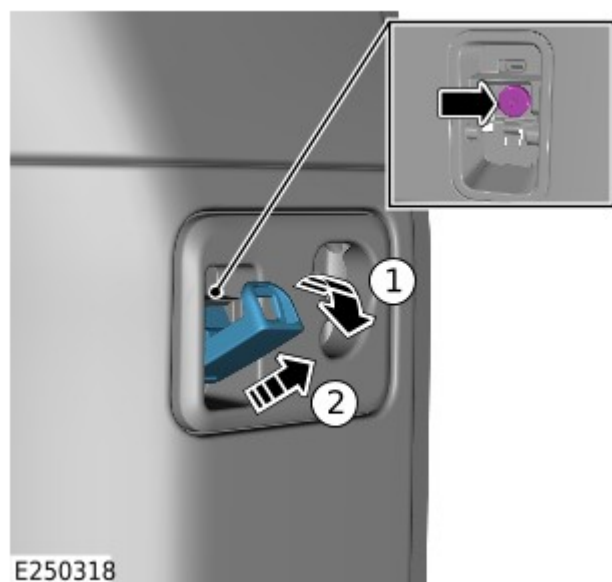

- Remove the coat hanger in the sequence shown.
- Remove the bolt.

7.




- Remove the 2 bolts.
- Remove the loadspace cover hangers.

8.



Release the loadspace side trim panel.

9.

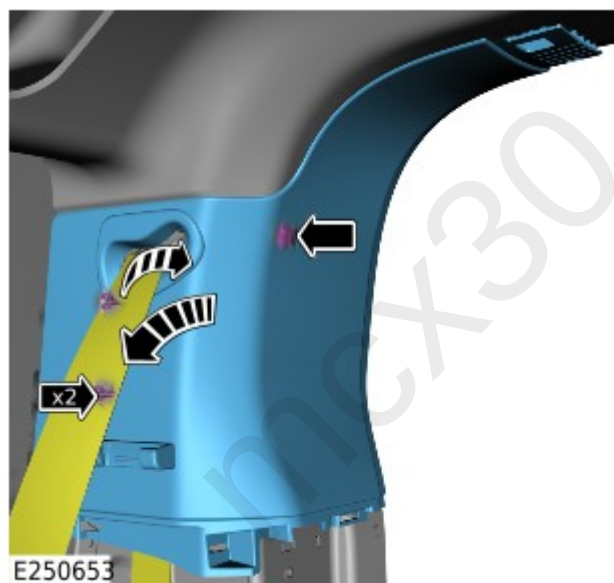

- Release the 3 clips.
- Remove the D-pillar trim panel.

INSTALLATION

1.



NOTE:

Make sure that the trim is correctly installed to the clips.

- Install the D-pillar trim panel.
- Install the 3 clips.

2.

Install the loadspace side trim panel.

3.

- Install the loadspace cover hangers.
- Install and tighten the 2 bolts.

Torque: 1.7Nm

4.

- Install and tighten the coat hanger bolt.
- Install the coat hanger.

Torque: 1.7Nm

5.

- Install the loadspace upper trim panel.
- Install the 3 clips.

6.



CAUTION:

Make sure that the weatherstrip is not stretched on installation.

Reposition the tailgate weatherstrip into the correct location.

7.

- Reposition the third row seatbelt into the correct location.
- Install and tighten the third row seatbelt anchor nut.

Torque: 40Nm

8.

Install the loadspace floor trim.