

PUBLISHED: 25-MAR-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

LEFT LOADSPACE TRIM PANEL – 110, VEHICLES WITH: 5 SEATS [G2423915]


mcx30.com

REMOVAL

 NOTE:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

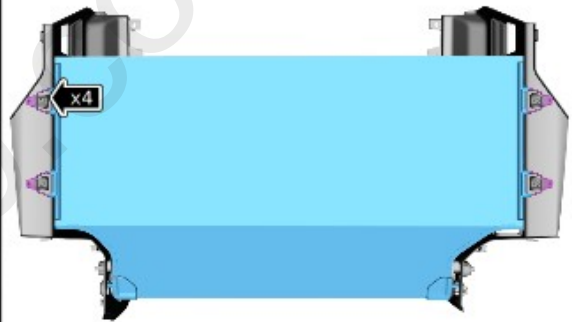


Remove the loadspace cover.

2.

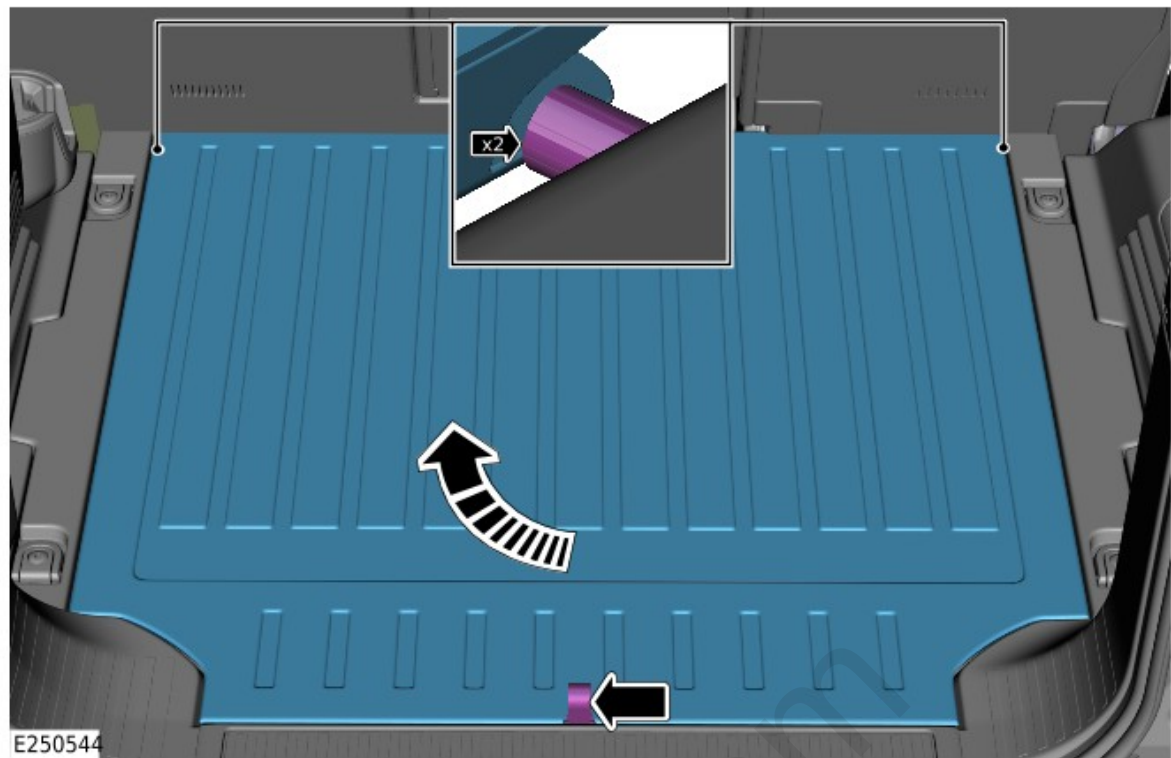


Remove the loadspace floor trim.

3.

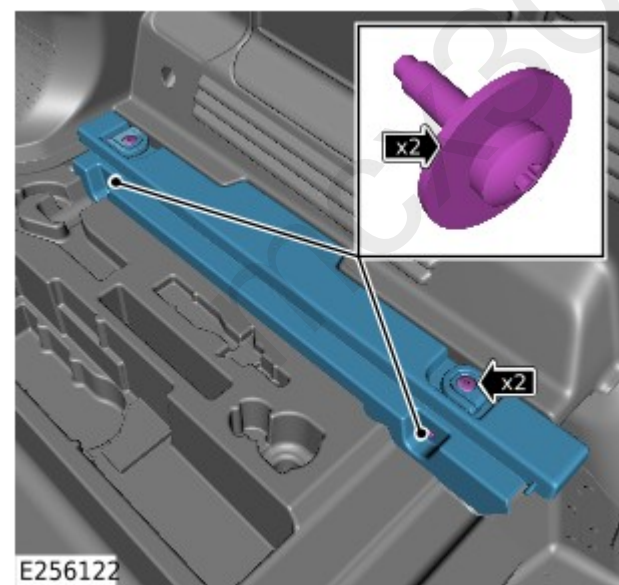


- Remove the 2 bolts.
- Remove the 2 lower clips.
- Remove the loadspace lower side trim.

4.

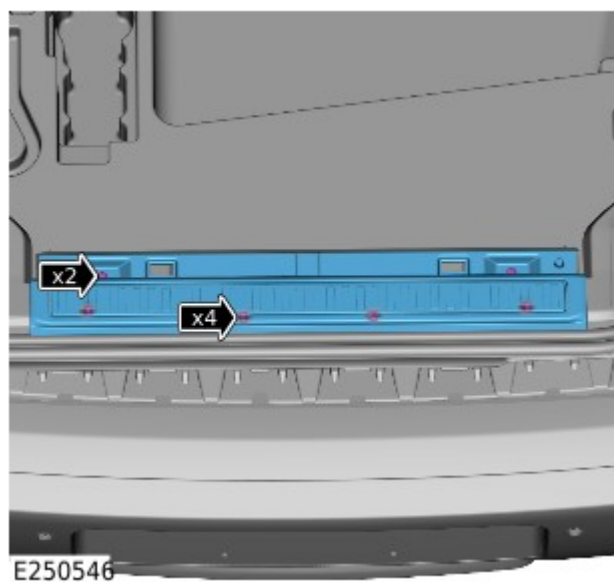

- Remove the 2 bolts.
- Release the 4 clips.
- Remove the loadspace treadplate.

5.

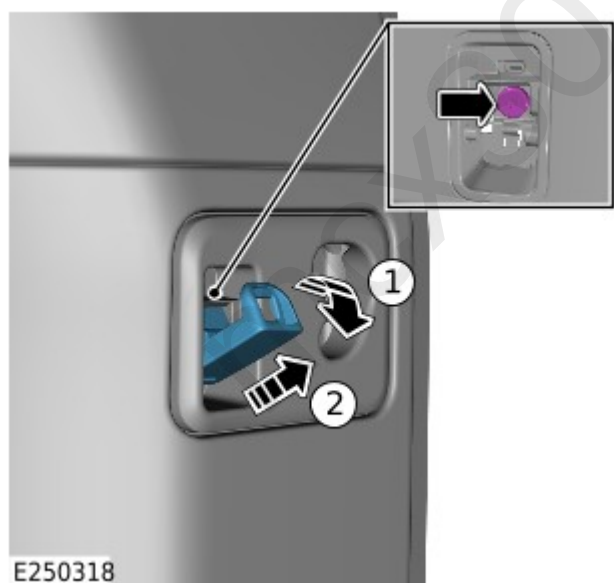

- Remove the coat hanger in the sequence shown.
- Remove the bolt.

6.

Remove the C-pillar upper trim panel.

Refer to: [C-Pillar Upper Trim Panel - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.

NOTE:

Note the orientation of the component prior to removal.



- Remove the 2 bolts.
- Remove the tailgate striker.


8.



- Release the 3 clips.
- Remove the tailgate latch guide trim.


NOTE:

Note the orientation of the component prior to removal.

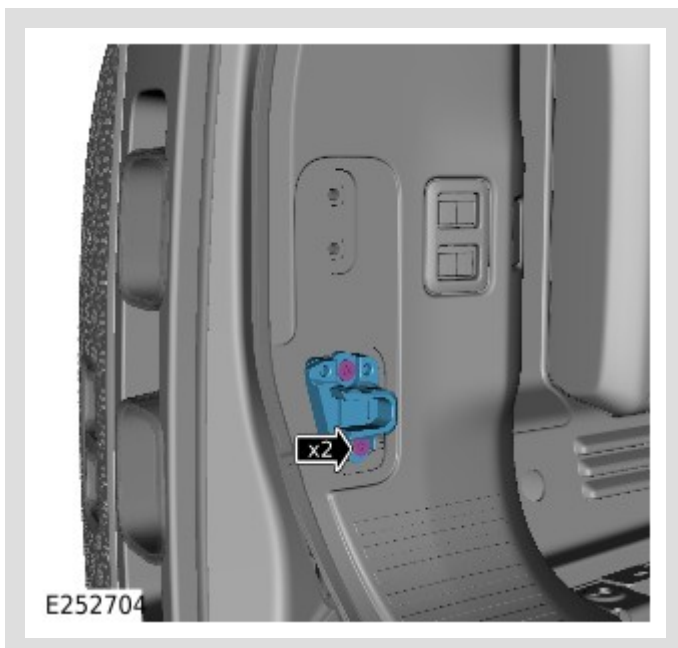


- Remove the 2 bolts.
- Remove the tailgate latch guide.

10.

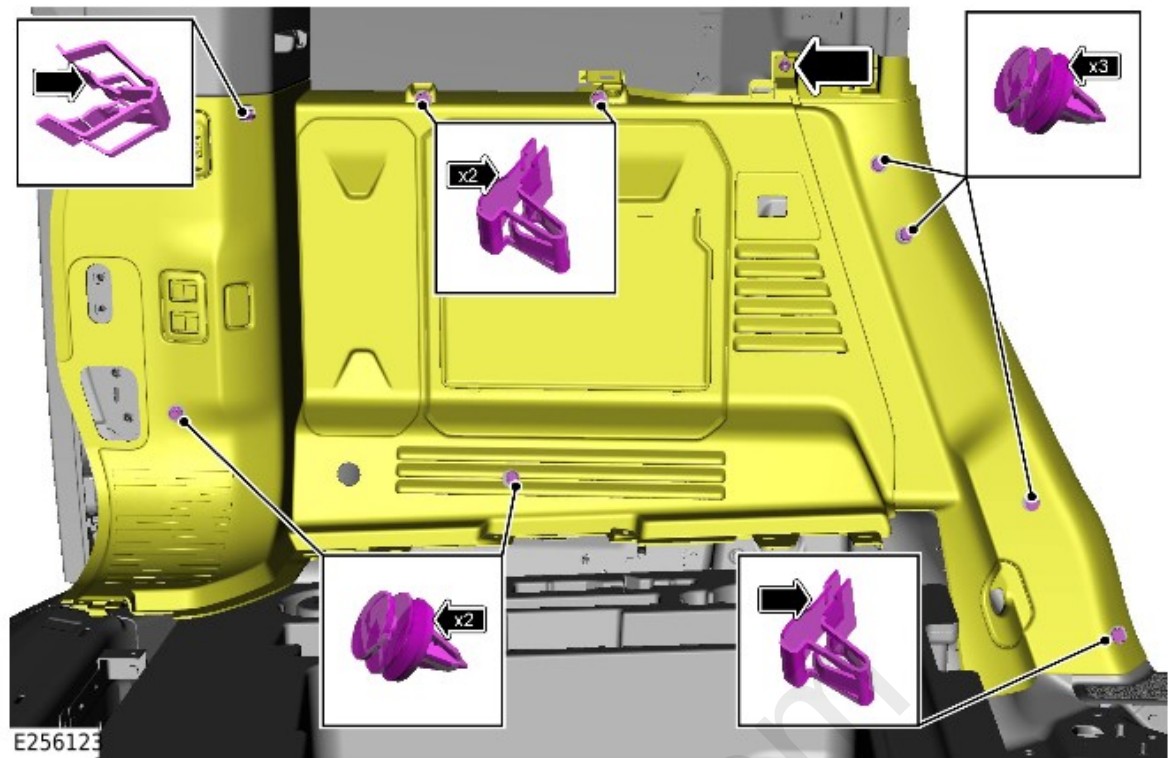

- Remove the nut.
- Release the 9 clips.
- Release the loadspace side trim panel.

11.

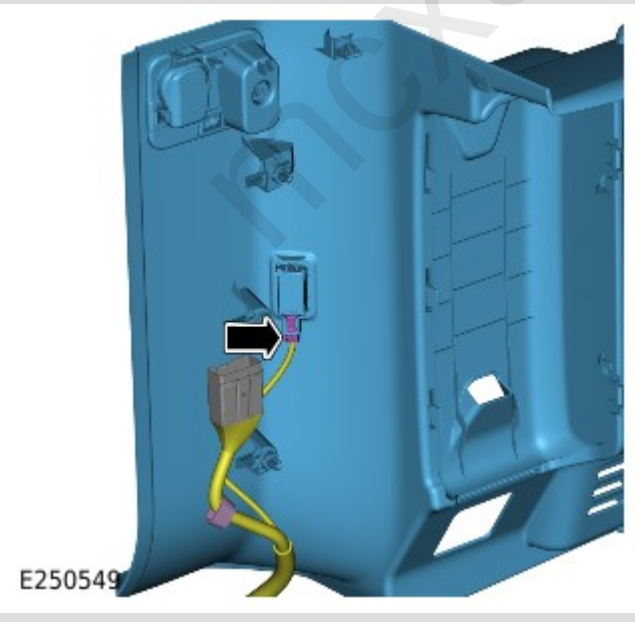

- Disconnect the loadspace electrical connector.
- Remove the loadspace side trim panel.

INSTALLATION

1.



NOTE:

Make sure that the trim is correctly installed to the clips.

- Connect the loadspace lamp electrical connector.
- Install the loadspace side trim panel.
- Install the 9 clips.
- Install and tighten the nut.

Torque: 4.1Nm

2.

- Install the tailgate latch guide.
- Install and tighten the 2 bolts.
Torque: 24Nm
- Install the tailgate latch guide trim.

3.

- Install the tailgate striker.
- Install and tighten the 2 bolts.

Torque: 24Nm

4.

Inspect the tailgate alignment and adjust if required.

Refer to: [Tailgate Striker Adjustment](#) (501-14 Handles, Locks, Latches and Entry Systems, General Procedures).

5.

Install the C-pillar upper trim panel.

Refer to: [C-Pillar Upper Trim Panel - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

6.

- Install and tighten the coat hanger bolt.

Torque: 4.1Nm


- Install the coat hanger.

7.

- Install the loadspace treadplate.
- Install the 4 clips.
- Install and tighten the 2 bolts.

Torque: 4.1Nm

8.

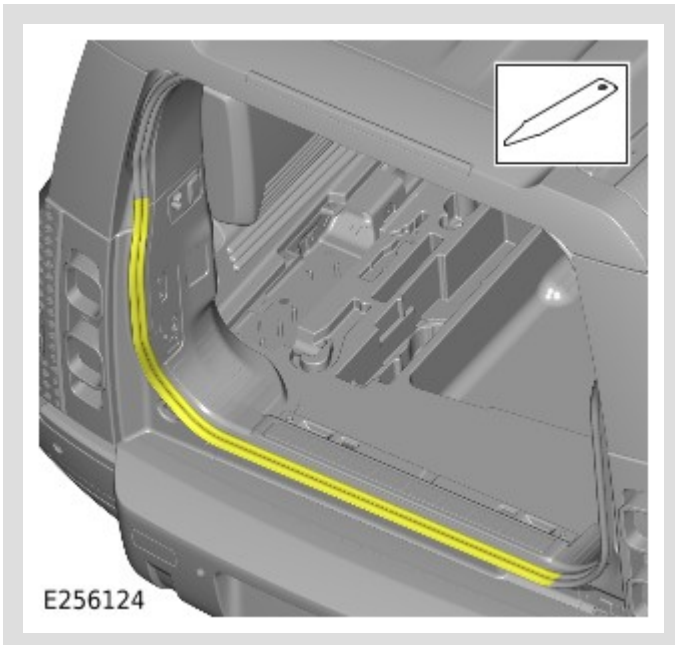

Reposition the tailgate aperture seal into the correct location.

9.

- Install the loadspace lower side trim.
- Install and tighten the 2 bolts.
Torque: 24Nm
- Install the 2 lower clips.

10.

Install the loadspace floor trim.

11.

Install the loadspace cover.