

PUBLISHED: 04-AUG-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

RIGHT LOADSPACE TRIM PANEL – 90 (G2632510)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

- 2.

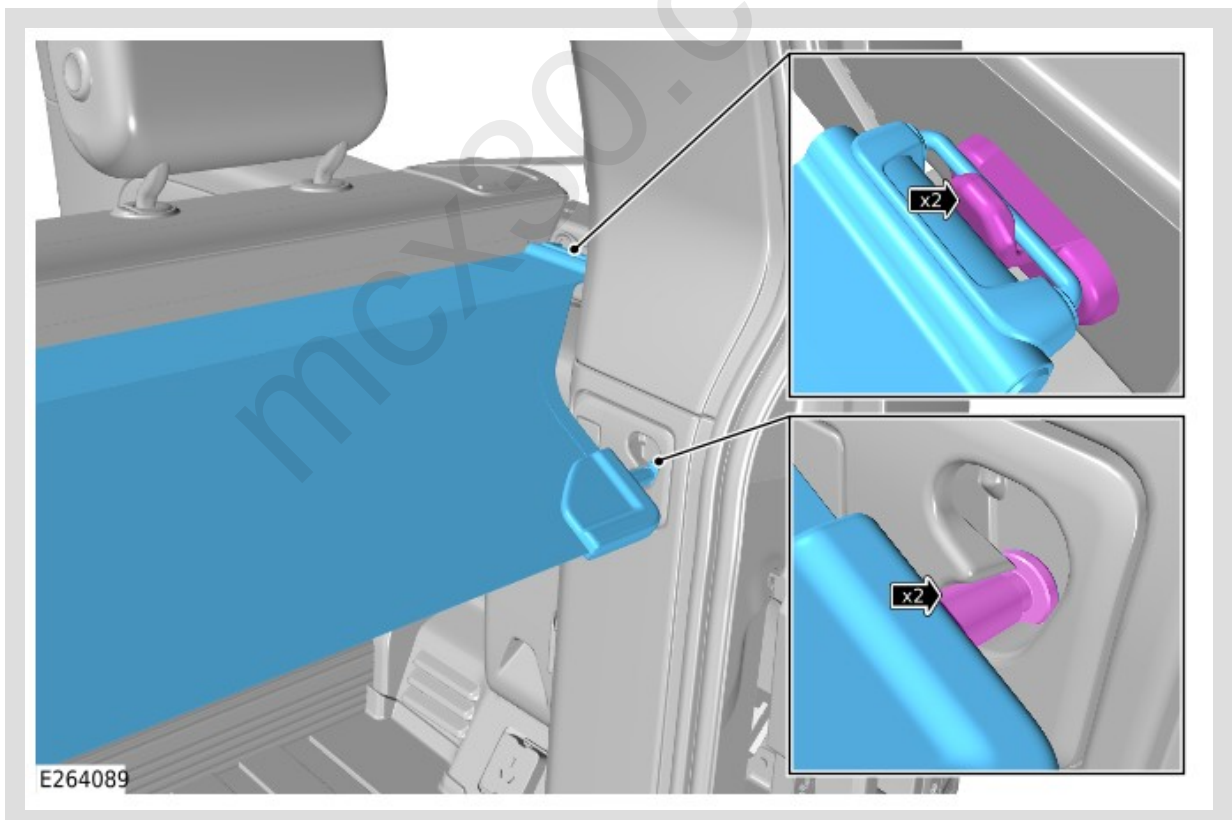


Remove the loadspace cover.

3.

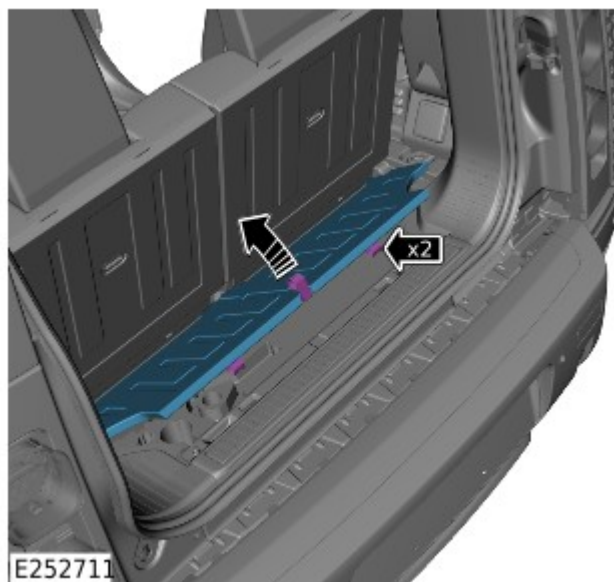


Remove the loadspace floor trim.

4.

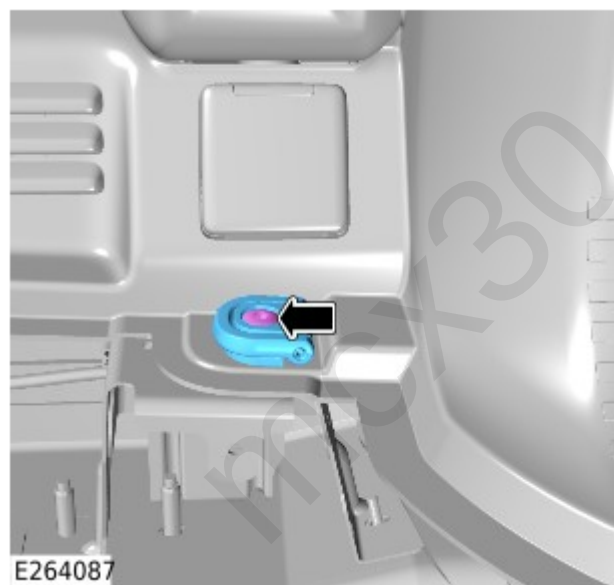


Remove the D-loop anchor point bolt.

5.

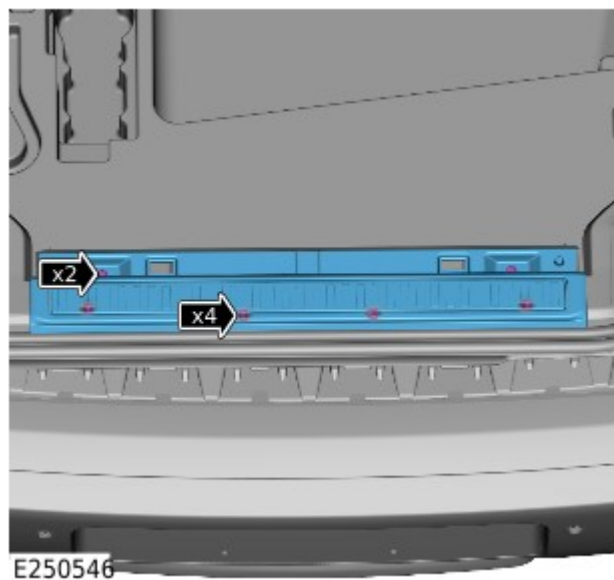

- Remove the 2 bolts.
- Release the 4 clips.
- Remove the loadspace treadplate.

6.

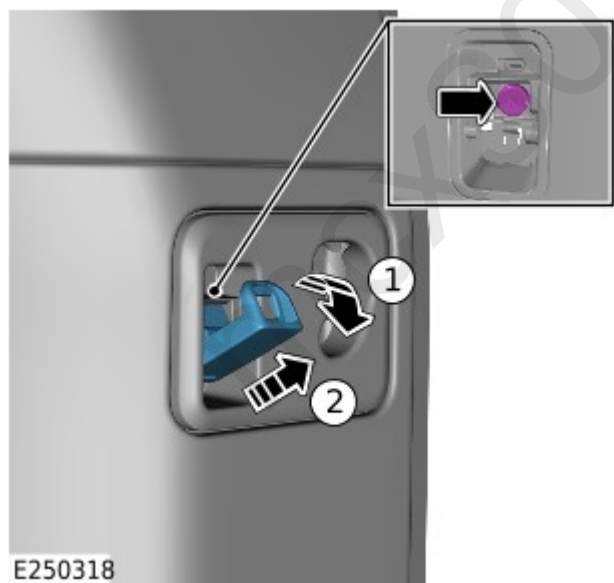

- Remove the coat hanger in the sequence shown.
- Remove the bolt.

7.




- Release the 2 clips.
- Remove the domestic voltage socket trim panel.

8.


Remove the rear quarter trim panel.

Refer to: [Rear Quarter Trim Panel - 90](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

9.

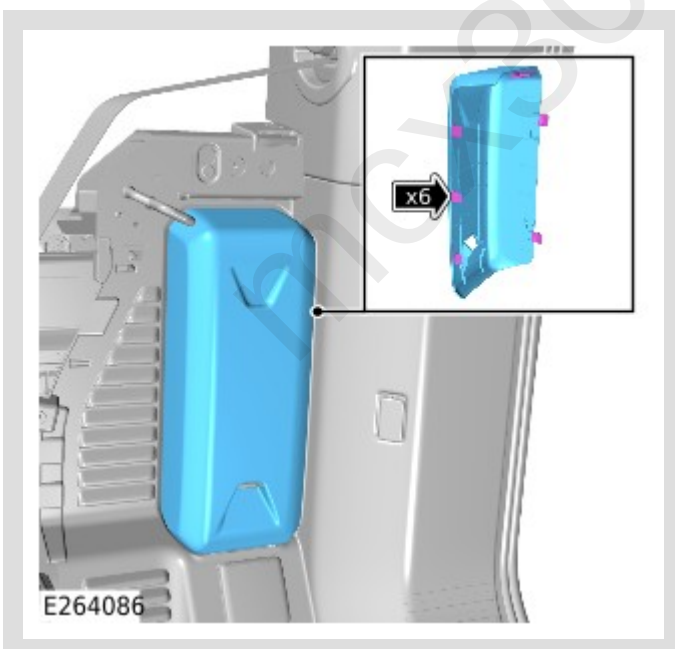

- Release the 6 clips.
- Remove the Rear Junction Box (RJB) access cover.

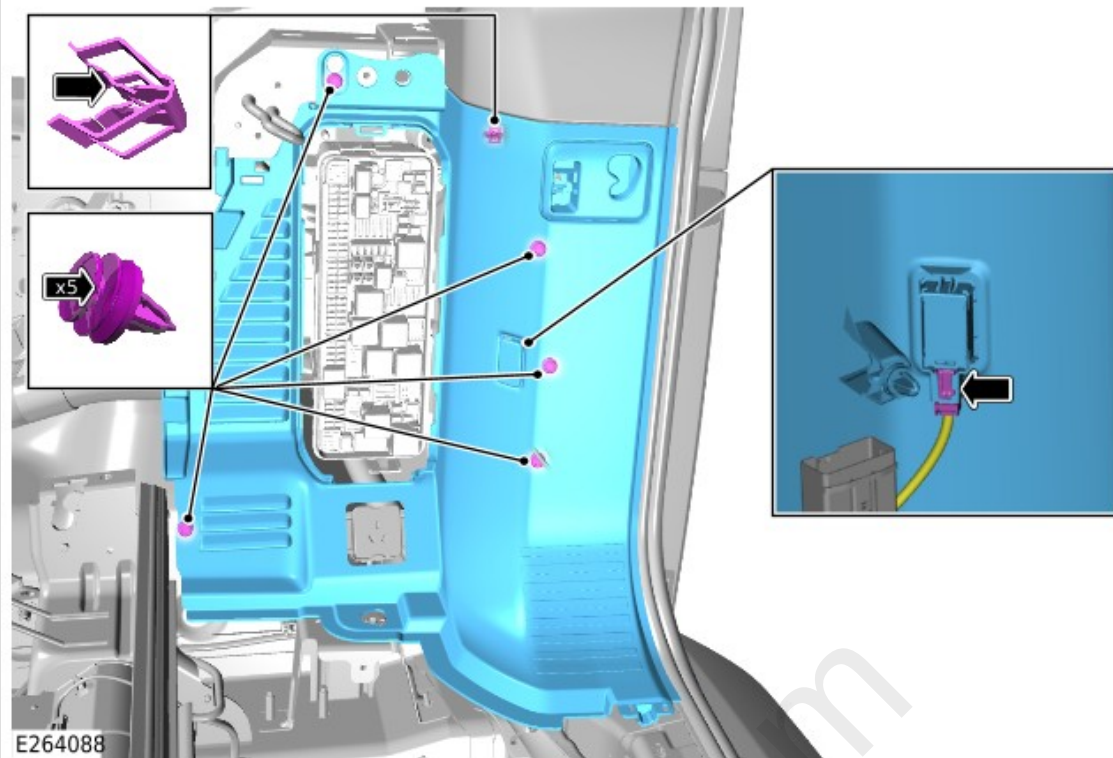

- Release the 6 clips.
- Disconnect the electrical connector.
- Remove the right loadspace trim panel.

INSTALLATION

1.



NOTE:

Make sure that the trim is correctly installed to the clips.

- Connect the electrical connector to the loadspace lamp.
- Install the right loadspace trim panel.
- Make sure the 6 clips are correctly installed.

2.

- Install the RJB access cover.
- Install the 6 clips.

3.

Install the rear quarter trim panel.

Refer to: [Rear Quarter Trim Panel - 90](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

- Install the coat hanger.
- Install and tighten the coat hanger
Torque: 4.1Nm


5.

- Install the domestic voltage socket trim panel.
- Install the 2 clips.

6.

- Install the loadspace treadplate.
- Install the 4 clips.
- Install and tighten the 2 bolts.
Torque: 4.1Nm

7.

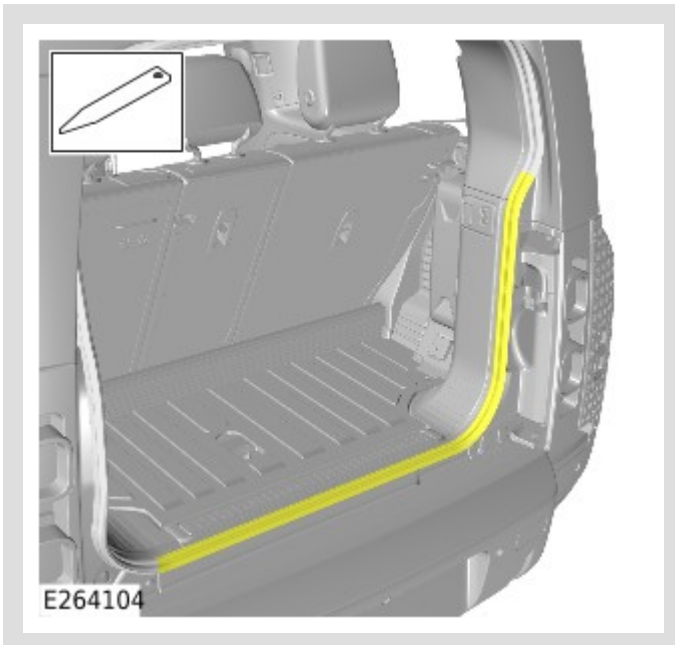

Use the suitable tool to reposition the tailgate aperture seal.

8. Install the D-loop anchor point.

Torque: 24Nm

9. Install the loadspace floor trim.

10. Install the loadspace cover.

11. Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).