

PUBLISHED: 08-NOV-2019
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

REAR DOOR TRIM PANEL (G2415431)

mcx30.com

REMOVAL

⚠ CAUTIONS:

- Use a suitable trim tool.
- Make sure to protect the paintwork.


⚠ NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains illustrations for left side components, right side components are similar.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

- 2.

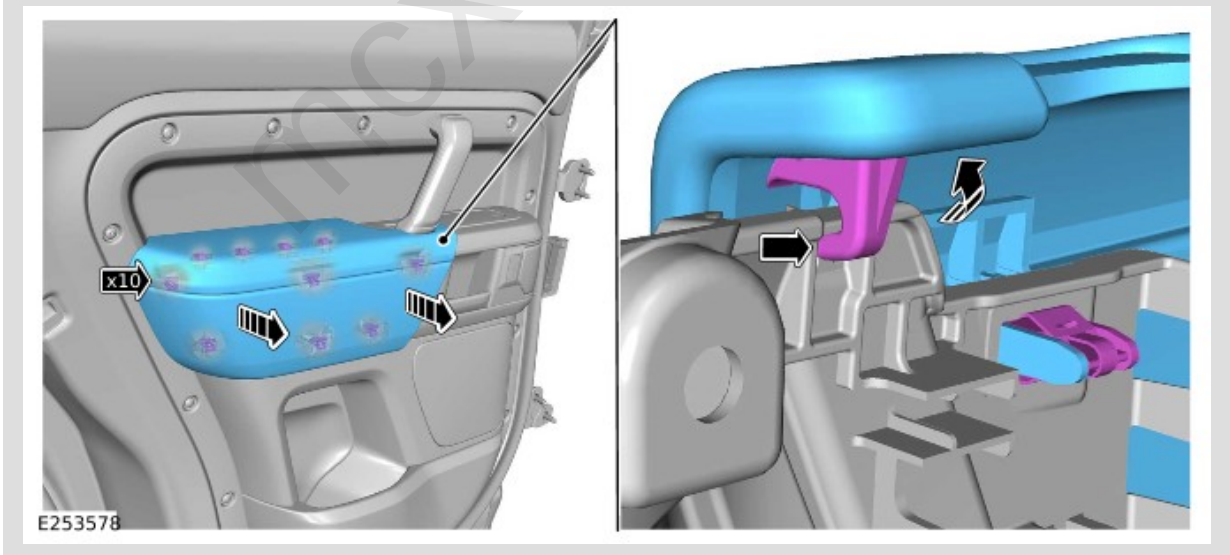


- Release the 11 clips.
- Remove the rear door armrest trim as illustrated.

3.

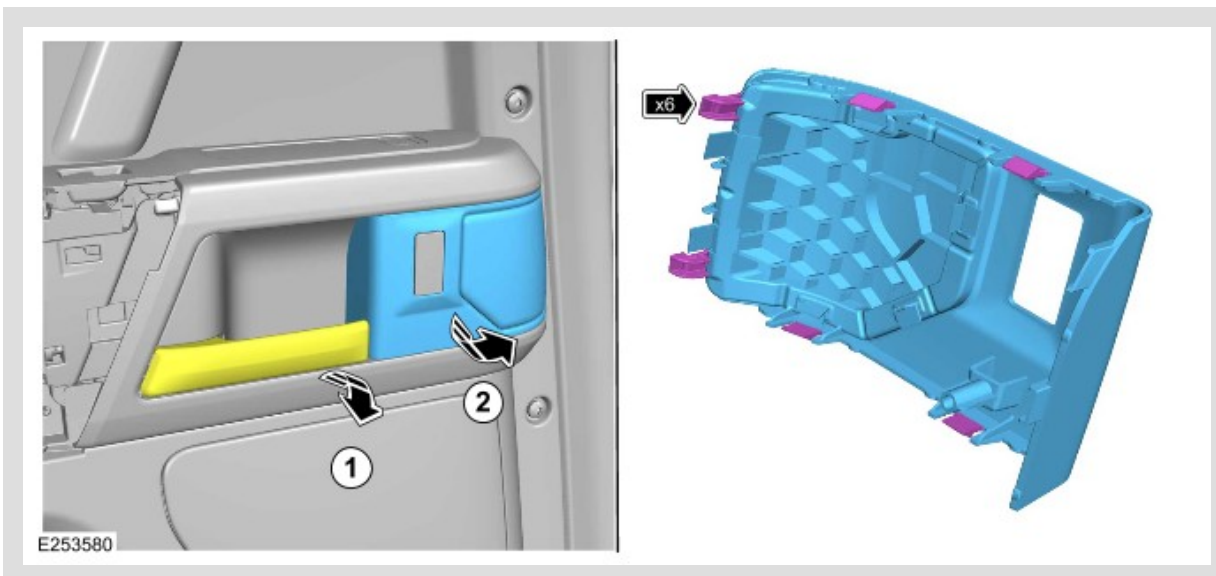


1. Open the rear door interior handle.
2. Remove the mid-range speaker trim.

4.

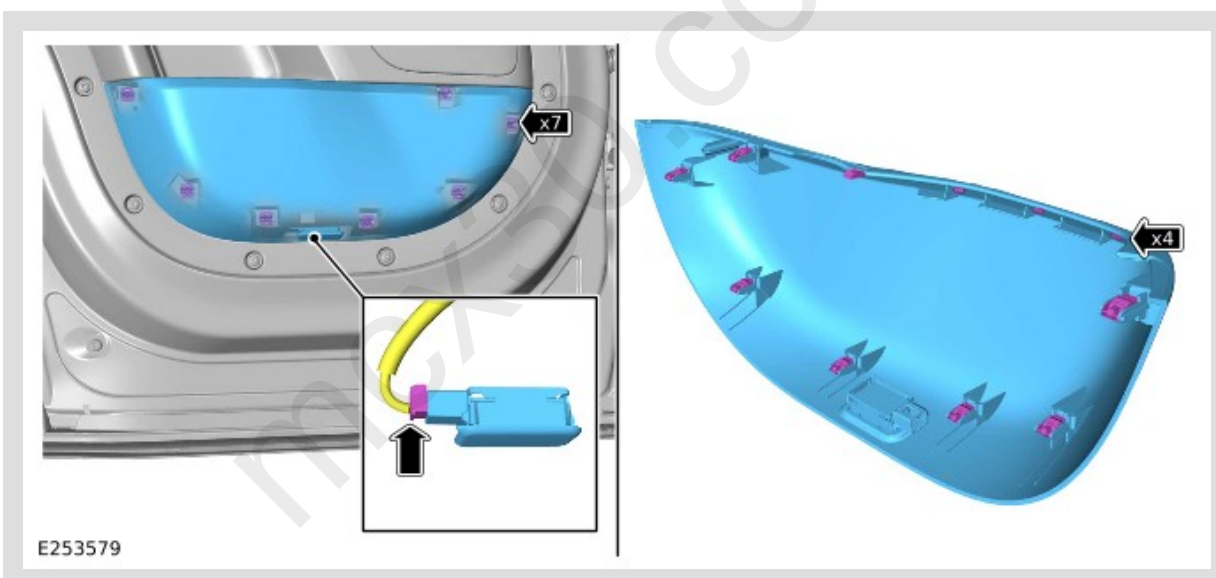


- Release the 11 clips.
- Disconnect the electrical connector from the rear door ambience lighting.
- Remove the rear door pocket trim.

5.

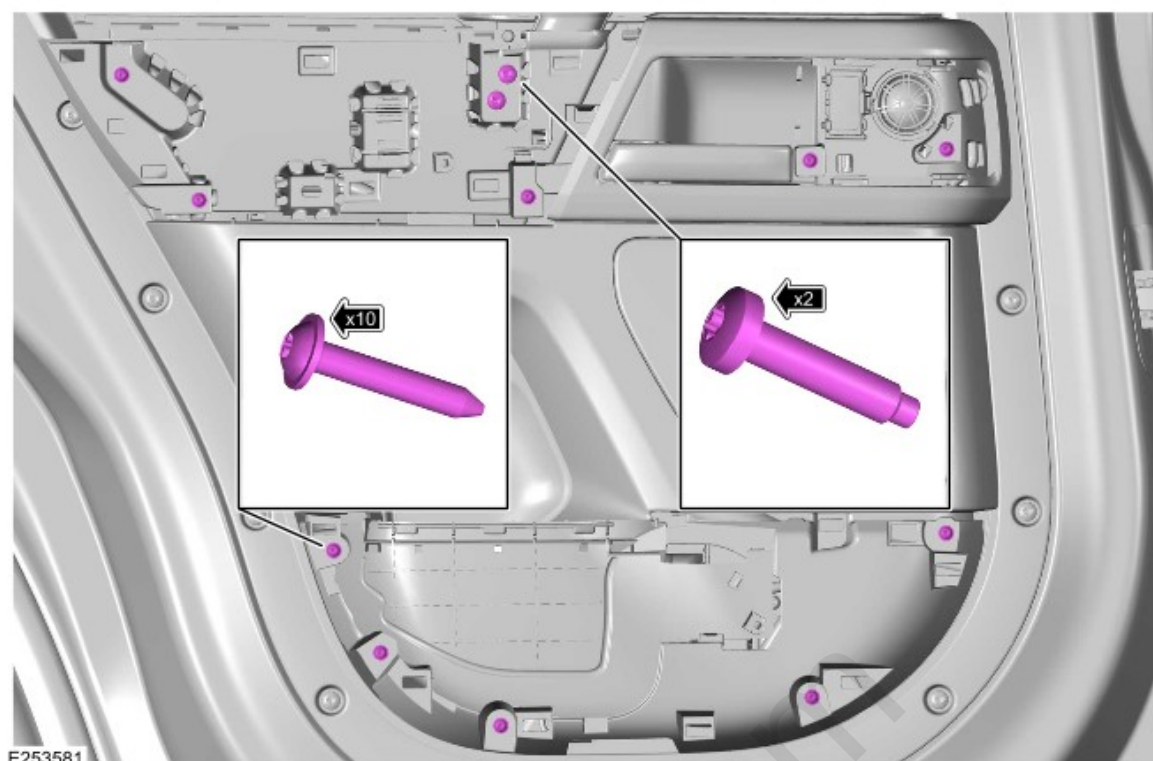


- Remove the 2 bolts.
- Remove the 10 screws.

6.

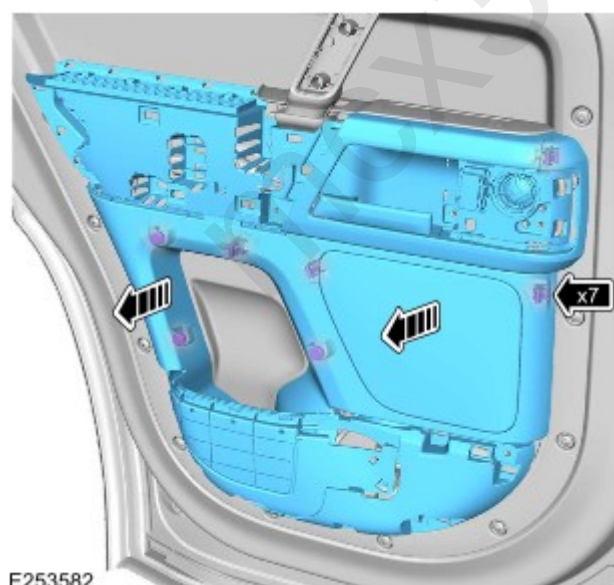


- Release the 7 clips.
- Remove the rear door trim panel.

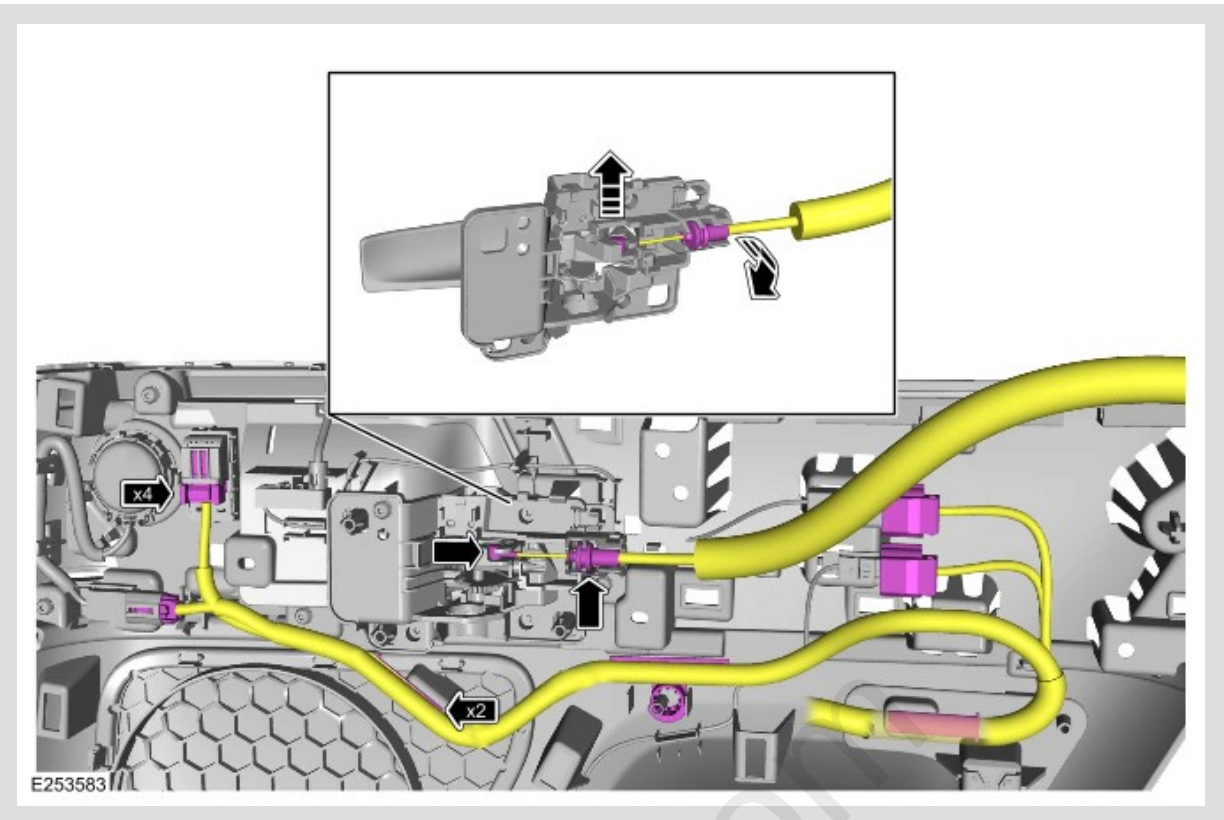

- Release and disconnect the rear door interior handle cable.
- Disconnect the electrical connector from the mid-range speaker.
- Disconnect the electrical connector from the rear door locking switch.
- Disconnect the 2 electrical connectors from the rear door ambience lighting wiring harness.
- Release the 3 wiring harness clips.


 NOTE:

Do not disassemble further if the component is removed for access only.

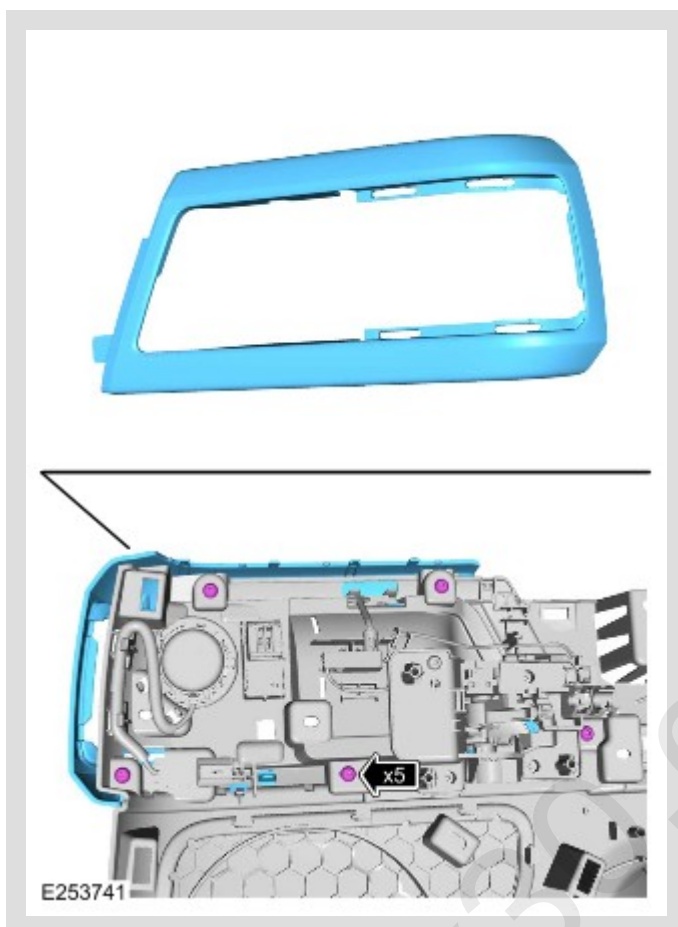


- Remove the 5 screws.
- Remove the rear door interior handle trim.

9.

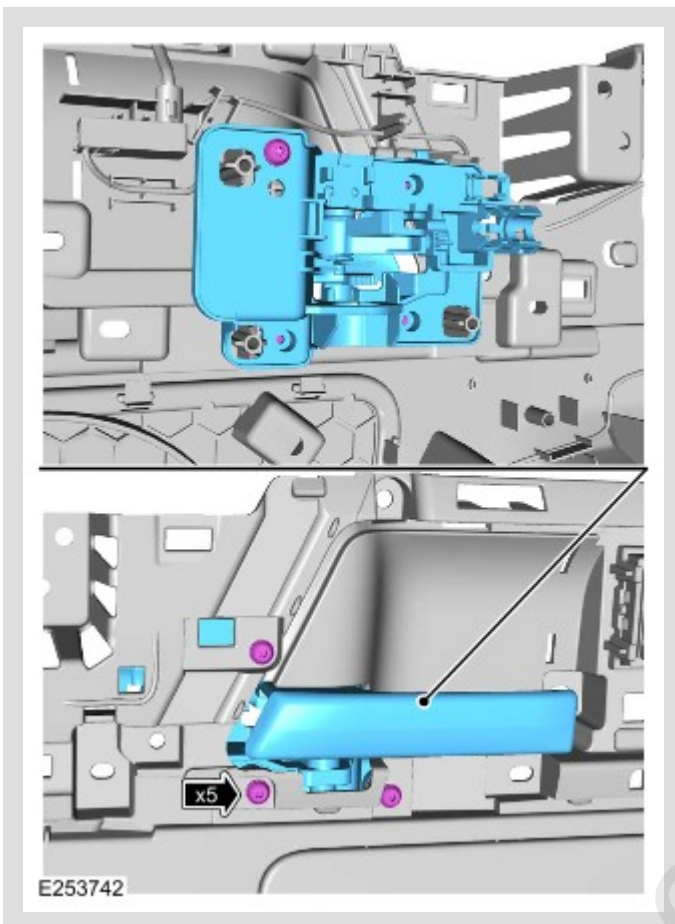


- Remove the 4 screws.
- Remove the rear door interior handle.

10.

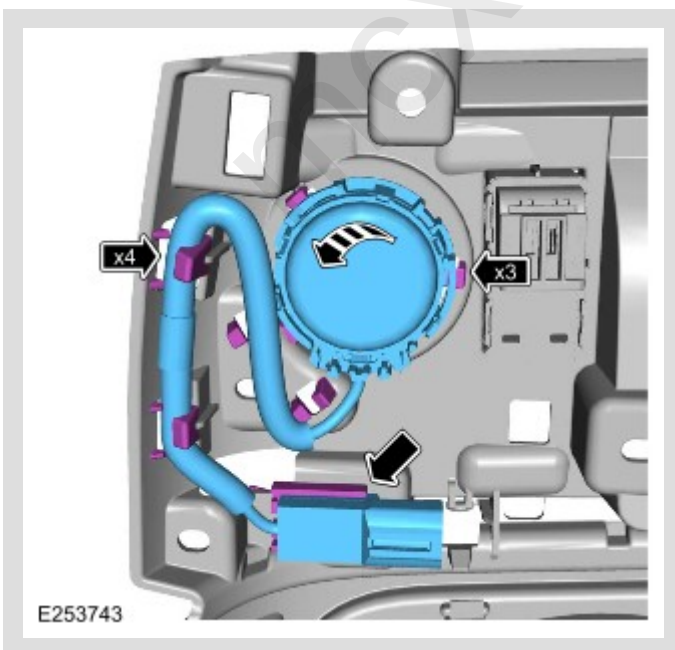



- Release the mid-range speaker electrical connector.
- Release the 4 wiring harness clips.
- Rotate and remove the mid-range speaker.

11.

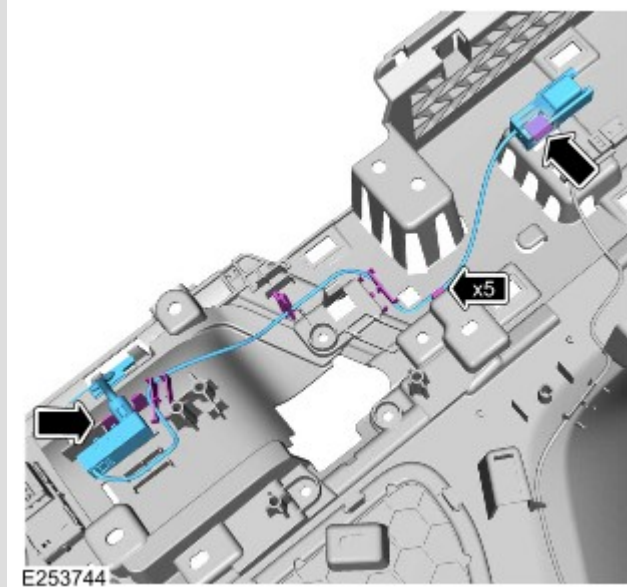


- Release the interior handle ambience lighting electrical connector.
- Release the 5 wiring harness clips.
- Remove the interior handle ambience lighting.

12.

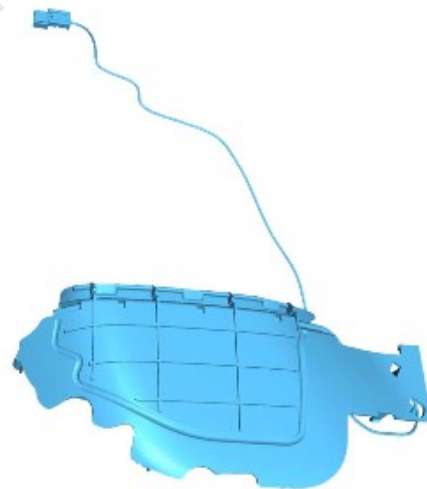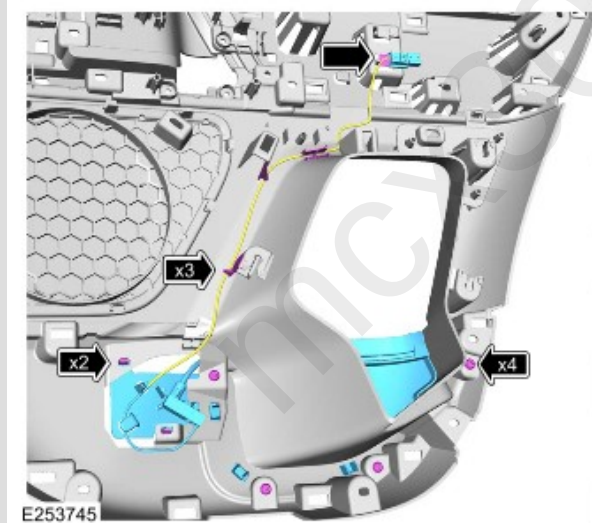

- Release the rear door pocket ambience lighting electrical connector.
- Remove the 4 screws.
- Release the 3 wiring harness clips.
- Release the 2 clips.
- Remove the rear door pocket.

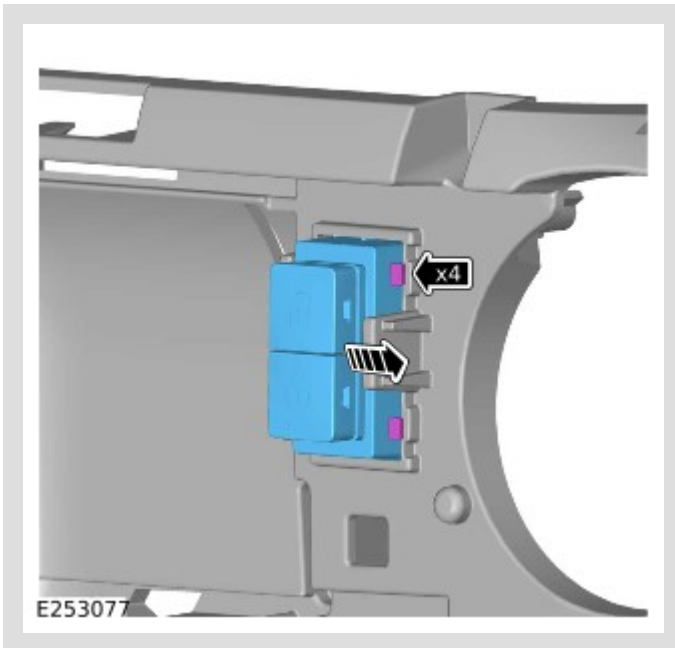

- Release the 4 clips.
- Remove the rear door locking switch.

INSTALLATION

1. Install the rear door locking switch.

- 2.
- Install the rear door pocket.
 - Install and tighten the 4 screws.
Torque: 1.5Nm
 - Secure the rear door pocket ambience lighting electrical connector and wiring harness.

- 3.
- Install the interior handle ambience lighting.
 - Secure the interior handle ambience lighting electrical connector and wiring harness.

- 4.
- Install the mid-range speaker.
 - Secure the mid-range speaker electrical connector and wiring harness.

- 5.
- Install the rear door interior handle.
 - Install and tighten the 4 screws.
Torque: 1.5Nm


- 6.
- Install the rear door interior handle trim.
 - Install and tighten the 5 screws.
Torque: 1.5Nm

7. Inspect the rear door trim panel clips if damaged replace them.

- 8.
- Install the 3 wiring harness clips.
 - Connect the electrical connector to the mid-range speaker.
 - Connect the electrical connector to the rear door locking switch.
 - Connect the 2 electrical connectors to the rear door ambience lighting wiring harness.
 - Install and secure the rear door interior handle cable.

- 9.
- Install the rear door trim panel.
 - Secure the 7 clips.

10.

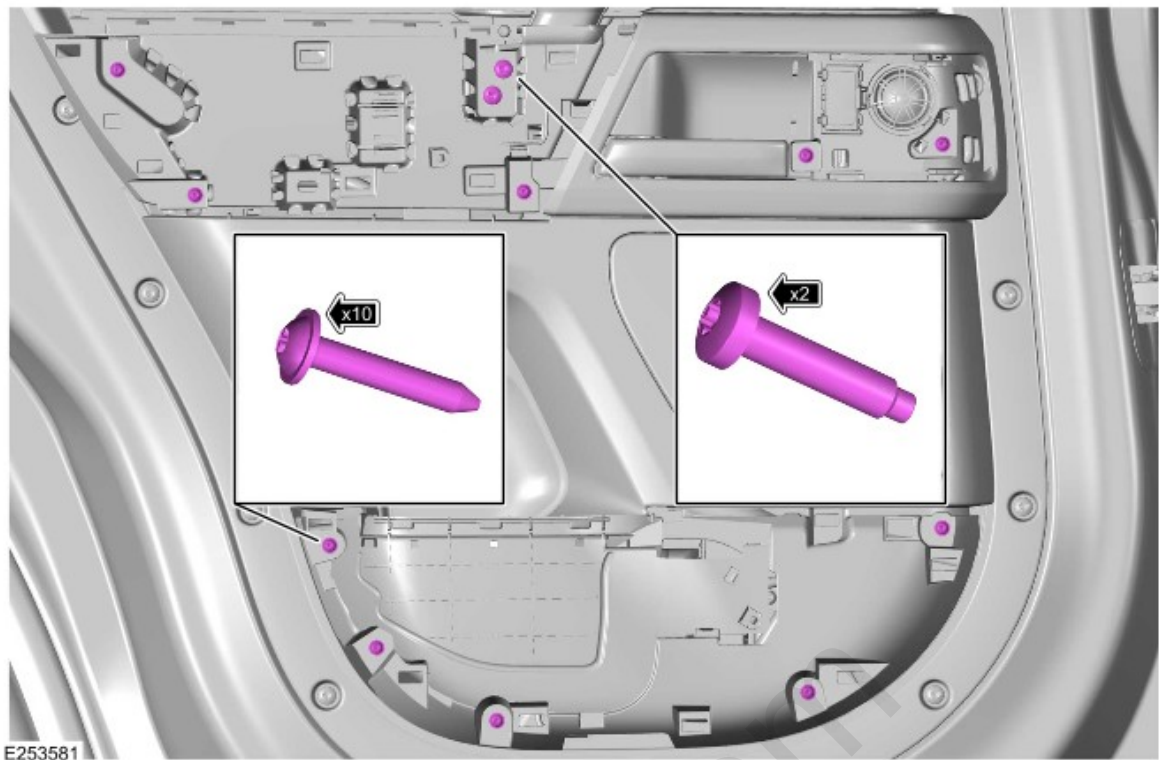

- Install and tighten the 2 bolts.
Torque: 5Nm
- Install and tighten the 10 screws.
Torque: 1.5Nm

11.

- Connect the electrical connector to the rear door ambience lighting.
- Install the rear door pocket trim.

12.

1. Open the rear door interior handle.
2. Install the mid-range speaker trim.

13.

Install the rear door armrest trim.

14.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).