

PUBLISHED: 20-APR-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

REAR TREADPLATE (G2408458)

mcx30.com

REMOVAL

 NOTE:

- This procedure contains illustrations for the left side components, right side components are similar.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Remove the loadspace trim panel.

Refer to: [Left Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Right Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. Remove the B-pillar lower trim panel.

Refer to: [B-Pillar Lower Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


3. Remove the front treadplate.

Refer to: [Front Treadplate](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

CAUTION:

Use a suitable trim tool.

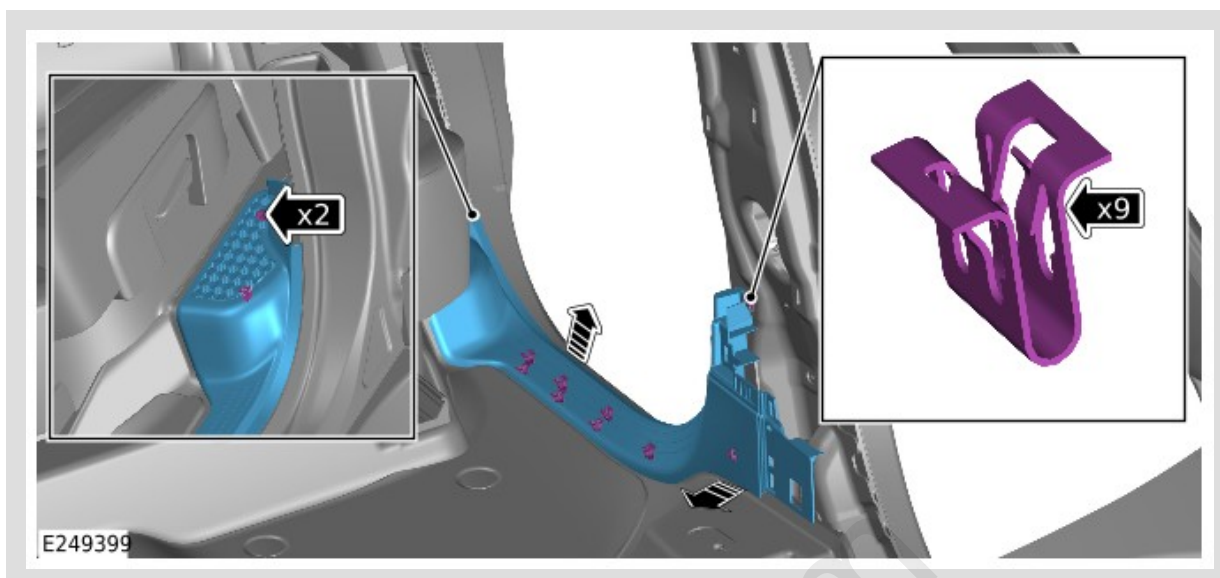

- Release the 11 clips.
- Remove the rear treadplate.

INSTALLATION

1.

- Install the 11 clips.
- Install the rear treadplate.

2.

Install the front treadplate.

Refer to: [Front Treadplate](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3.

Install the B-pillar lower trim panel.

Refer to: [B-Pillar Lower Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

Install the loadspace trim panel.

Refer to: [Left Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Right Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

cmjjaGFyZG1vbnRvbjsyMDIwLTASLTE4VDEyOjA1OjU1LjY0M1o7OTluNDAuMTg5LjUwOw==

mcx30.com