

PUBLISHED: 19-NOV-2019
2020.0 DEFENDER (LE), 501-10

SEATING

FRONT ROW SEAT – VEHICLES WITH: POWER SEATS (G2401271)

mcx30.com

REMOVAL


⚠ WARNINGS:

- To avoid accidental deployment, the Restraints Control Module (RCM) backup power supply must be depleted. Wait at least 1 minute after disconnecting the startup battery ground cable(s) before doing any repair or adjustment to the Supplementary Restraint System (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.
- Do not probe the Supplementary Restraint System (SRS) electrical connectors.

△ NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

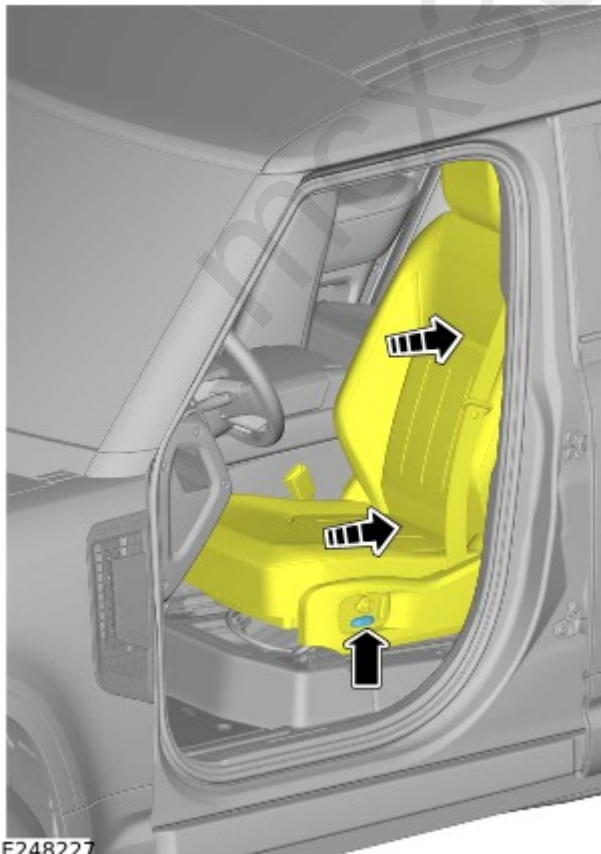


Position the front row seat backward.

2.




Remove the 2 front row seat track bolts.

3.

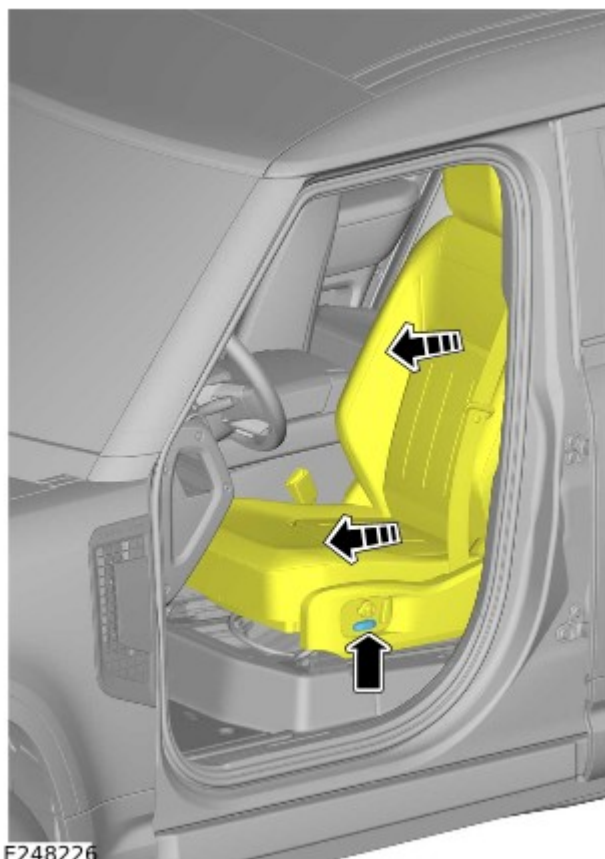

Position the front row seat forward.

4.

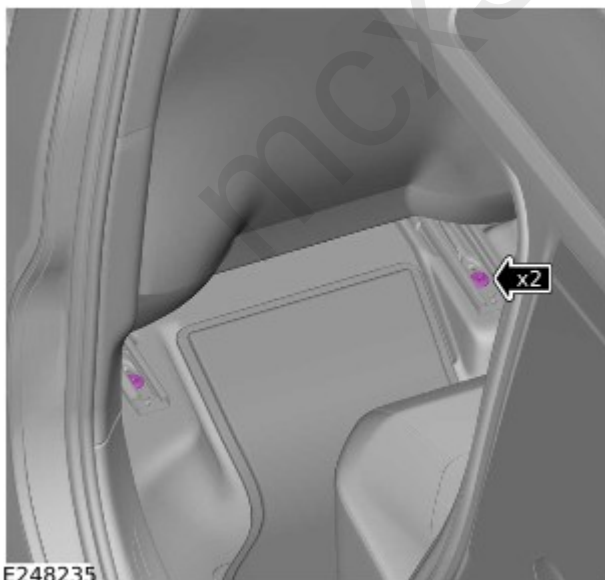


Remove the 2 front row seat track bolts.

5.


ⓘ CAUTION:

Take care not to damage the front row seat side trim during removal. Examine illustration before removal.

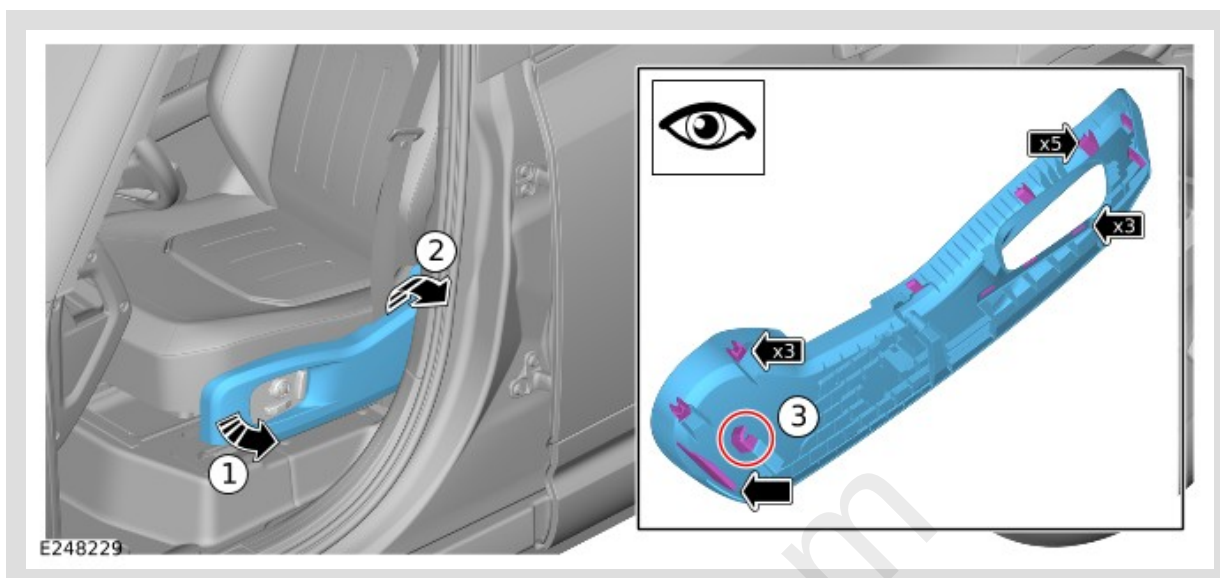

1. Release the front row seat side trim front section.
2. Release the front row seat side trim rear section.
3. Release the highlighted clip and remove the front row seat side trim.

6.

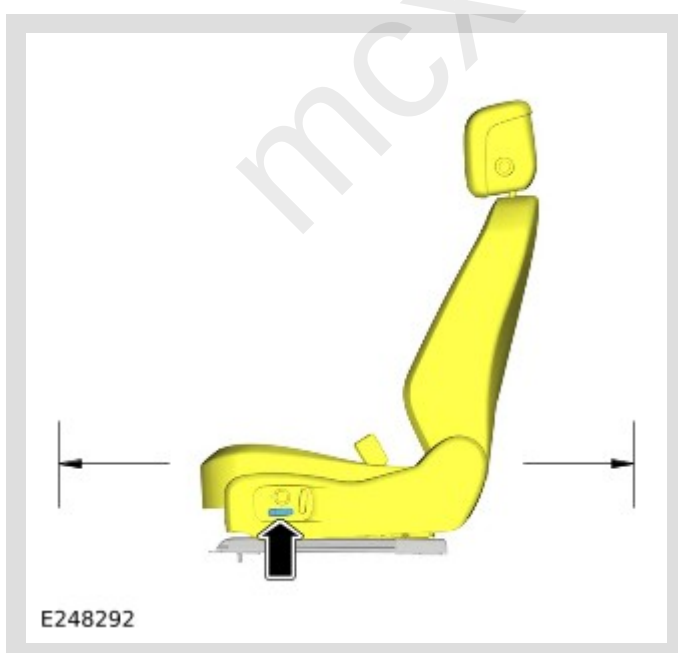

Reposition the front row seat to the center position.

7. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).


8. Make the Supplementary Restraint System (SRS) safe.

Refer to: [Supplementary Restraint System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).


9.

 NOTE:

If equipped.

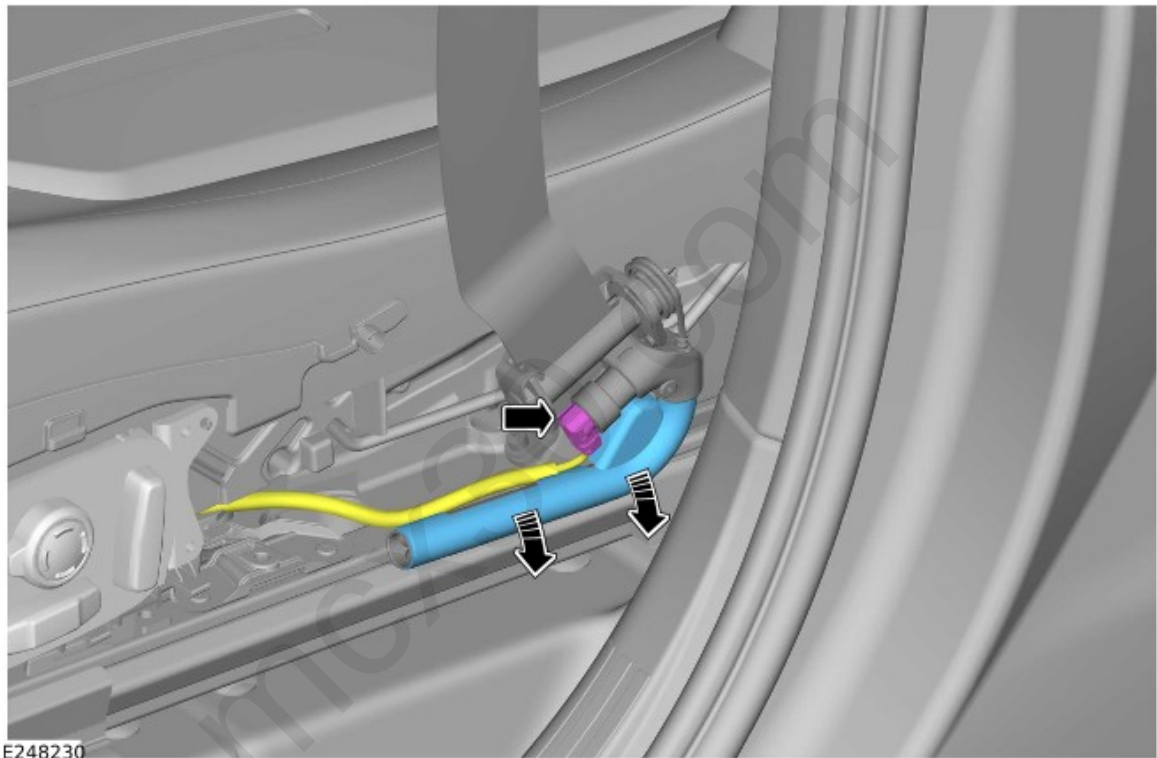


- Disconnect the front row seatbelt pretensioner electrical connector.
- Remove the front row seatbelt pretensioner bolt access cover.

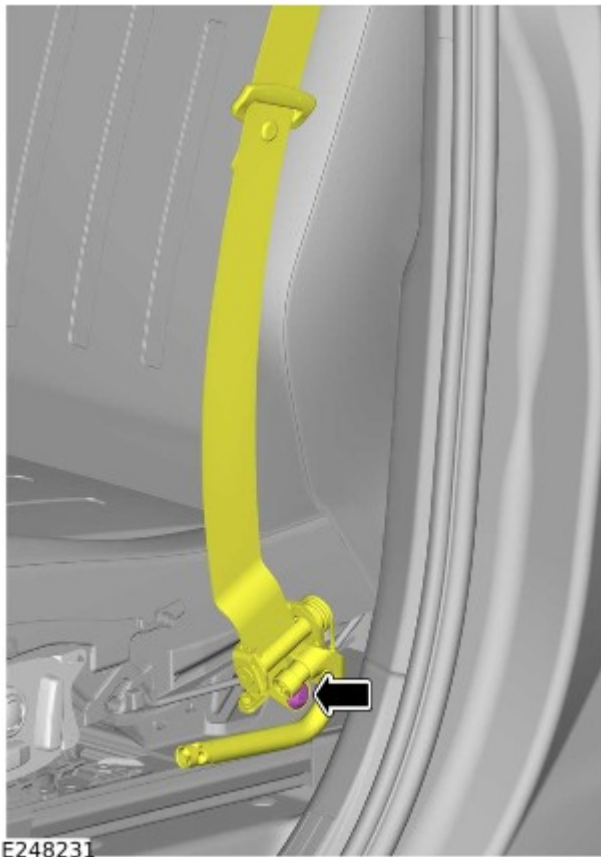

- Remove the front row seatbelt pretensioner bolt.
- Release the front row seatbelt pretensioner assembly.


11.

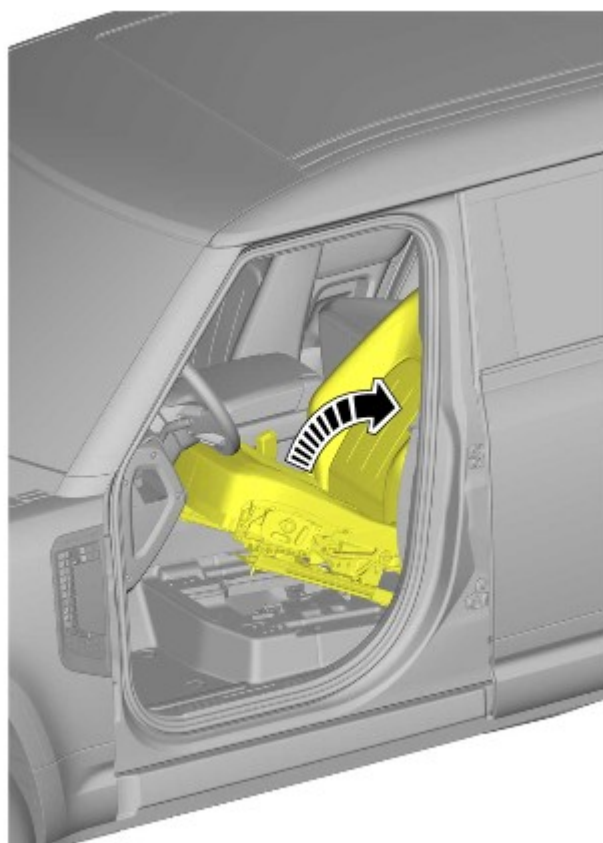

E248232

Carefully tip the front row seat.

12.

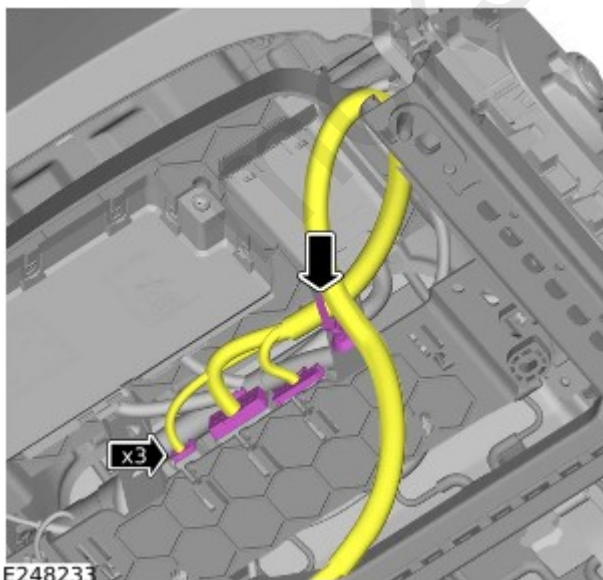


E248233

- Disconnect the 3 electrical connectors.
- Release the wiring harness clip.

ⓘ CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

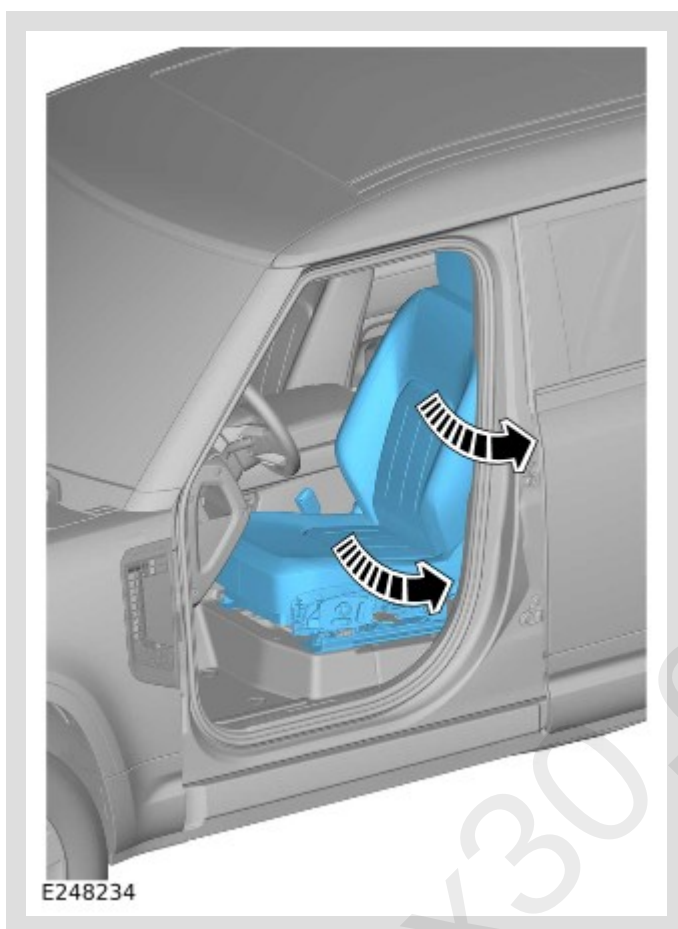

Remove the front row seat.

INSTALLATION

1.



CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

Install the front row seat.

2.

Carefully tip the front row seat.

3.

- Connect the 3 electrical connectors.
- Install the wiring harness clip.

4.

Carefully tip the front row seat.

5.



NOTE:

If equipped.

- Install the front row seatbelt pretensioner assembly.
- Install and tighten the bolt.
Torque: 40Nm
- Install the seatbelt pretensioner bolt access cover.
- Connect the seatbelt pretensioner electrical connector.

6.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

7.

Position the front row seat forward.

8.

- Install and tighten the 2 rear seat track bolts.
Torque: 48Nm

9.

Position the front row seat backward.

10.

- Install and tighten the 2 front seat track bolts.

Torque: 48Nm

11.

Reposition the front row seat to the center position.

12.

 CAUTION:

Make sure all the clips are correctly installed.

Install the front row seat side trim.

cmIjaGFyZG1vbnRvbjsyMDIwLTA5LTE4VDEyOjIwOjExLjg3Mio7OTIuNDAuMTg5LjUwOw==

mcx30.com