

PUBLISHED: 16-APR-2020
2020.0 DEFENDER (LE), 501-10

SEATING

FRONT ROW SEAT HEIGHT MOTOR (G2415417)

mcx30.com

REMOVAL

 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).


2. Remove the front row seat cushion blower.

Refer to: [Front Row Seat Cushion Blower](#) (501-10 Seating, Removal and Installation).

3. Remove the front row seat cushion cover.

Refer to: [Front Row Seat Cushion Cover](#) (501-10 Seating, Removal and Installation).

- 4.

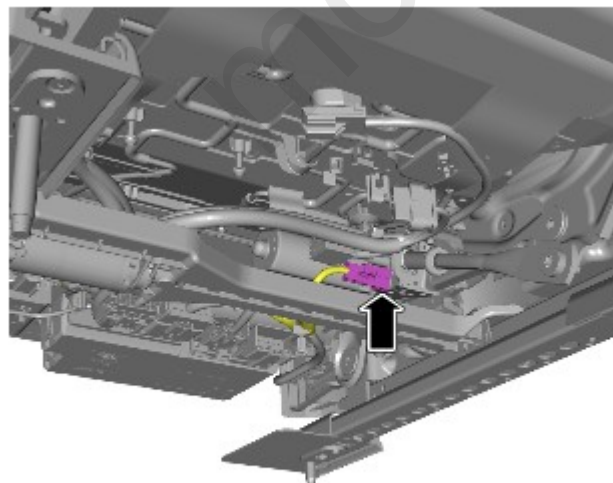

E252293


Disconnect the electrical connector.

5.




- Remove the 2 bolts.
- Release the clip.

6.

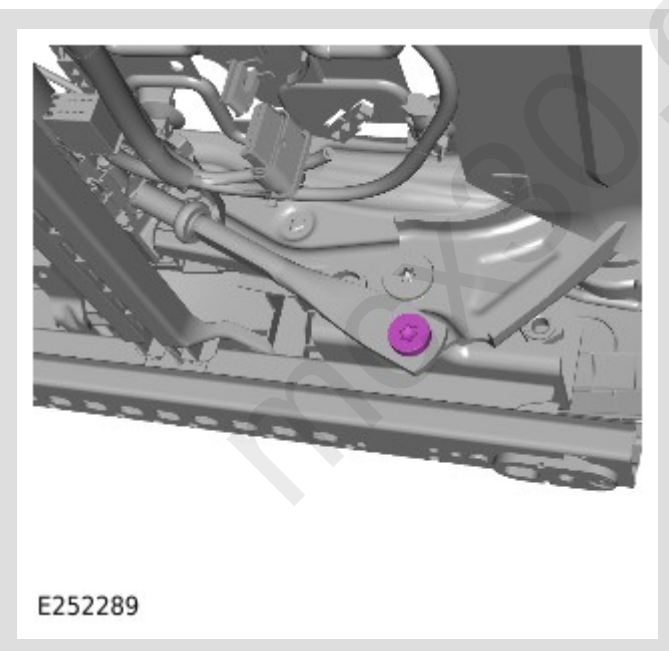


Remove the height motor bolt.

7.

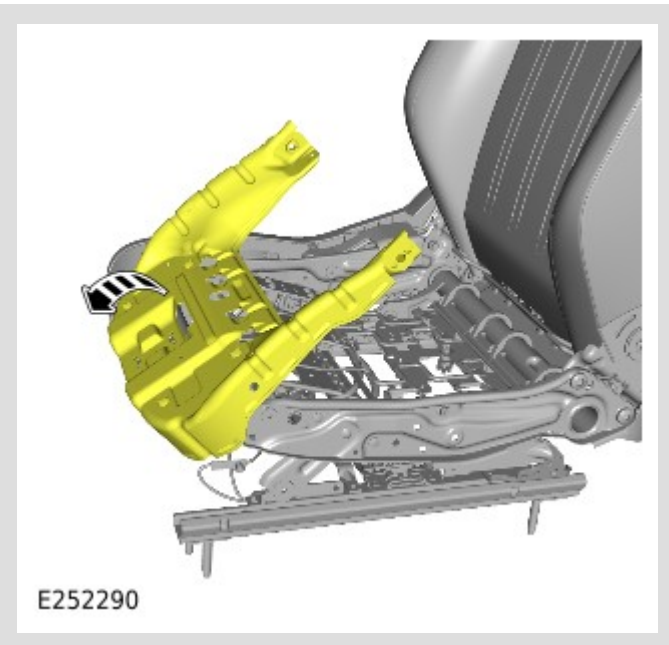

Reposition the front row seat base.

8.

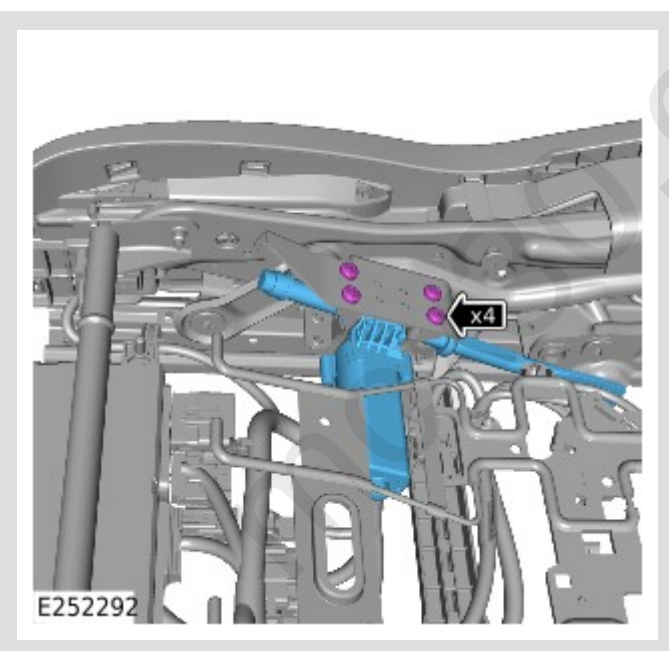

- Remove the 4 bolts.
- Remove the front row seat height motor.

INSTALLATION

1.

- Install the front row seat height motor.
- Install and tighten the 4 bolts.

Torque: 28Nm

2.

Install the front row seat base.

3.



NOTE:

Repeat the step for the other side.

Install and tighten the seat base bolt.

Torque: 8Nm

4.

Install the wiring harness clip.

5.

Install and tighten the height motor bolt.

Torque: 28Nm

6.

Connect the electrical connector to the front row seat height motor.

7.

Install the front row seat cushion cover.

Refer to: [Front Row Seat Cushion Cover](#) (501-10 Seating, Removal and Installation).

8.

Install the front row seat cushion blower.

Refer to: [Front Row Seat Cushion Blower](#) (501-10 Seating, Removal and Installation).

9.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).