

PUBLISHED: 23-JAN-2020
2020.0 DEFENDER (LE), 501-10

SEATING

THIRD ROW SEAT CUSHION COVER (G2344852)

mcx30.com

REMOVAL AND INSTALLATION

GENERAL EQUIPMENT

EQUIPMENT NAME
Hog ring pliers

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 2	Hog rings	7

REMOVAL


NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Remove the third row seat.


Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).

2.

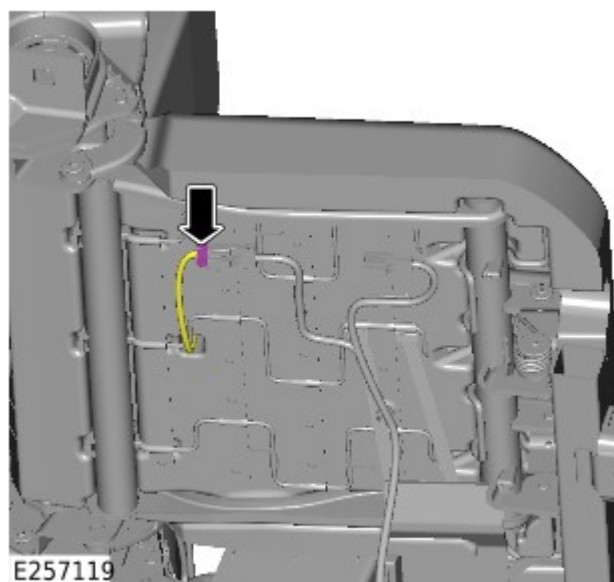


Disconnect the seat cushion heater element electrical connector.

3.

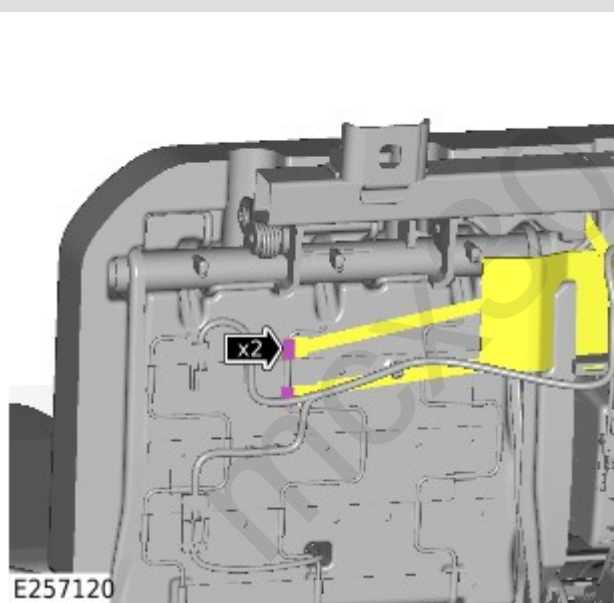

Release the 2 seat base clips.

4.

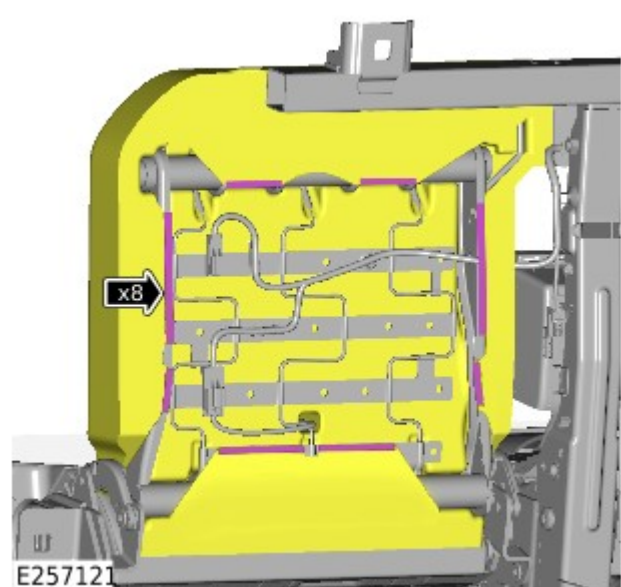


Release the 8 seat cushion cover clips.

5.

NOTE:

Do not disassemble further if component if removed for access only.

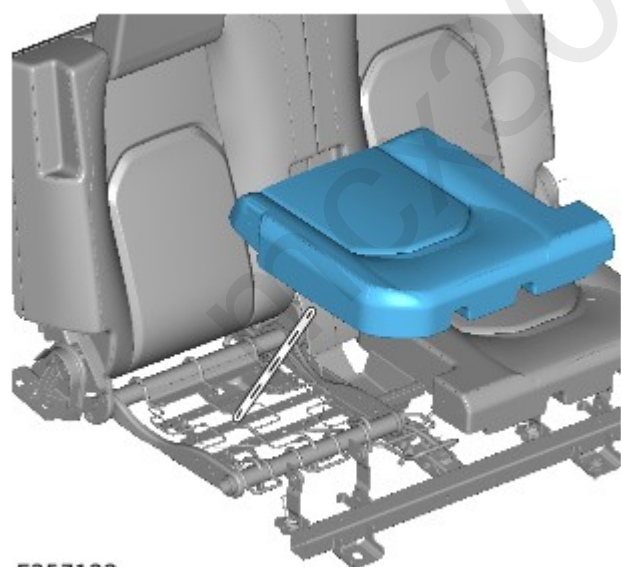


Remove the third row seat cushion cover assembly.

6.



Use a suitable tool to remove and discard the 7 hog rings.

7.

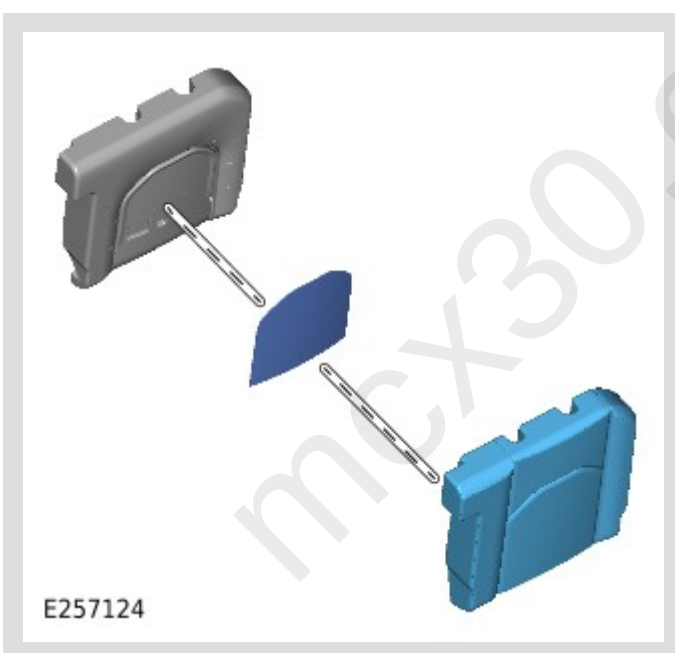

Remove the third row seat cushion cover.

INSTALLATION

1.

NOTE:

Steps 1 to 3 are only required if the components were previously removed.

Install the third row seat cushion cover.


2.

CAUTION:

Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed as illustrated.

NOTE:


Make sure that new hog rings are installed.

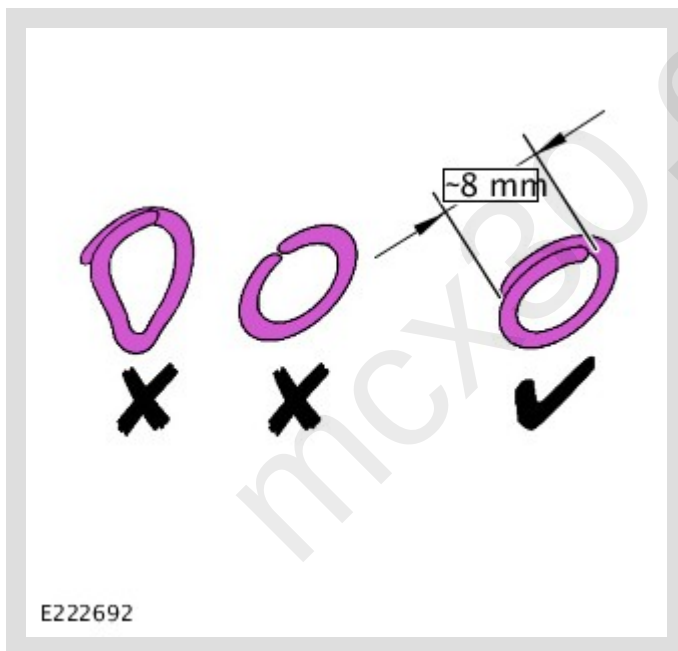

General Equipment: [Hog ring pliers](#)

Renew Part: [Hog rings](#) Quantity: 7.

3.

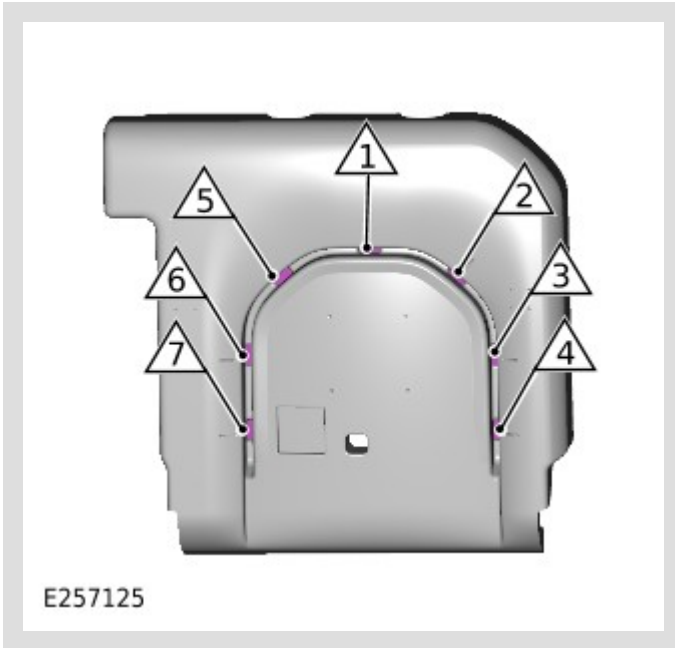

Install the 7 new hog rings in the sequence shown.

4. Install the third row seat cushion cover assembly.

5. Install the 8 seat cushion cover clips.

6. Install the 2 seat base clips.

7. Connect the seat cushion heater element electrical connector.

8. Install the third row seat.

Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).