

PUBLISHED: 19-JAN-2020
2020.0 DEFENDER (LE), 501-10

SEATING

SECOND ROW RIGHT SEAT - 110 (G2404756)

mcx30.com

REMOVAL

**WARNINGS:**

- To avoid accidental deployment, the Restraints Control Module (RCM) backup power supply must be depleted. Wait at least 2 minutes after disconnecting the startup battery ground cable(s) before doing any repair or adjustment to the Supplementary Restraint System (SRS), or any component(s) adjacent to the SRS sensors. Failure to follow these instructions may result in personal injury.
- Do not probe the Supplementary Restraint System (SRS) electrical connectors.

**NOTES:**

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2.

Make the Supplementary Restraint System (SRS) safe.


Refer to: [Supplementary Restraint System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.

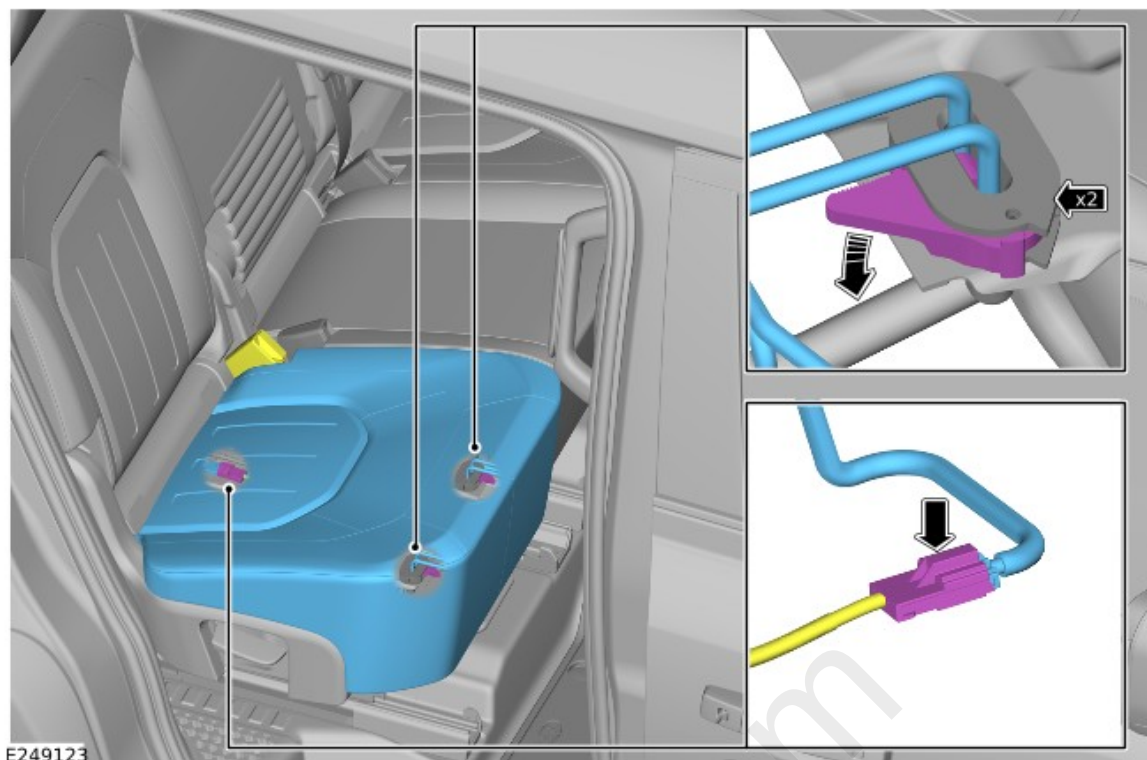


- Release the 2 fasteners.
- Release the second row seat cushion.
- Disconnect the seat cushion heating element electrical connector.
- Remove the second row seat cushion.

4.

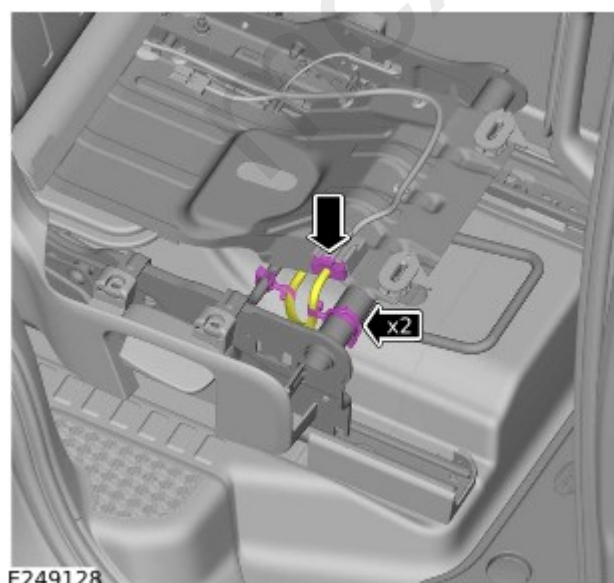


- Disconnect the seat wiring harness electrical connector.
- Release the 2 clips.

5.

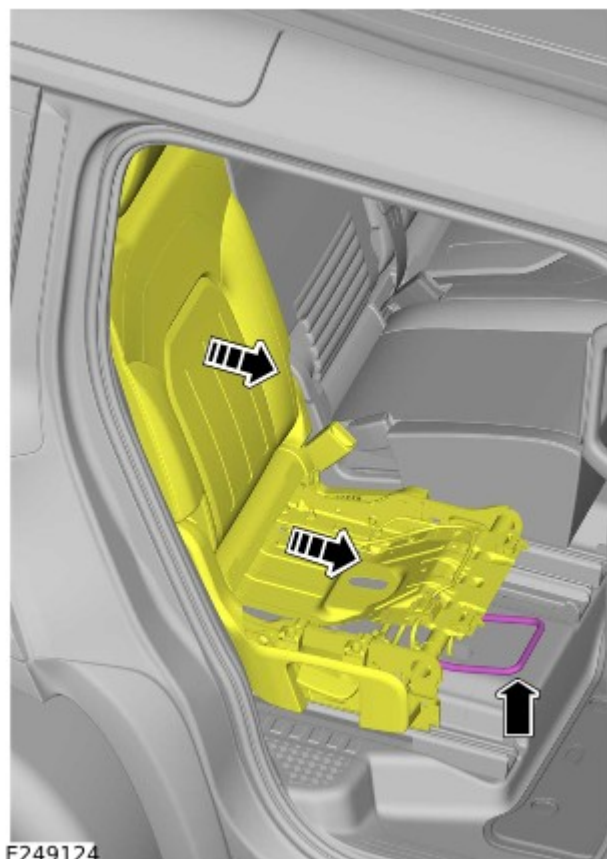


Position the second row seat backward.

6.

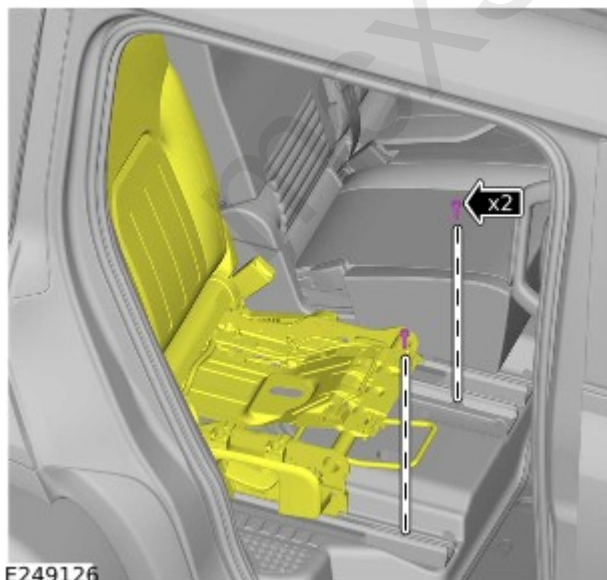


Remove the 2 front seat track bolts.

7.

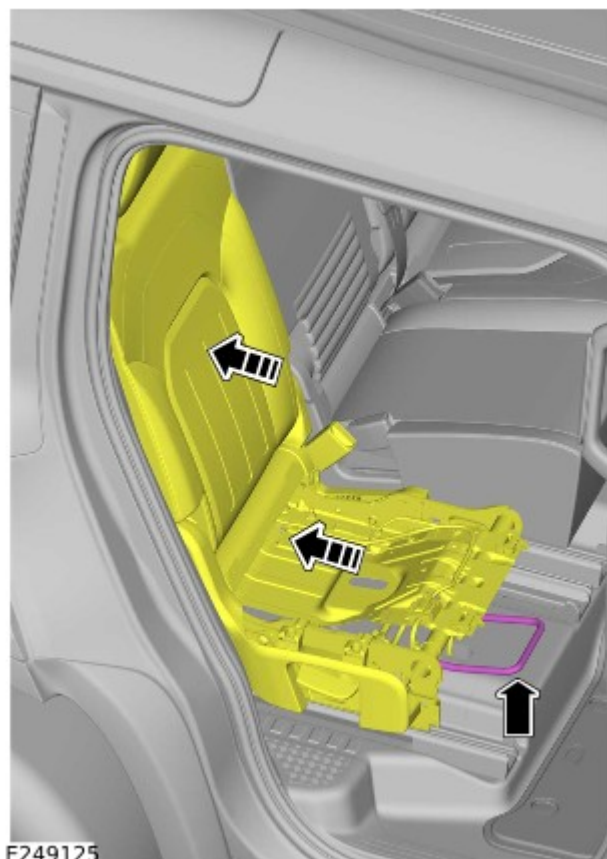

Position the second row seat forward.

8.

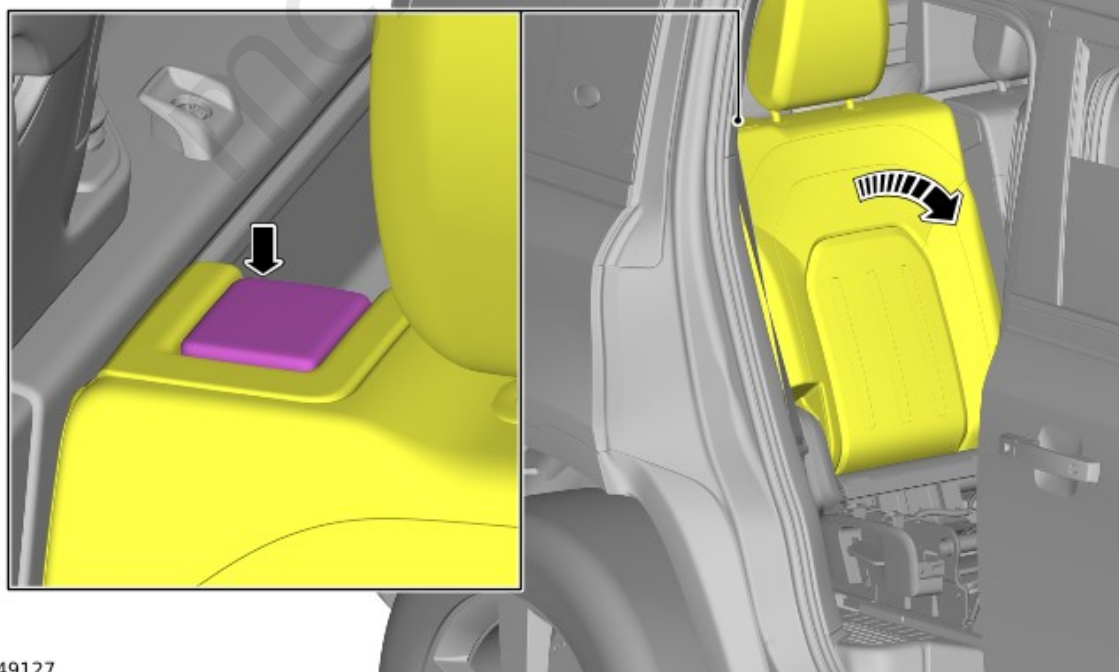


Fold the second row seat backrest.

9.


⚠ CAUTION:

Take extra care not to damage the component.

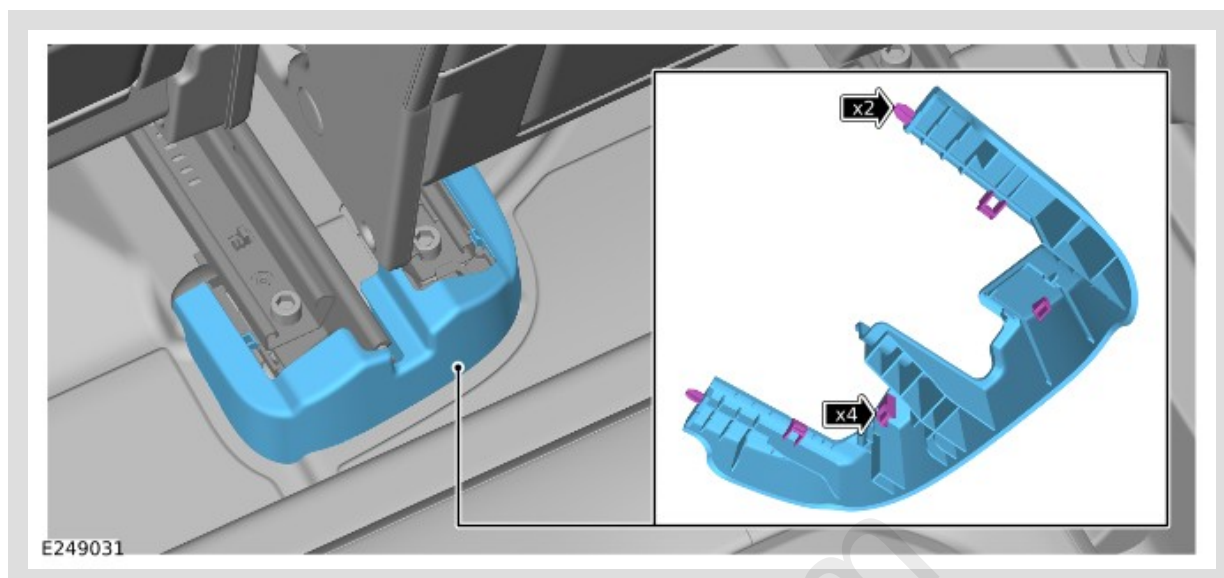


Remove the seat track trim.

10.

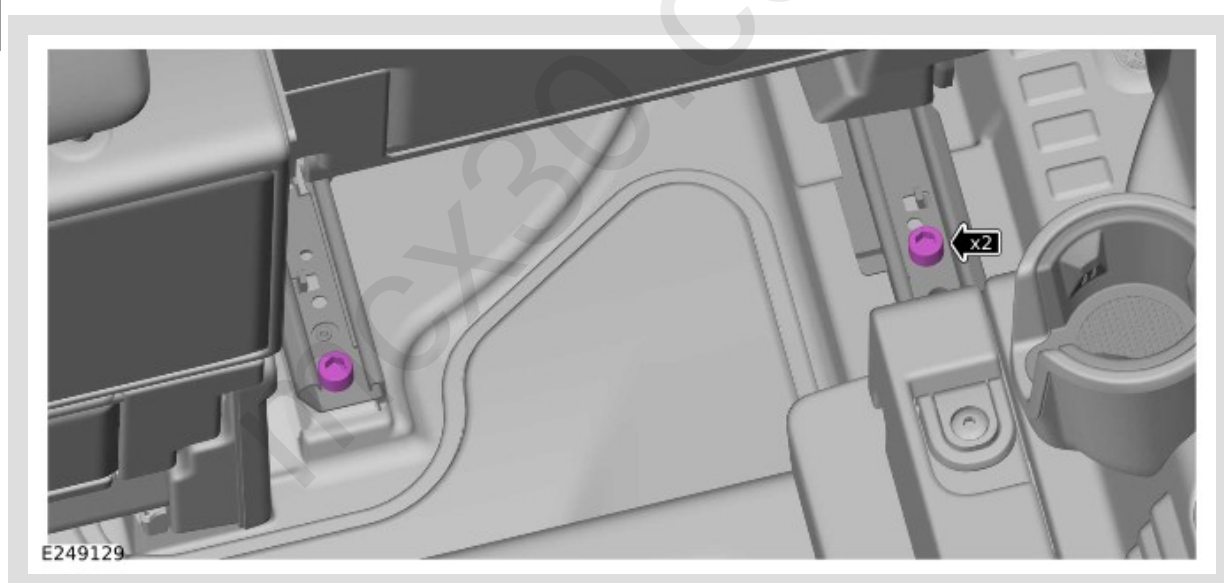

Remove the 2 rear seat track bolts.

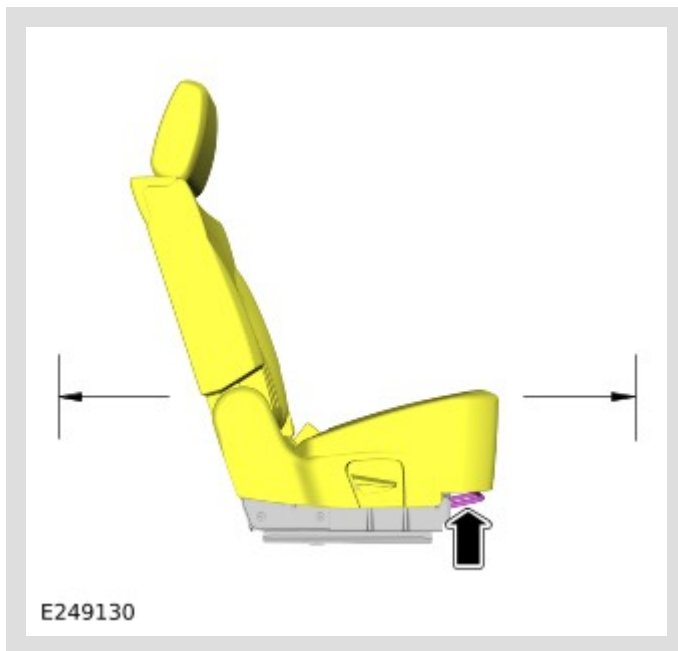


Reposition the second row seat to the center position.

mcx30.com

ⓘ CAUTION:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

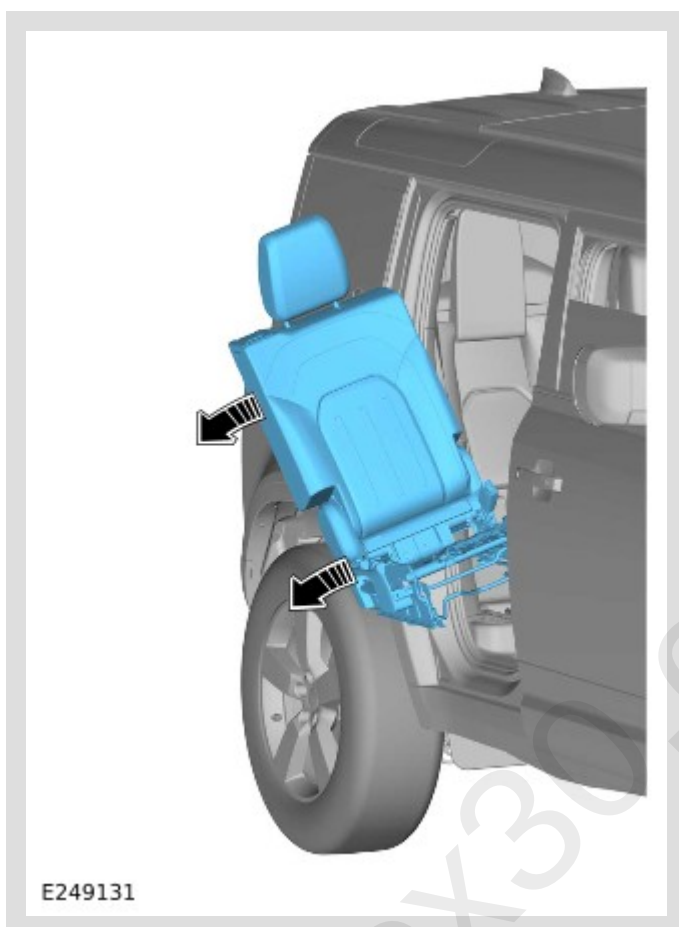

Remove the right second row seat assembly.

INSTALLATION

1.

⚠ CAUTIONS:

- Protect the surrounding paintwork to avoid damage.
- Protect the surrounding trim to avoid damage.

Install the second row seat assembly.

2.

Position the second row seat forward.

3.

- Install and tighten the 2 rear seat track bolts.

Torque: 50Nm

4.

Install the rear seat track trim.

5.

Position the second row seat backward.

6.

- Install and tighten the 2 front seat track bolts.

Torque: 50Nm

7.

Reposition the second row seat to the center position.

8.

Fold the second row seat backrest.

9.

- Connect the seat wiring harness electrical connector.
- Install the 2 wiring harness clips.

10.

- Connect the seat cushion heating element electrical connector.
- Install the second row seat cushion.

11.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

mcx30.com