

PUBLISHED: 21-JAN-2020
2020.0 DEFENDER (LE), 501-10

SEATING

SECOND ROW SEAT BACKREST COVER - 110 (G2414315)

mcx30.com

REMOVAL AND INSTALLATION

GENERAL EQUIPMENT

EQUIPMENT NAME
hog ring plier

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 2	Hog rings	13

REMOVAL



WARNING:

- To avoid accidental deployment and possible personal injury, the backup power supply must be depleted before repairing or replacing any airbag Supplementary Restraint System (SRS) components. To deplete the backup power supply energy, disconnect the battery ground cable and wait for 1 minute. Failure to follow this instruction may result in personal injury.
- Always wear safety glasses when working on an airbag equipped vehicle and when handling an airbag. Failure to follow this instruction may result in personal injury.
- Do not connect any electrical test device or equipment to the SRS connectors.



NOTE:

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the second row right seat.


Refer to: [Second Row Right Seat - 110](#) (501-10 Seating, Removal and Installation).

3.

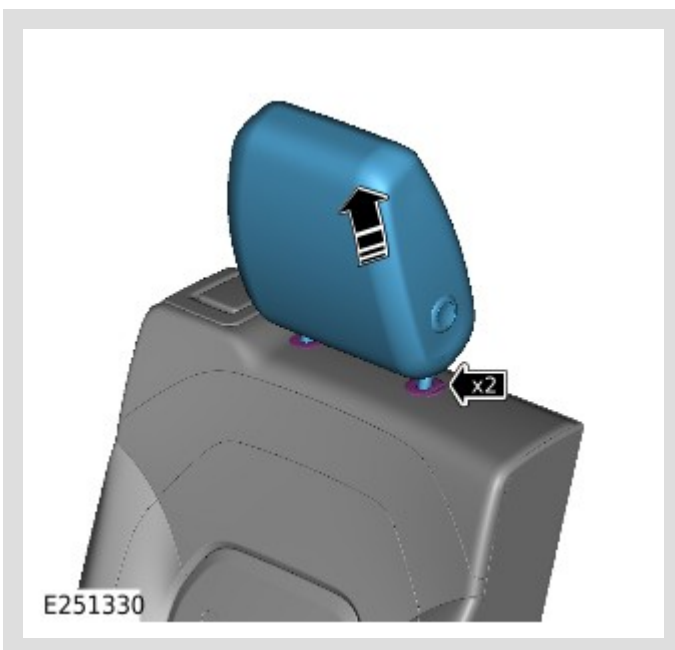


Remove the head restraint.

4.

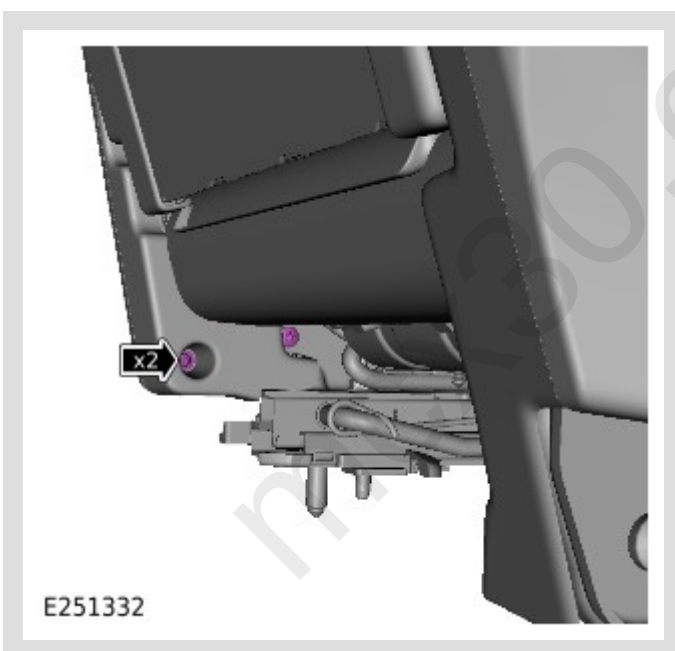


Remove the 2 bolts.

5.

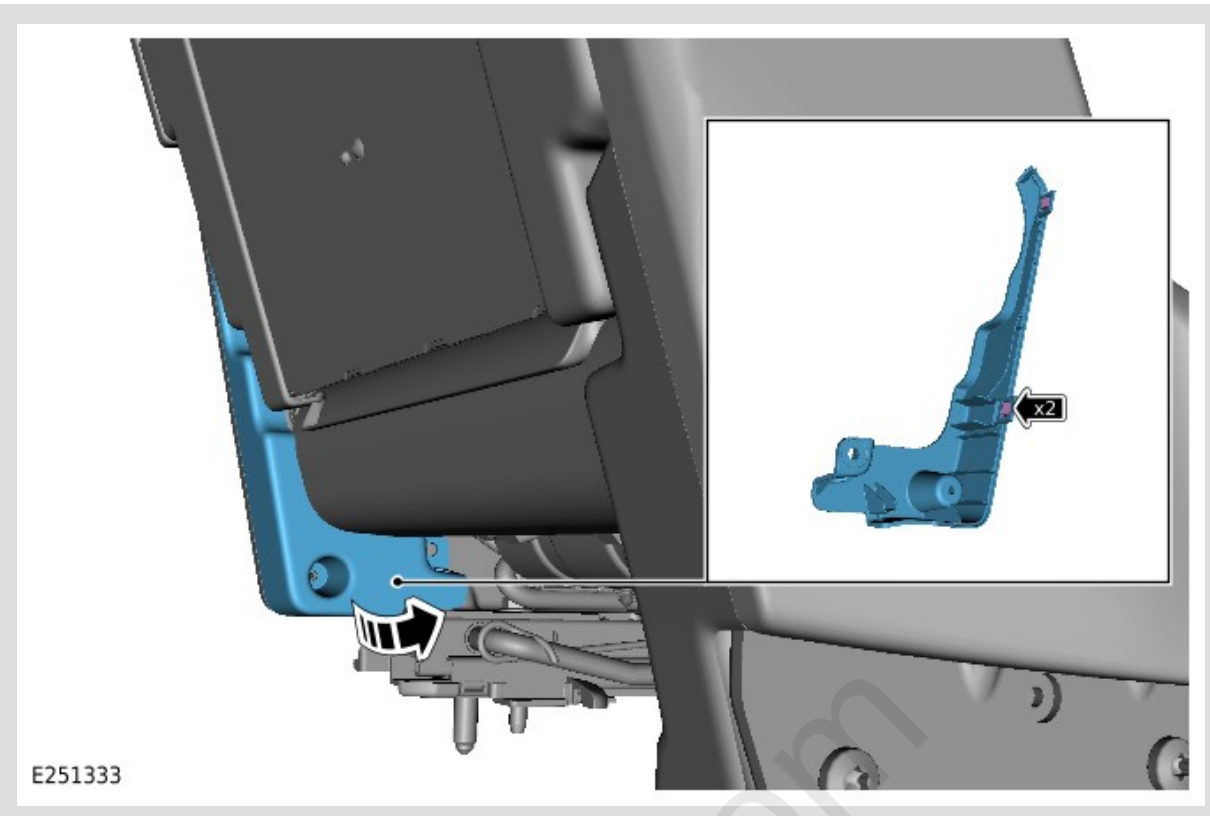


- Release the 2 clips.
- Remove the left inner cover trim.

6.

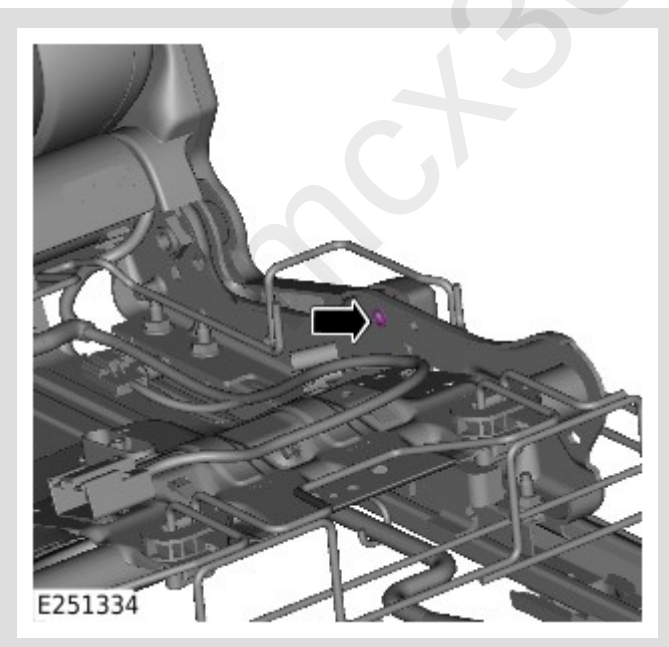

Remove the bolt.


7.

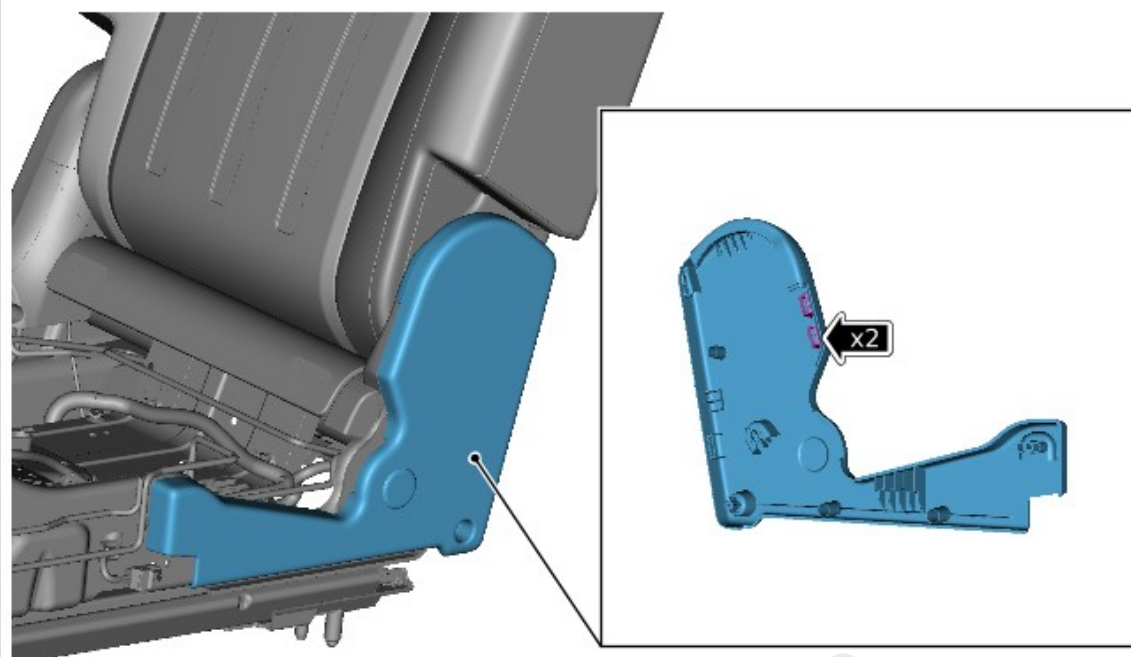

E251335

Remove the left outer cover trim.


8.

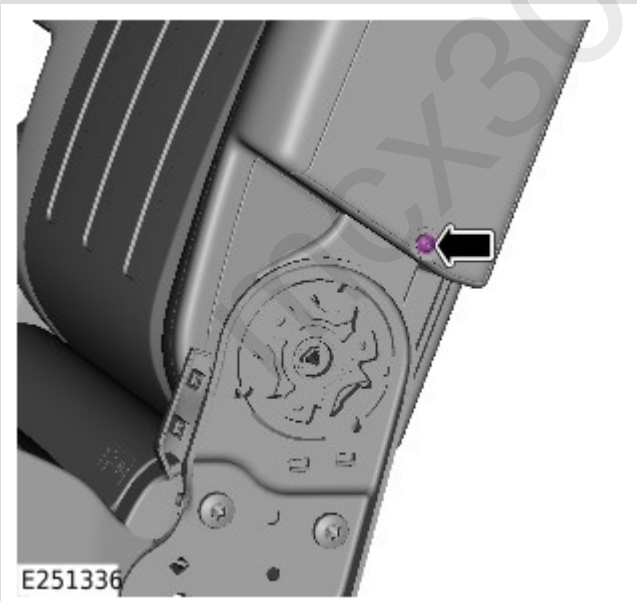

E251336


Remove the bolt.

9.

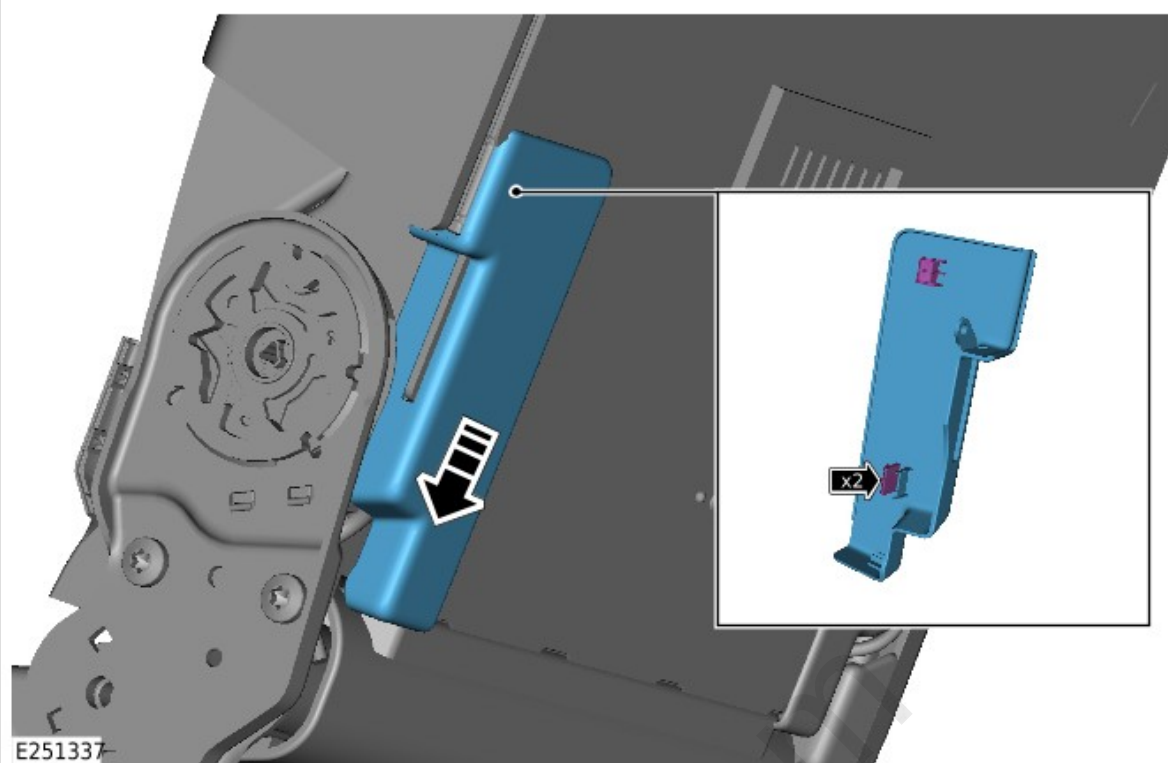


Remove the backrest left cover trim.

10.

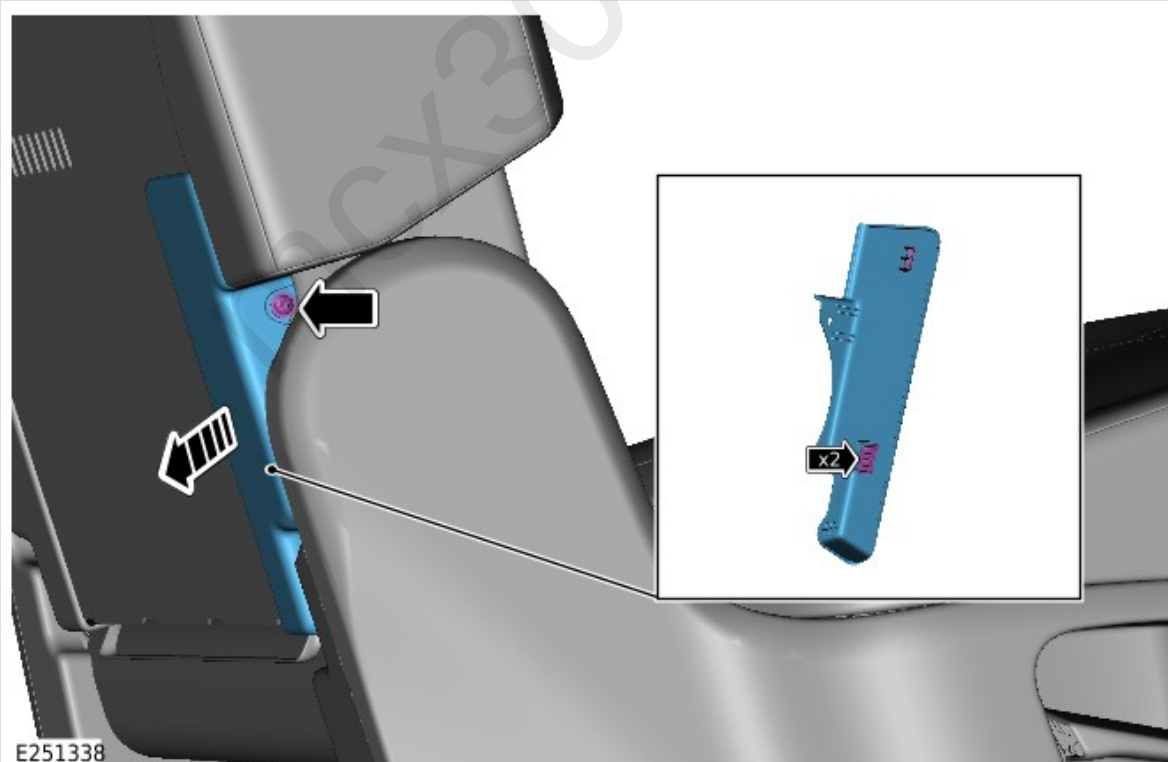


- Remove the bolt.
- Remove the backrest right cover trim.

11.

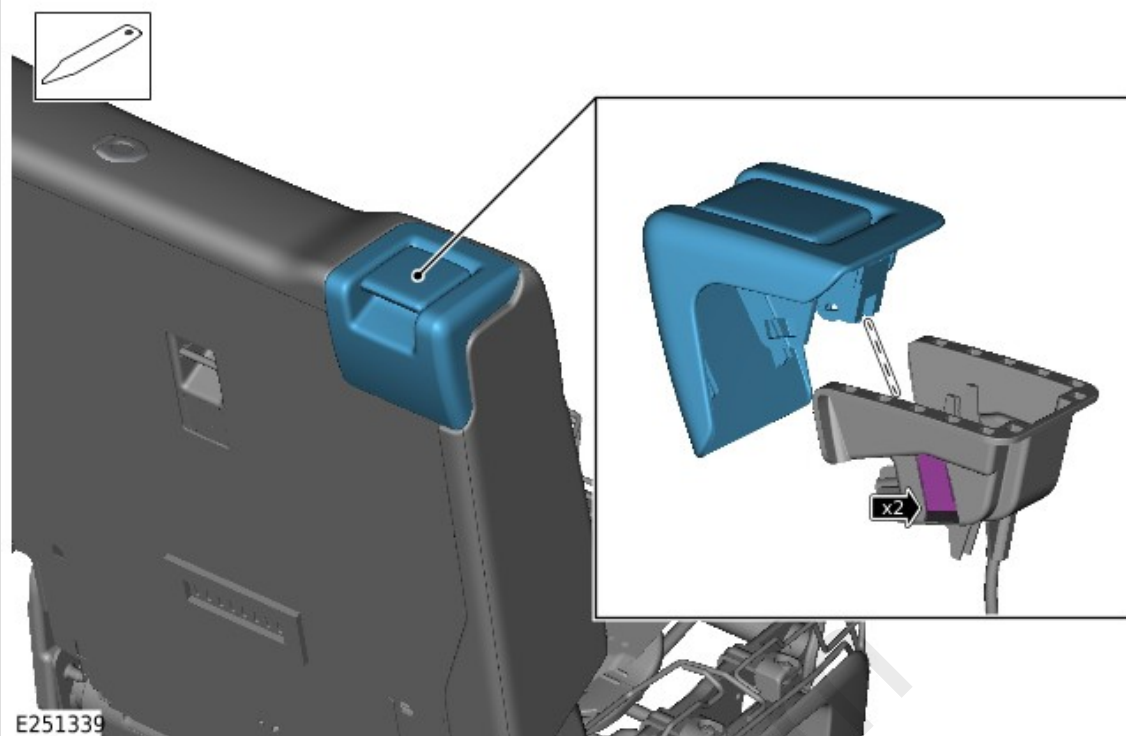

Remove the seat switchpack cover trim from the backrest.

12.

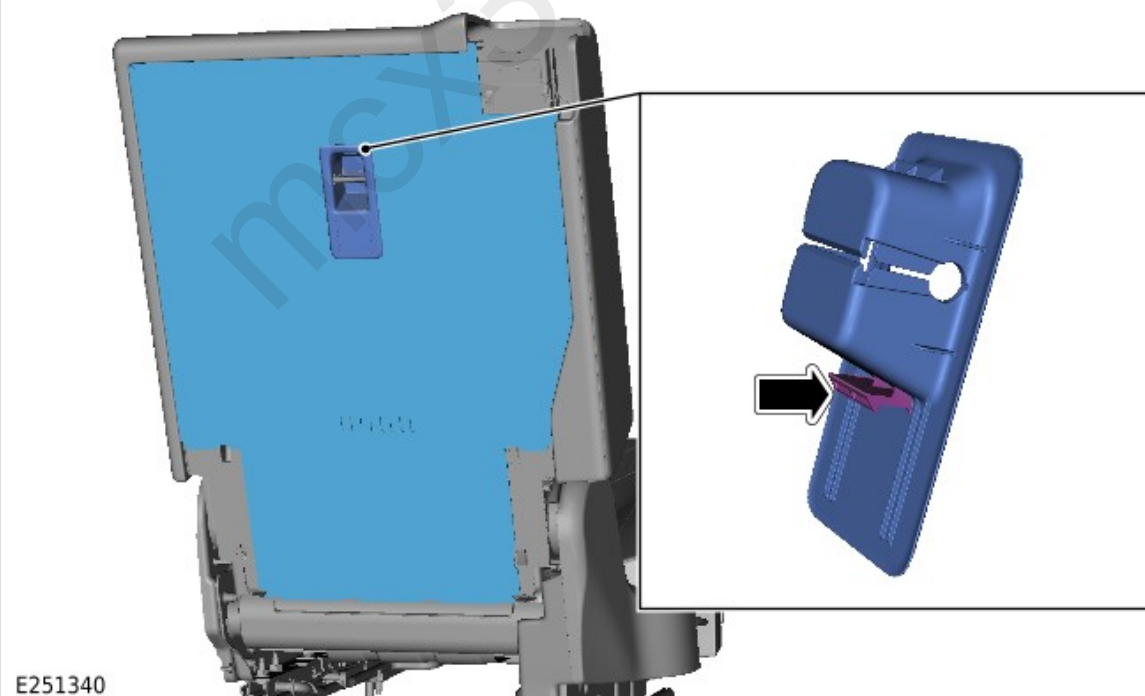


- Remove the access cover.
- Remove the backrest cover trim.

13.




Using a suitable tool remove the head restraint guide tubes.

14.

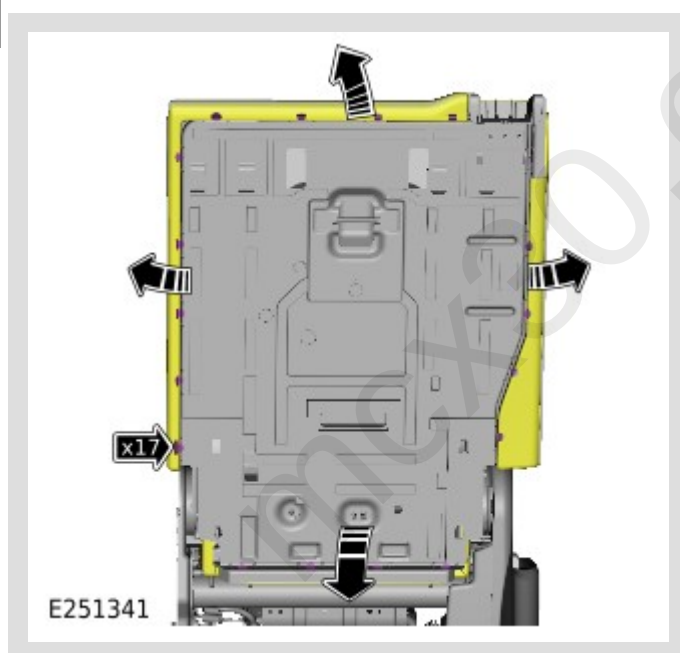

- Release the 17 retainers.
- Release the backrest cover to get access to the hog rings.

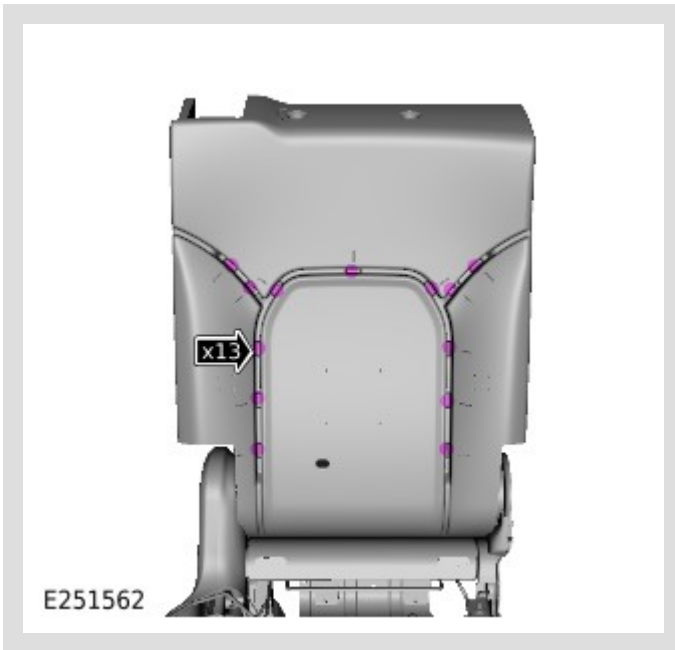


- Remove and discard the 13 hog rings.
- Remove the second row seat backrest cover.


1.

NOTE:

- Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed to overlap as illustrated.
- Make sure that new hog rings are installed.

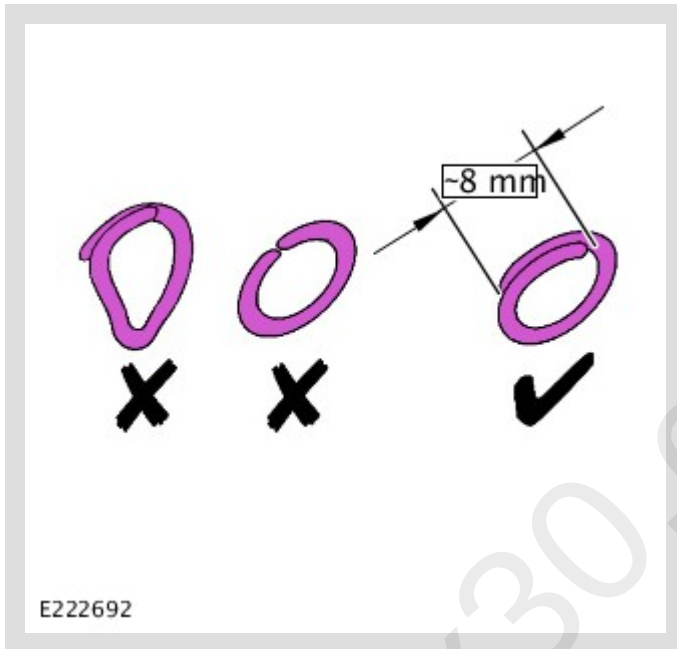

2.

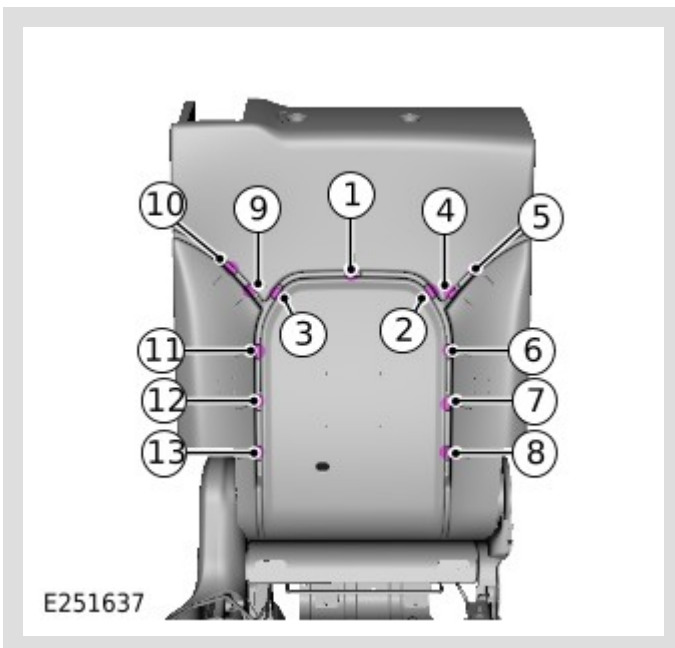

- Install the second row seat backrest cover.
- Install the 13 new hog rings in the sequence shown.
General Equipment: [hog ring plier](#)
Renew Part: [Hog rings](#) *Quantity:* 13.
- Install the 17 retainers.

3. Install the 2 head restraint guide tubes.

- 4.
- Install the backrest cover trim.
 - Install the access cover.

5. Install the seat switchpack cover trim.

- 6.
- Install the backrest right cover trim.
 - Install and tighten the bolt.
Torque: 1Nm

- 7.
- Install the backrest left cover trim.
 - Install and tighten the bolt.
Torque: 1Nm

- 8.
- Install the left outer cover trim.
 - Install and tighten the bolt.
Torque: 1Nm

9.

- Install the left inner cover trim.
- Install the 2 left inner cover trim clips into the left outer cover trim.
- Install and tighten the 2 bolts.

Torque: 1Nm

10.

Install the head restraint.

11.

Install the second row right seat.

Refer to: [Second Row Right Seat - 110](#) (501-10 Seating, Removal and Installation).

12.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).