

PUBLISHED: 19-NOV-2019
2020.0 DEFENDER (LE), 501-10

SEATING

SECOND ROW SEAT BACKREST BLOWER (G2414458)

mcx30.com

REMOVAL

**NOTE:**

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations for right side components, left side components are similar.


1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

2. Remove the second row seat backrest cover.


Refer to: [Second Row Seat Backrest Cover - 110](#) (501-10 Seating, Removal and Installation).

3.

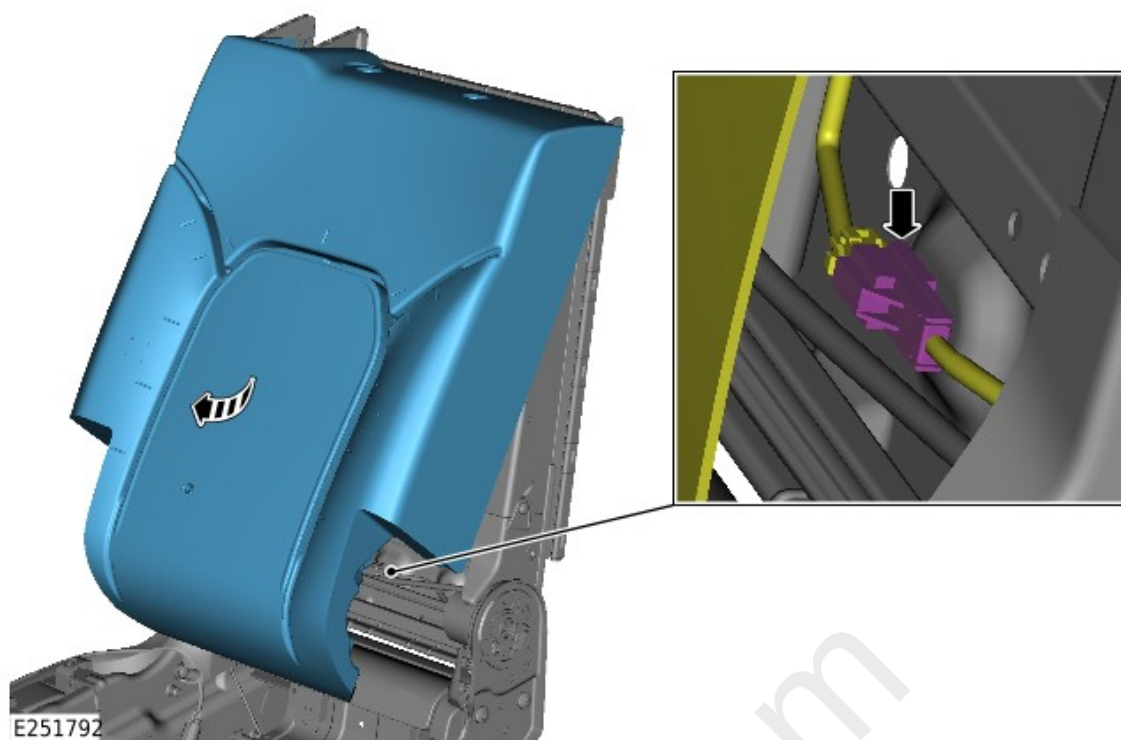


- Disconnect the electrical connector.
- Remove the second row seat backrest.

4.

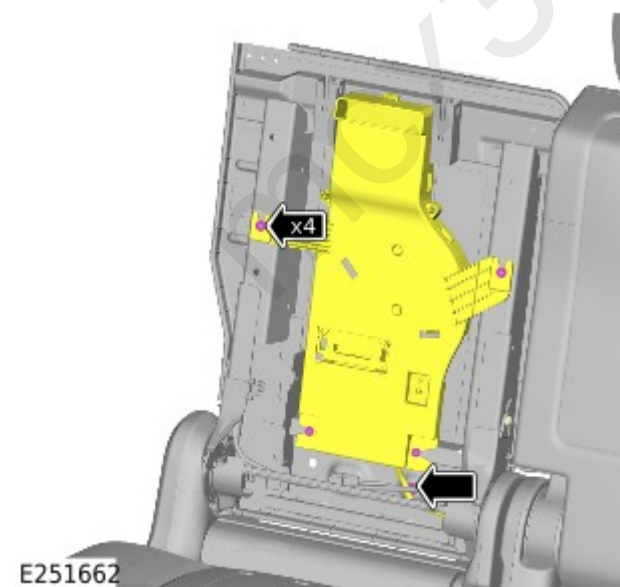

- Remove the 4 bolts.
- Release the clip.
- Release the second row seat backrest blower.

5.

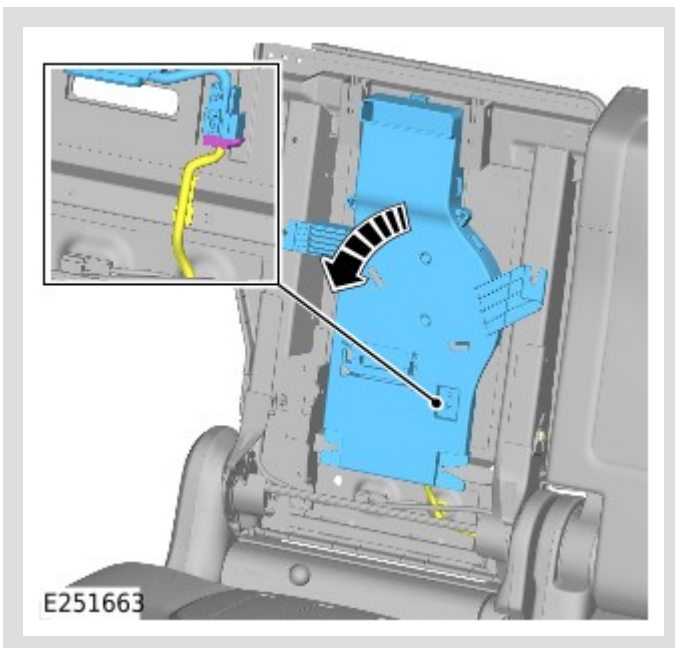

- Disconnect the electrical connector.
- Remove the second row seat backrest blower.

INSTALLATION

1.

- Install the second row seat backrest blower.
- Connect the electrical connector.

2.

- Install and tighten the 4 bolts.
Torque: 10Nm
- Install the clip.

3.

- Connect the electrical connector.
- Install the second row seat backrest.

4.

Install the second row seat backrest cover.

Refer to: [Second Row Seat Backrest Cover - 110](#) (501-10 Seating, Removal and Installation).

5.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

