

PUBLISHED: 27-JAN-2020
2020.0 DEFENDER (LE), 501-10

SEATING

THIRD ROW SEAT HEAD RESTRAINT (G2428649)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Remove the third row seat backrest cover.


Refer to: [Third Row Seat Backrest Cover](#) (501-10 Seating, Removal and Installation).

- 2.

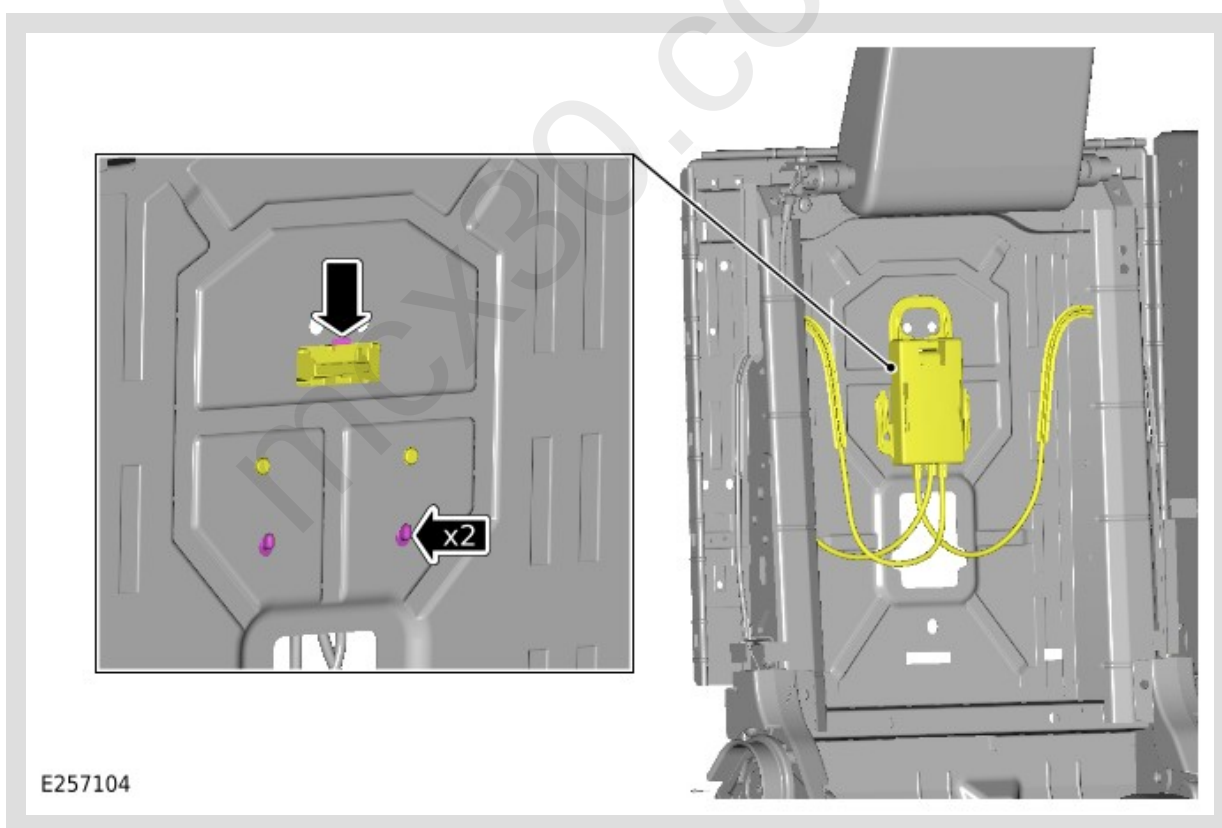


Release the latch from the 3 clips.

3.

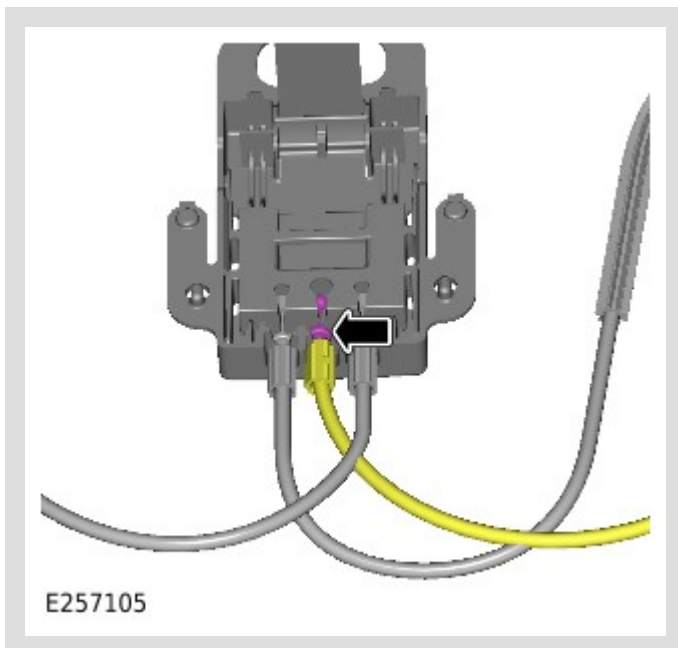

Release the head restraint latch cable.

4.

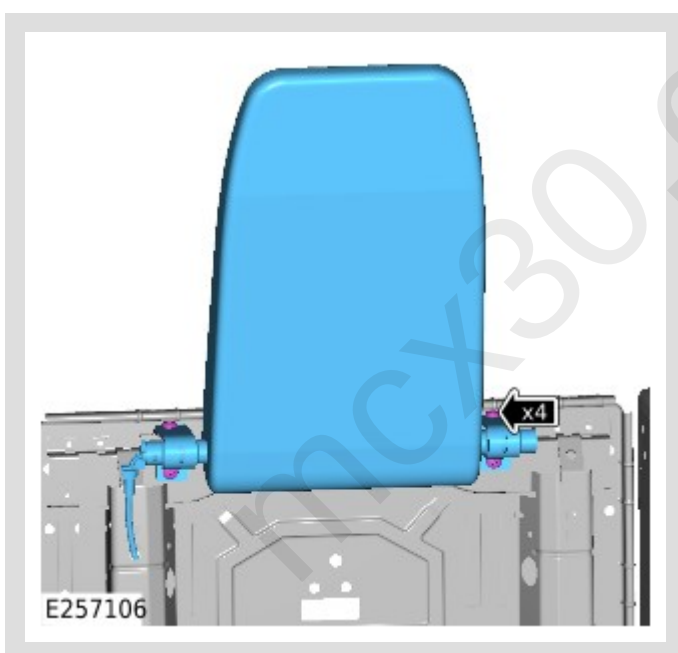

- Remove the 4 bolts.
- Remove the third row seat head restraint.

INSTALLATION

1.

- Install the third row seat head restraint.
- Install and tighten the 4 bolts.

Torque: 10Nm

2.

Install the head restraint latch cable.

3.

Install the latch to the 3 clips.

4.

Install the third row seat backrest cover.

Refer to: [Third Row Seat Backrest Cover](#) (501-10 Seating, Removal and Installation).

cmjjaGFyZG1vbnRvb3JyMDIwLTA5LTE4VDEyOjMyOjI3LjM2MVo7OTIuNDAuMTg5LjUwOw==