

PUBLISHED: 13-JAN-2020
2020.0 DEFENDER (LE), 501-10

SEATING

SECOND ROW RIGHT SEAT CUSHION COVER (G2444729)

mcx30.com

REMOVAL AND INSTALLATION

GENERAL EQUIPMENT

EQUIPMENT NAME
Hog ring pliers

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 3	Hog rings	13
Installation Step 4	Hog rings	20


REMOVAL



NOTE:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1.

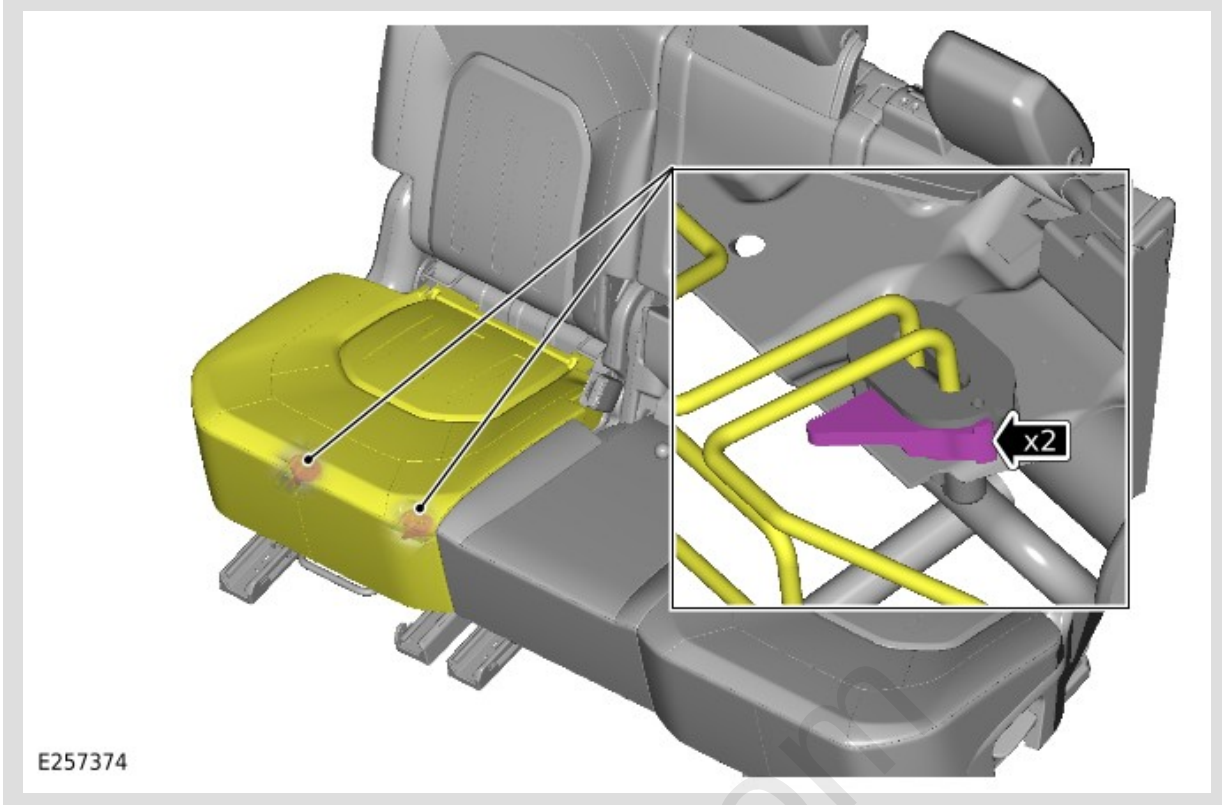


Release the 2 second row seat cushion retaining clips.

2.

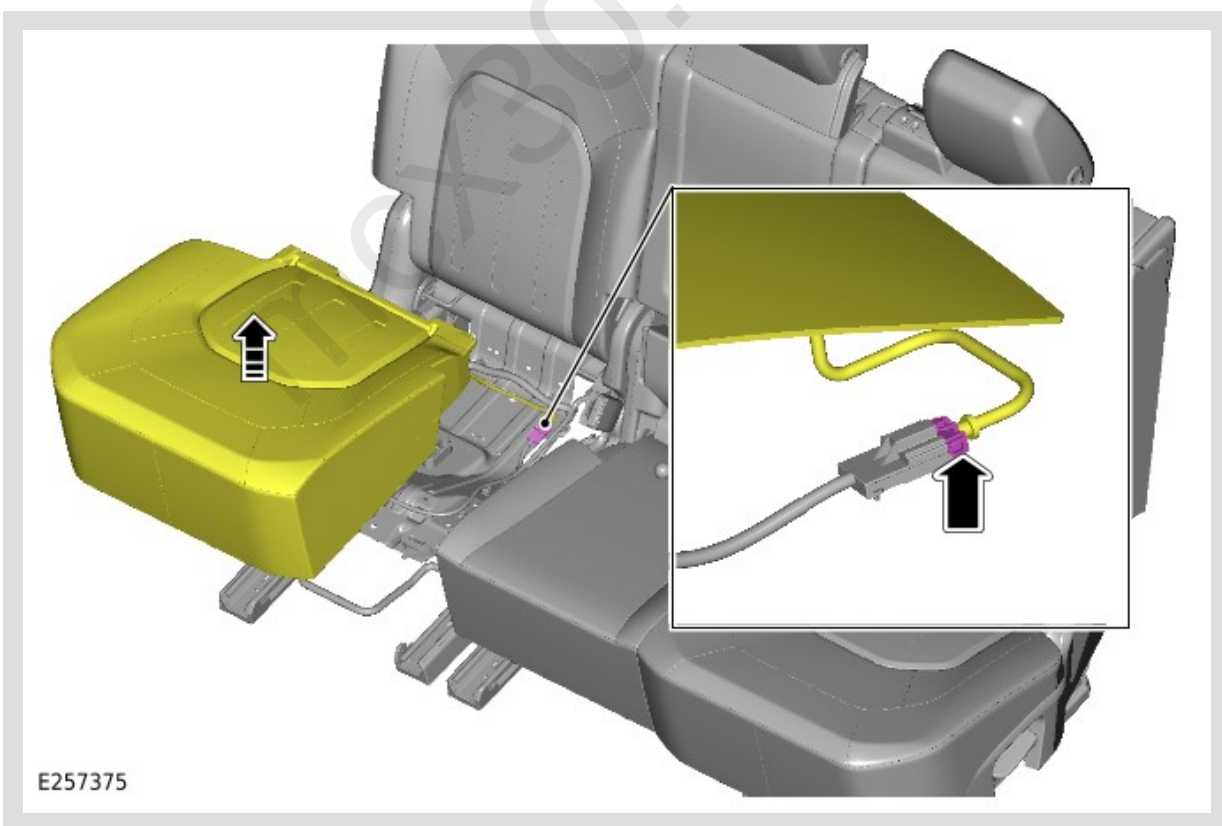


- Reposition the cushion to gain access to the electrical connector.
- Disconnect the seat cushion heater element electrical connector.

3.

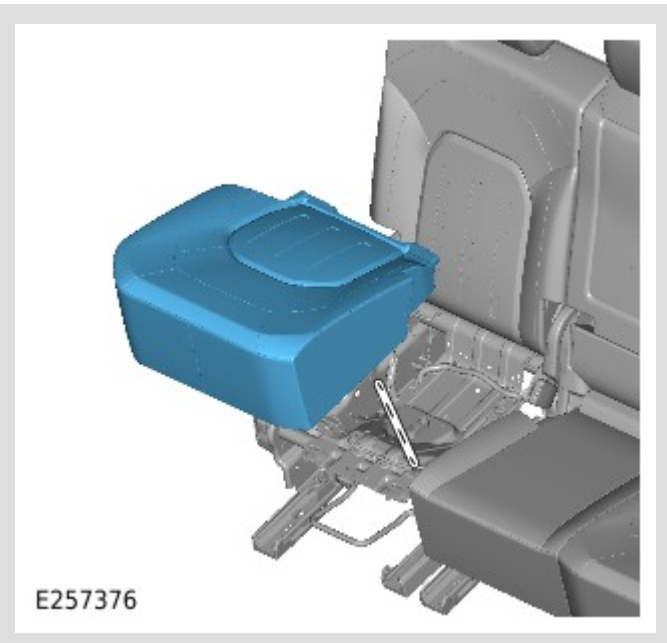

Remove the second row seat cushion.

4.

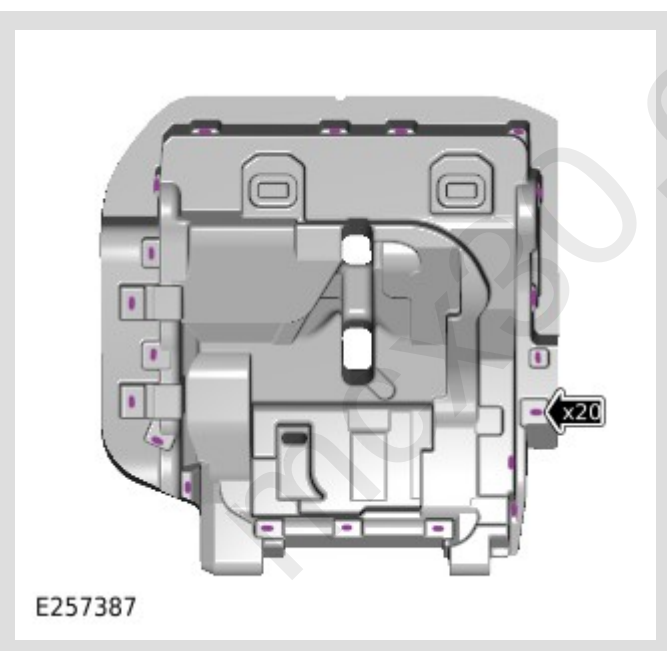

Use a suitable tool to remove and discard the 20 hog rings.

5.



Use a suitable tool to remove and discard the 13 hog rings.

6.




Remove the second row right seat cushion cover.

INSTALLATION

1.

NOTE:

- Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed to overlap as illustrated.
- Make sure that new hog rings are installed.

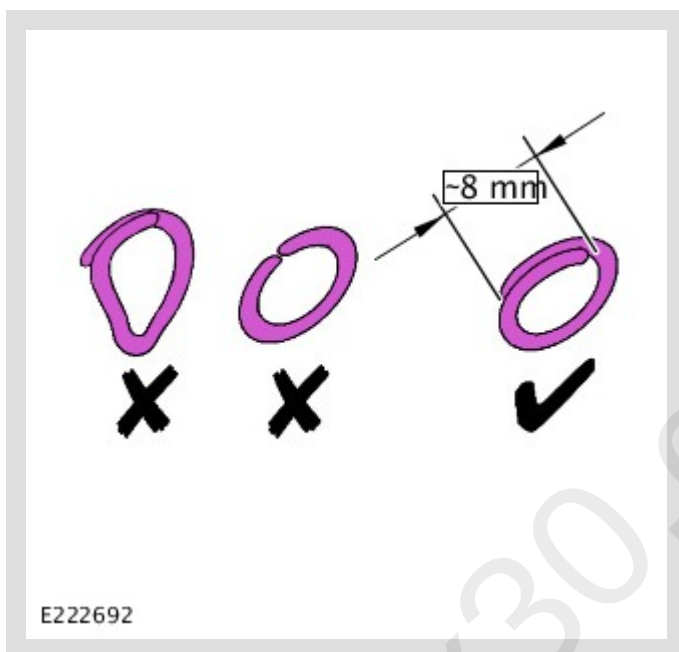


General Equipment: [Hog ring pliers](#)

2.

Install the second row seat cushion cover.


3.

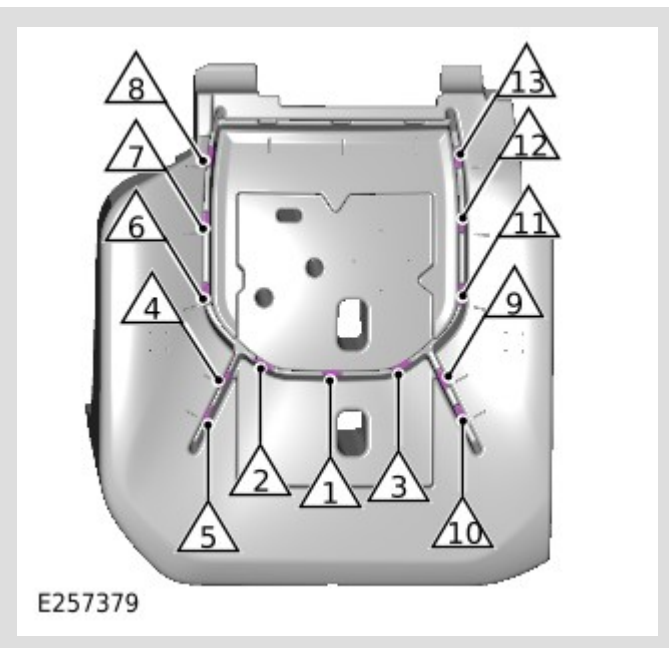

Install the 13 new hog rings in the sequence illustrated.

Renew Part: [Hog rings](#) Quantity: 13.

4.

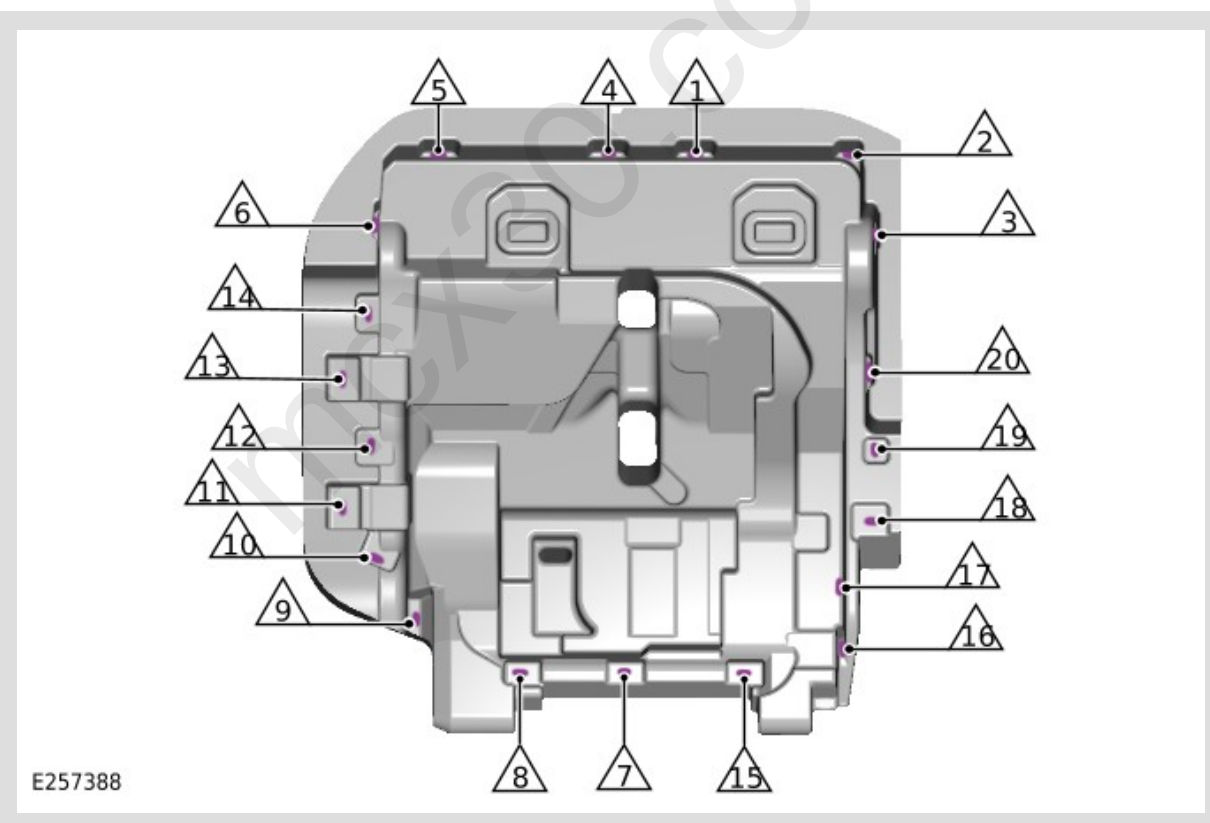

Install the 20 new hog rings in the sequence illustrated.

Renew Part: [Hog rings](#) Quantity: 20.

5.

Install the second row seat cushion.

6.

- Connect the seat cushion heater element electrical connector.
- Position the seat cushion in the correct location.

7.

Install the 2 second row seat cushion retaining clips.

cmjjaGFyZG1vcnRvbjsyMDIwLTA5LTE4VDEyOjMzOjU4LjQ0Ni7OTUuNDAmTG5lUwOw==

mcx30.com