

PUBLISHED: 22-NOV-2019
2020.0 DEFENDER (LE), 501-10

SEATING

THIRD ROW SEAT BACKREST COVER (G2441629)

mcx30.com

REMOVAL AND INSTALLATION

GENERAL EQUIPMENT

EQUIPMENT NAME
Hog ring pliers

PART(S)

STEP	PART NAME	QUANTITY
Installation Step 3	Hog rings	13


REMOVAL

NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Remove the third row seat.
Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).

2.

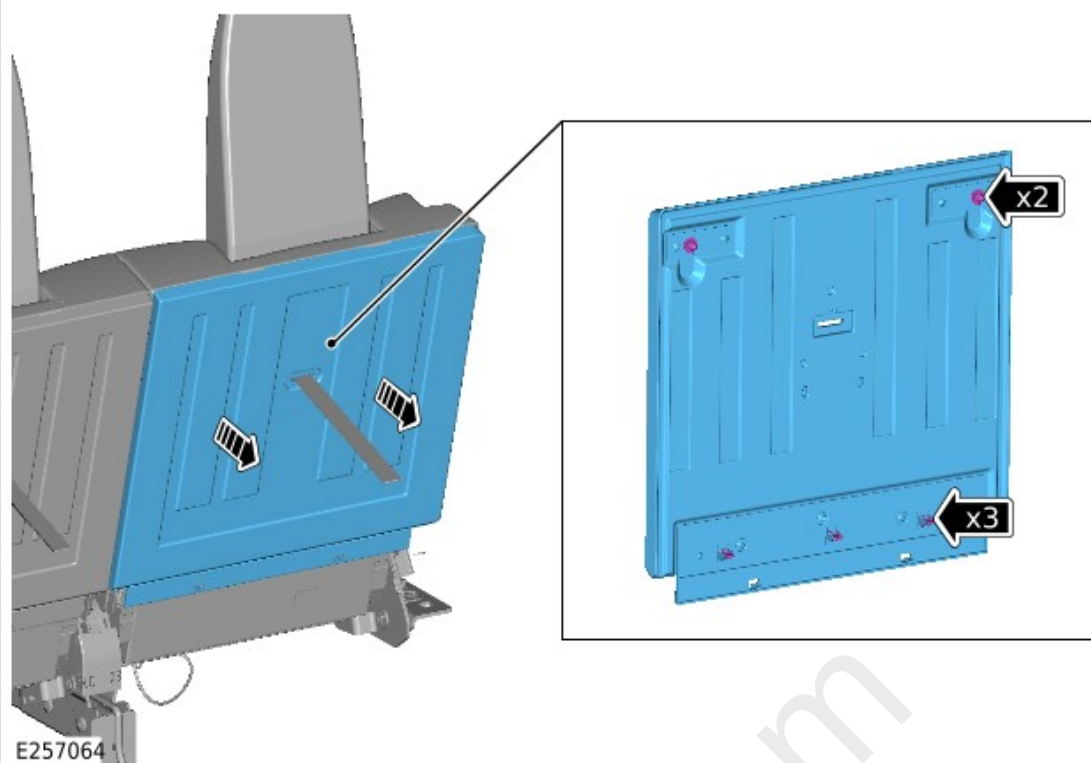

- Release the trim cover from the 3 clips.
- Release the trim cover from the 2 clips.
- Remove the third row seat trim cover.

3.

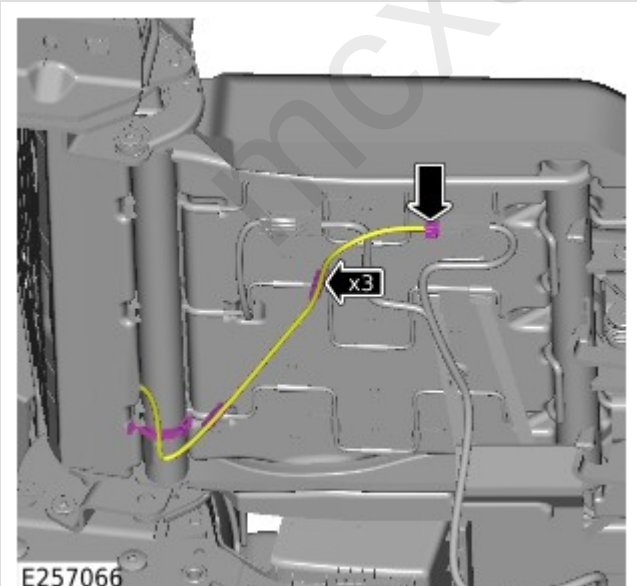


- Disconnect the electrical connector.
- Release the 3 wiring harness clips.

4.



Release the 4 backrest cover clips.

5.

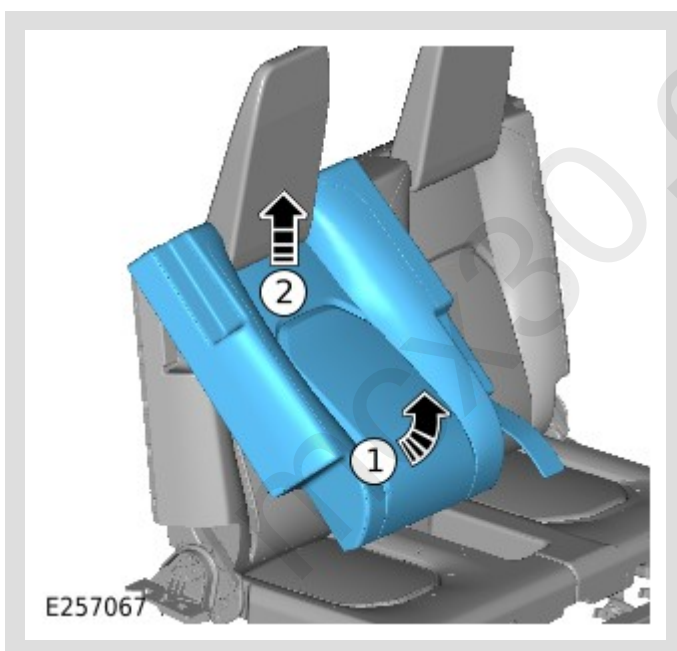

Remove the third row seat backrest cushion assembly as illustrated.

6.



Use a suitable tool to remove and discard the 13 hog rings.

7.



Remove the third row seat backrest cover.


INSTALLATION

1. Install the third row seat backrest cover.

2.


NOTE:

- Make sure that new hog rings are installed.
- Use hog ring pliers to close the hog rings. Do not use any other tool. The hog rings must be closed to overlap as illustrated.

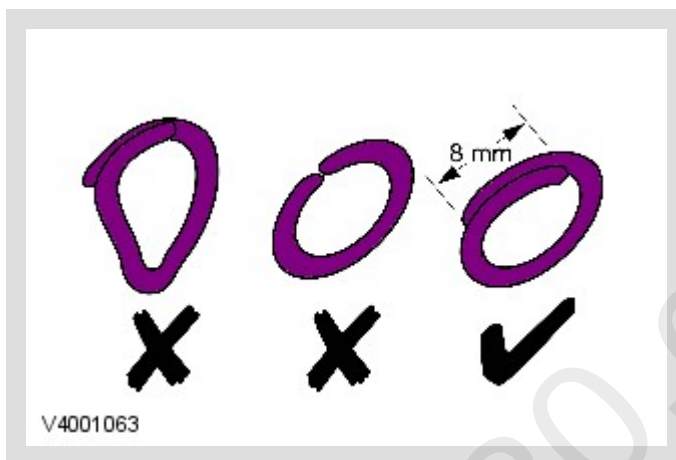

General Equipment: [Hog ring pliers](#)

3.

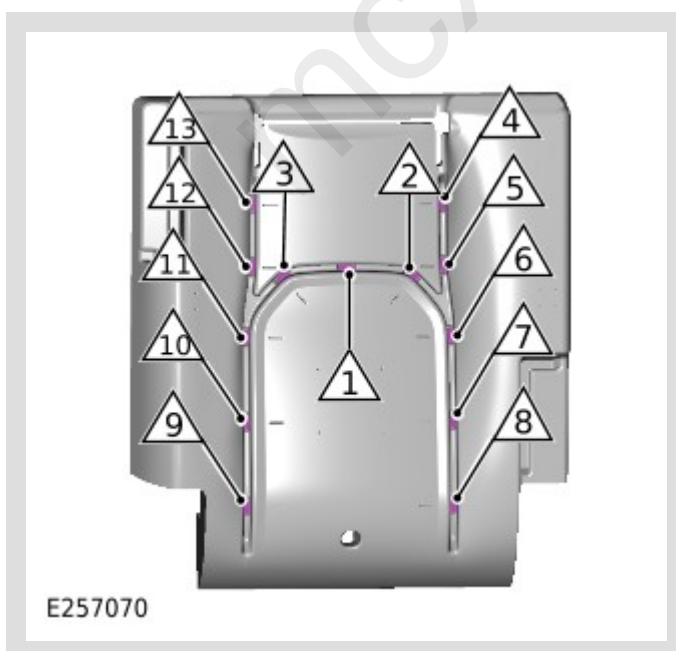

Install the 13 new hog rings in the sequence shown.

Renew Part: [Hog rings](#) Quantity: 13.

4. Install the third row seat backrest cushion assembly.

5. Install the 4 backrest cover clips.

- 6.
- Connect the electrical connector.
 - Install the 3 wiring harness clips.
-

- 7.
- Install the third row seat trim cover.
 - Install the trim cover to the 2 clips.
 - Install the trim cover to the 3 clips.
-

8. Install the third row seat.
Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).