

PUBLISHED: 07-AUG-2019  
2020.0 DEFENDER (LE), 501-11

GLASS, FRAMES AND MECHANISMS

## REAR DOOR WINDOW [G2414041]

mcx30.com

## REMOVAL AND INSTALLATION

### SPECIAL TOOL(S)



501-114

E54200

501-114

Release Lever, Door Glass

## REMOVAL



### ⚠ CAUTIONS:

- Lay the window on felt covered supports. Do not stand on edge as this can cause chips which subsequently develop into cracks.
- Protect the surrounding paintwork to avoid damage.

### ⚠ NOTES:

- This procedure contains illustrations for left side components, right side components are similar.
- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1.

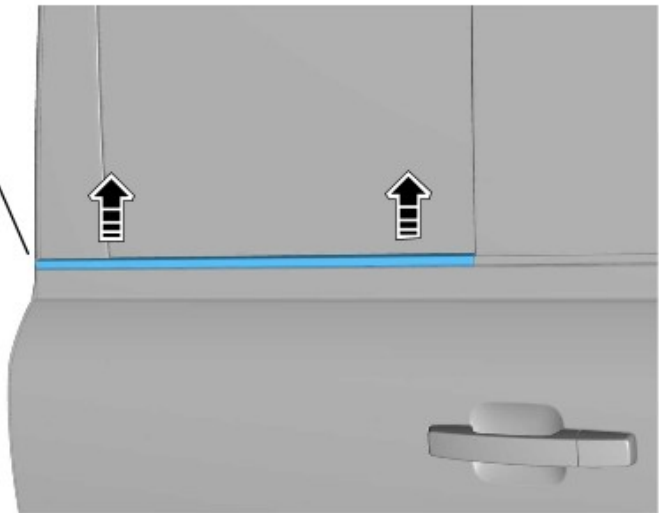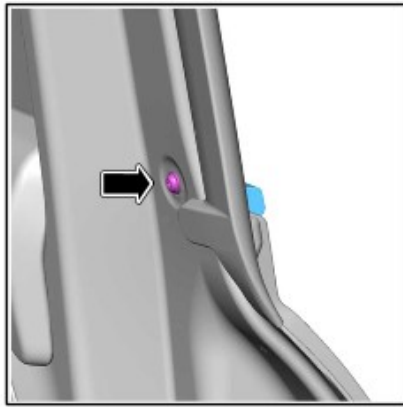

E251202

- Remove the screw.
- Remove the rear door outer weatherstrip.


2.



E251203

- Lower the rear door window.
- Remove the rear door window runner seal.

3.

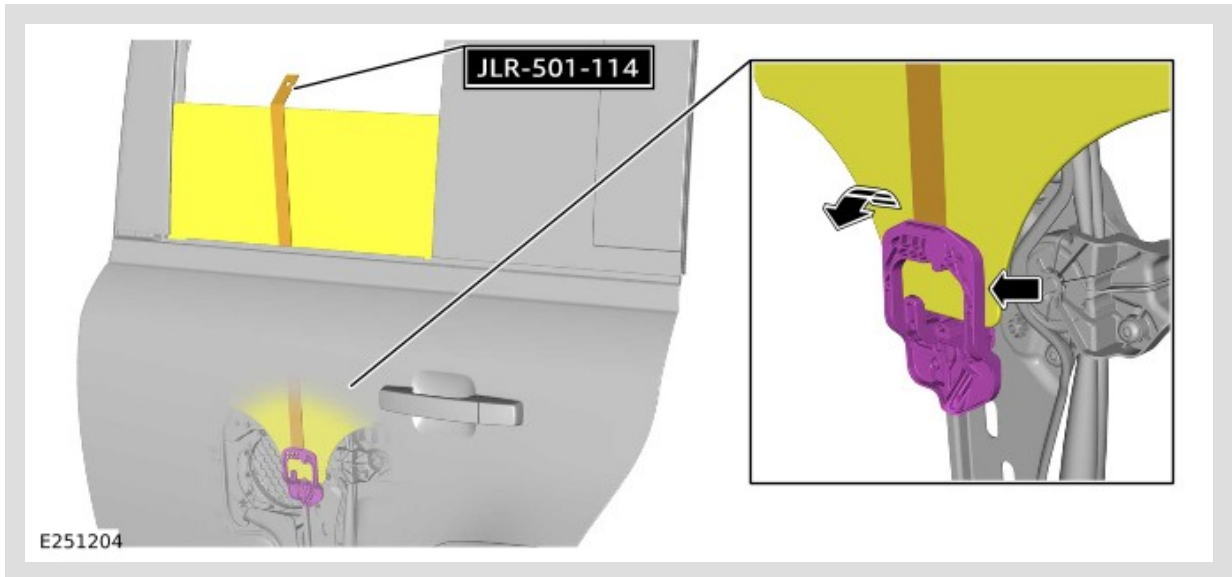

Use the special tool to release the rear door window from the door window regulator assembly.

*Special Tool(s):* [501-114](#)

4.



Remove the rear door window.


## INSTALLATION

1. Install the rear door window.

2.

### ⚠ CAUTION:

An audible click is heard when the rear door window is located correctly.

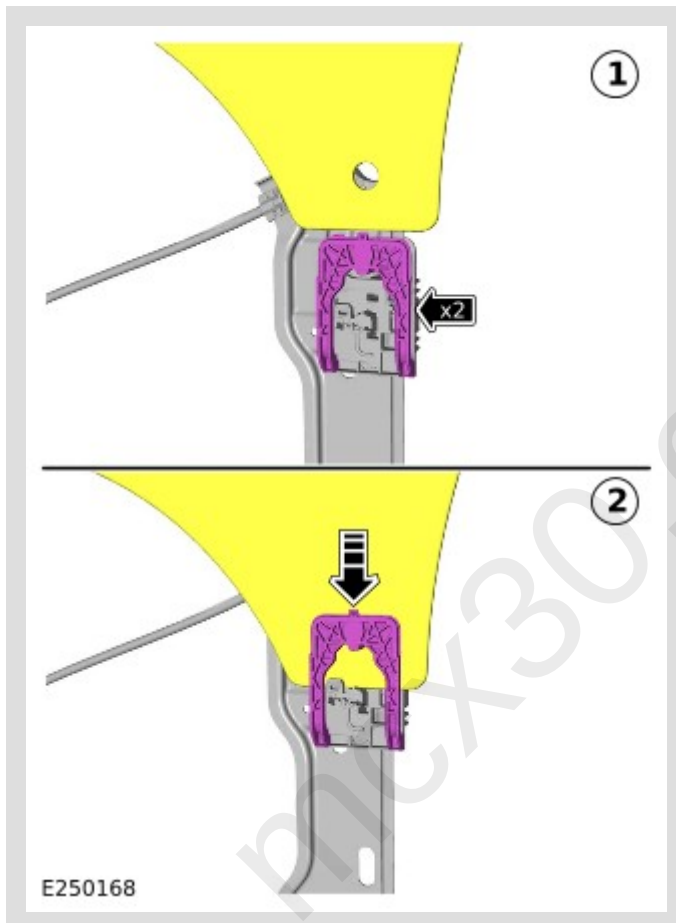

Connect the rear door window to the door window regulator assembly.

3. Install the rear door window runner seal.

4.
  - Install the rear door outer weatherstrip.
  - Install and tighten the screw.

5. Initialize the rear door window motor.

Refer to: [Door Window Motor Initialization](#) (501-11 Glass, Frames and Mechanisms, General Procedures).

cmjjaGFyZG1vbnRvbjpyMDIwLTA5LTE4VDEyOQwQjkljE1OFo7OTluNDAmTg5LjUwOw==

mcx30.com