

SUPPLEMENTARY RESTRAINT SYSTEM

CLOCKSPRING (G2417277)

REMOVAL AND INSTALLATION

REMOVAL



NOTE:

The clockspring is not a serviceable item and must be replaced with the Steering Column Multifunction Switch.

1. Remove the clockspring.

Refer to: [Steering Column Multifunction Switch](#) (211-05 Steering Column Switches, Removal and Installation).

INSTALLATION

1. Install the clockspring.

Refer to: [Steering Column Multifunction Switch](#) (211-05 Steering Column Switches, Removal and Installation).