

PUBLISHED: 23-SEP-2019
2020.0 DEFENDER (LE), 501-20B

SUPPLEMENTARY RESTRAINT SYSTEM

RESTRAINTS CONTROL MODULE (G2409833)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME

Jaguar Land Rover approved diagnostic equipment

REMOVAL

**WARNINGS:**

- To prevent accidental deployment, you must power down the Restraints Control Module (RCM). Wait at least 1 minute after you disconnect the startup battery ground cable before you do any work on the Supplementary Restraint System (SRS). If you do not follow these instructions, it can cause injury or death.
- Do not connect any electrical test device or equipment to the Supplementary Restraint System (SRS) connectors.
- Always wear safety glasses when working on an airbag equipped vehicle and when handling an airbag. Failure to follow this instruction may result in personal injury.

**NOTE:**

- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Before handling any components within the Supplementary Restraint System (SRS), make sure that the safety guidelines are followed.

Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).

2. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

3. Remove the floor console.

Refer to: [Floor Console - Vehicles With: Stowage Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).

Refer to: [Floor Console - Vehicles Without: Stowage Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).

4.

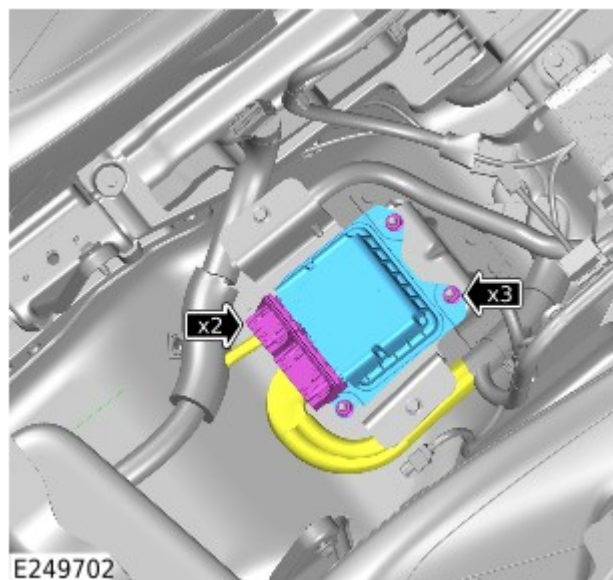

- Disconnect the 2 electrical connectors.
- Remove the 3 nuts.
- Remove the Restraints Control Module (RCM).

INSTALLATION

1.

- Install the Restraints Control Module (RCM).
- Install and tighten the 3 nuts.
Torque: 11Nm
- Connect the 2 electrical connectors.

2.

Install the floor console.

Refer to: Floor Console - Vehicles With: Stowage Compartment (501-12 Instrument Panel and Console, Removal and Installation).

Refer to: [Floor Console - Vehicles Without: Stowage Compartment](#) (501-12 Instrument Panel and Console, Removal and Installation).

3.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

4.

If a new component has been installed, use the Jaguar Land Rover (JLR) approved diagnostic equipment to configure the RCM.

General Equipment: [Jaguar Land Rover approved diagnostic equipment](#)

mcx30.com