

PUBLISHED: 16-JUN-2020
2020.0 DEFENDER (LE), 501-28

ROOF SHEET METAL REPAIRS

WINDSHIELD HEADER PANEL UPPER - 90 (G2452695)

mcx30.com

REMOVAL

The following step(s) applies to:


All vehicles

 NOTE:

In this procedure the windshield header panel upper is installed in conjunction with:

- Windshield
- Roof opening panel frame
- Front roof trim panel
- Roof Panel.

1.

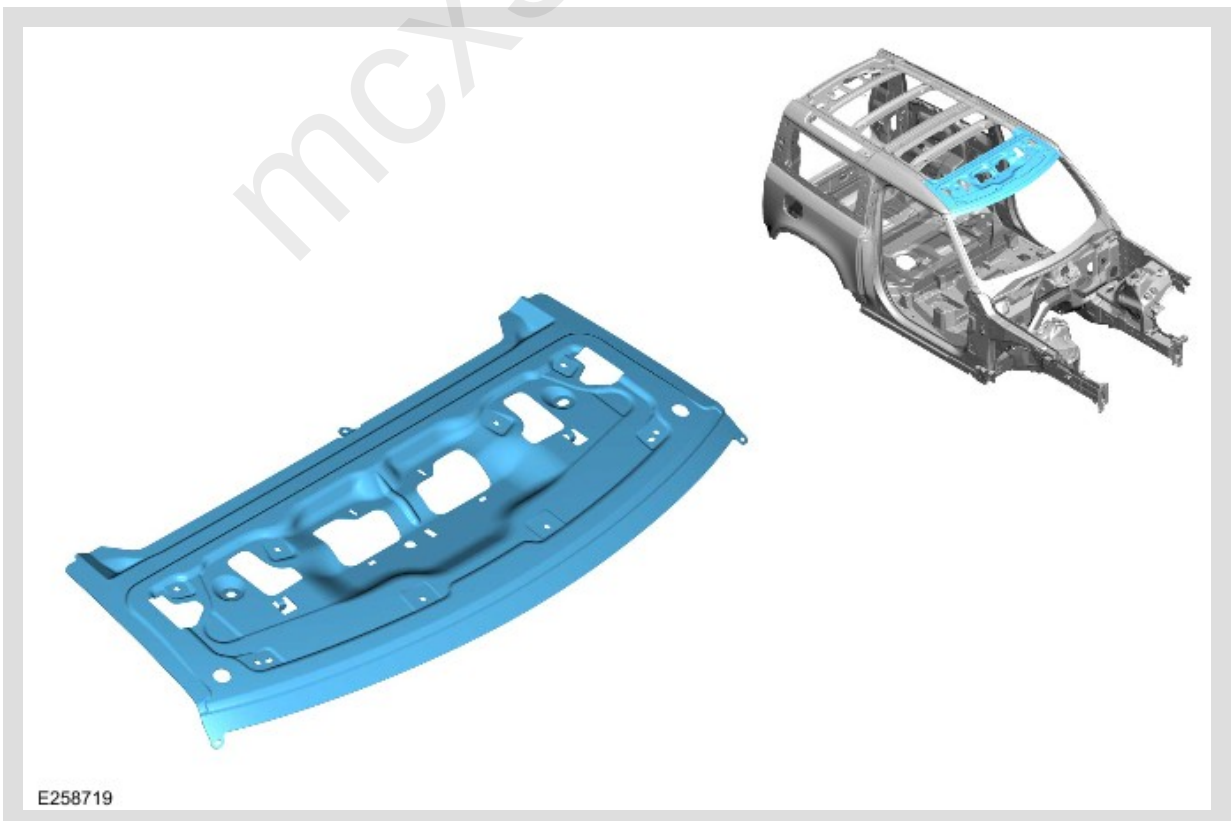

The windshield header panel upper is serviced as indicated.

2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements.
Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3. **NOTES:**

- Where Breakstem Fastener (BSF) removal is instructed remove the fastener shaft with a 4 mm punch and remove the head with a 6.5 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Self Piercing Rivet (SPR) removal is instructed use either the Jaguar Land Rover (JLR) approved SPR tool or a 5.3 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Flow Form Rivet (FFR) removal is instructed, remove the head and then remove the shaft with a punch. Clean the holes to make sure they are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

When installing the windshield header panel upper make sure that you are aware of the methods, tools and fixings used in this procedure.

Refer to: [Body Repairs](#) (501-25A Body Repairs - General Information, Description and Operation).

Refer to: [Adhesives, Fixings and Consumables](#) (501-25A Body Repairs - General Information, Description and Operation).

4. For additional information on the fixings required to complete this procedure
Refer to: [Specifications - 110](#) (501-28 Roof Sheet Metal Repairs, Specifications).

5. For additional removal information
Refer to: [Windshield](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

6. **NOTE:**

Vehicles With: Roof Opening Panel

For additional removal information

Refer to: [Roof Opening Panel Frame](#) (501-17 Roof Opening Panel, Removal and Installation).

7. For additional removal information
Refer to: [Front Roof Trim Panel](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).


8. For additional removal information
Refer to: [Roof Panel - 90, Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

9. Release and position the wiring harness to one side.

The following step(s) applies to:

Vehicles with roof opening panel


10.

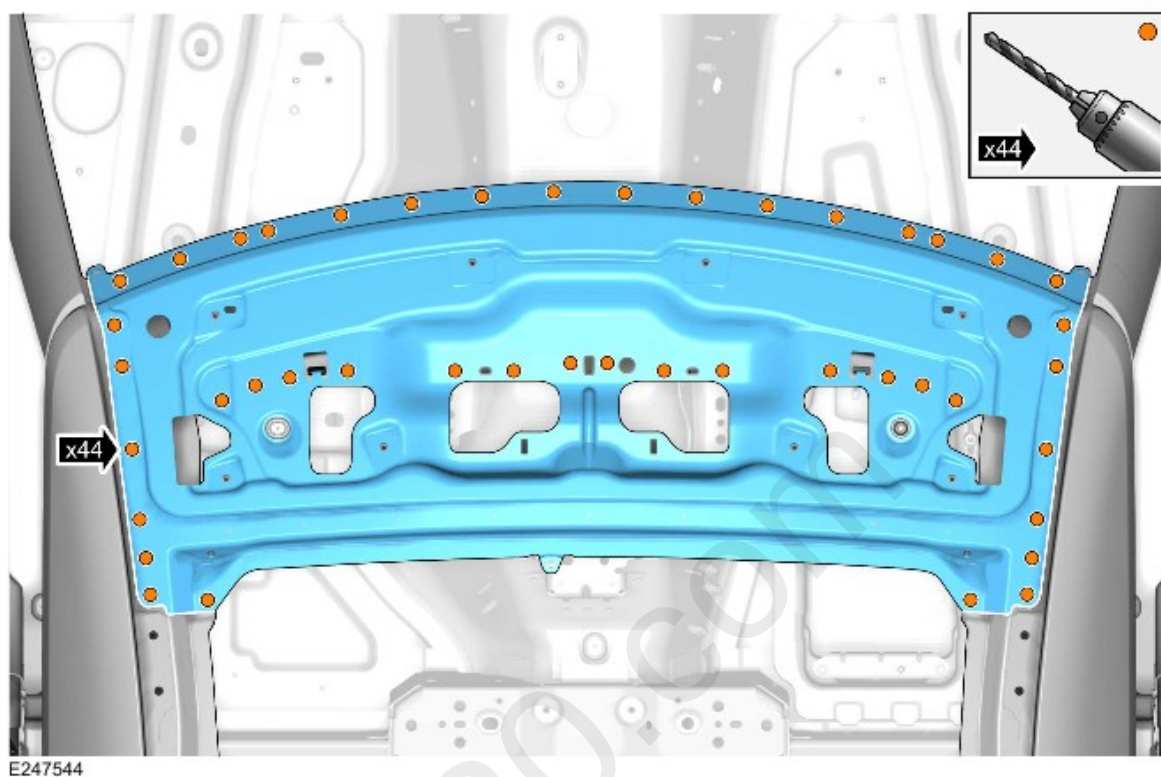

Remove the Self Piercing Rivets (SPRs) as indicated.

The following step(s) applies to:

Vehicles without roof opening panel

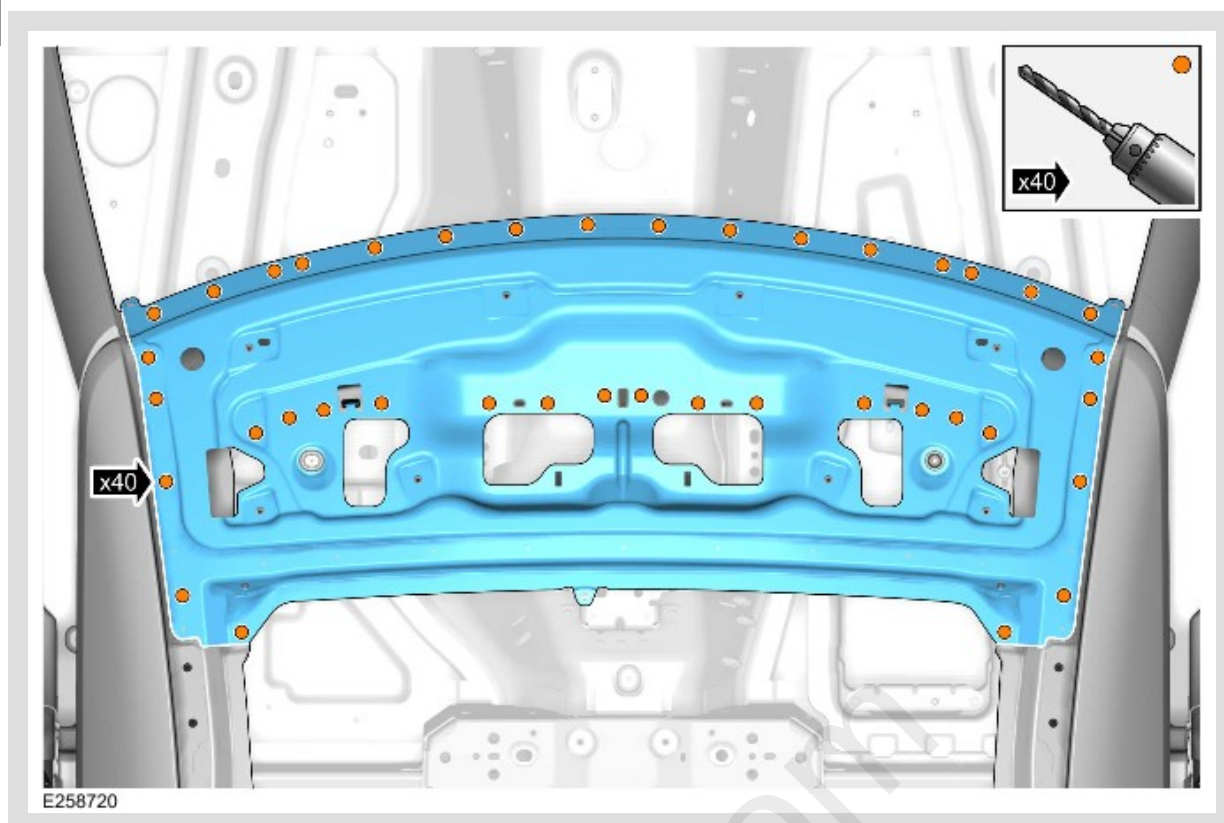

Remove the SPRs as indicated.


The following step(s) applies to:

All vehicles

12.

 NOTE:

Where Flow Form Rivet (FFR) installation is indicated. Make sure that the panel is planished before removal.

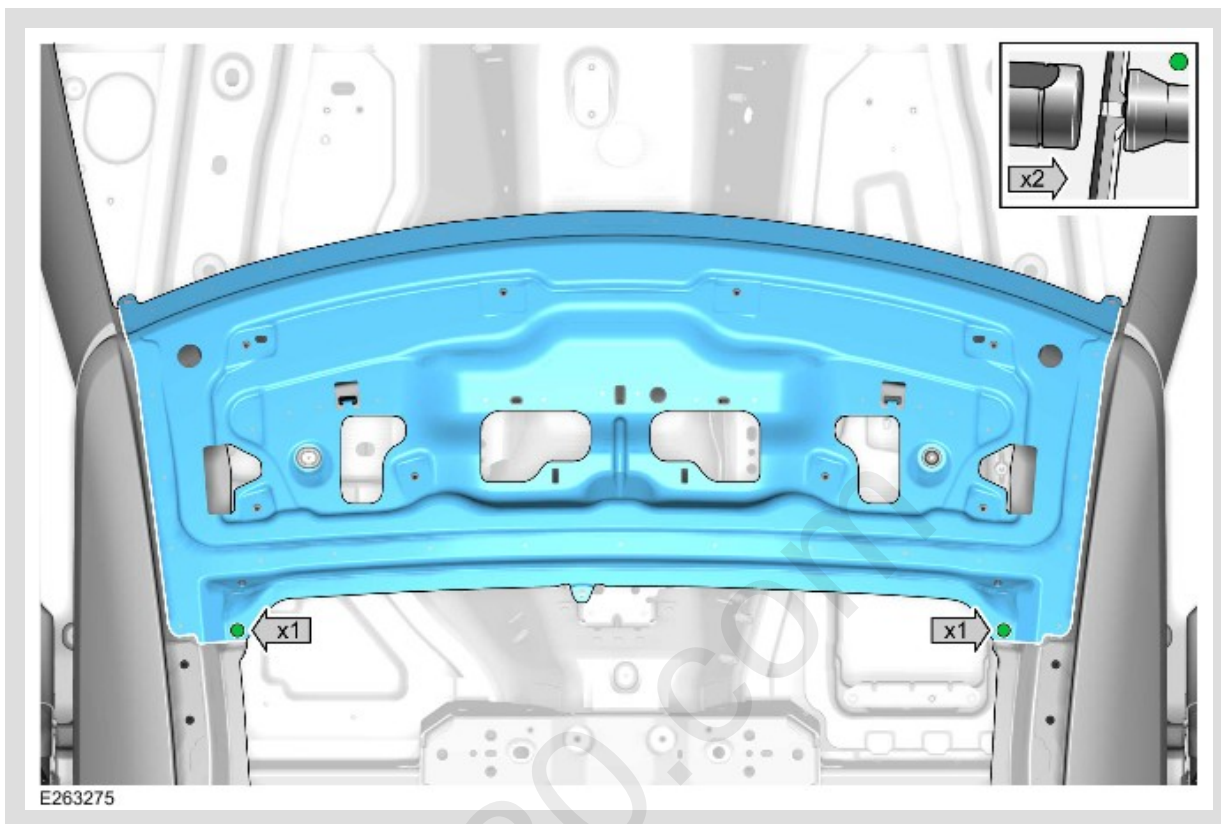

Planish the panel as indicated.

13. Carefully separate the joints and remove the windshield header panel upper.

INSTALLATION

The following step(s) applies to:

All vehicles

 CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- Breakstem Fastener (BSF) installation involves using the JLR approved BSF installation tool and requires a hole diameter of 6.5 mm.
- Self Piercing Rivet (SPR) installation requires using the JLR approved SPR tool.
- Flow Form Rivet (FFR) installation requires using the JLR approved FFR installation tool.
- Refer to Adhesive, Fixings and Consumables for further information on Flow Form Rivets (FFRs).

1. Remove the rivet remnants.


2. Dress the flanges where necessary.

3. Offer up the new windshield header panel upper and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

The following step(s) applies to:

Vehicles with roof opening panel

4.

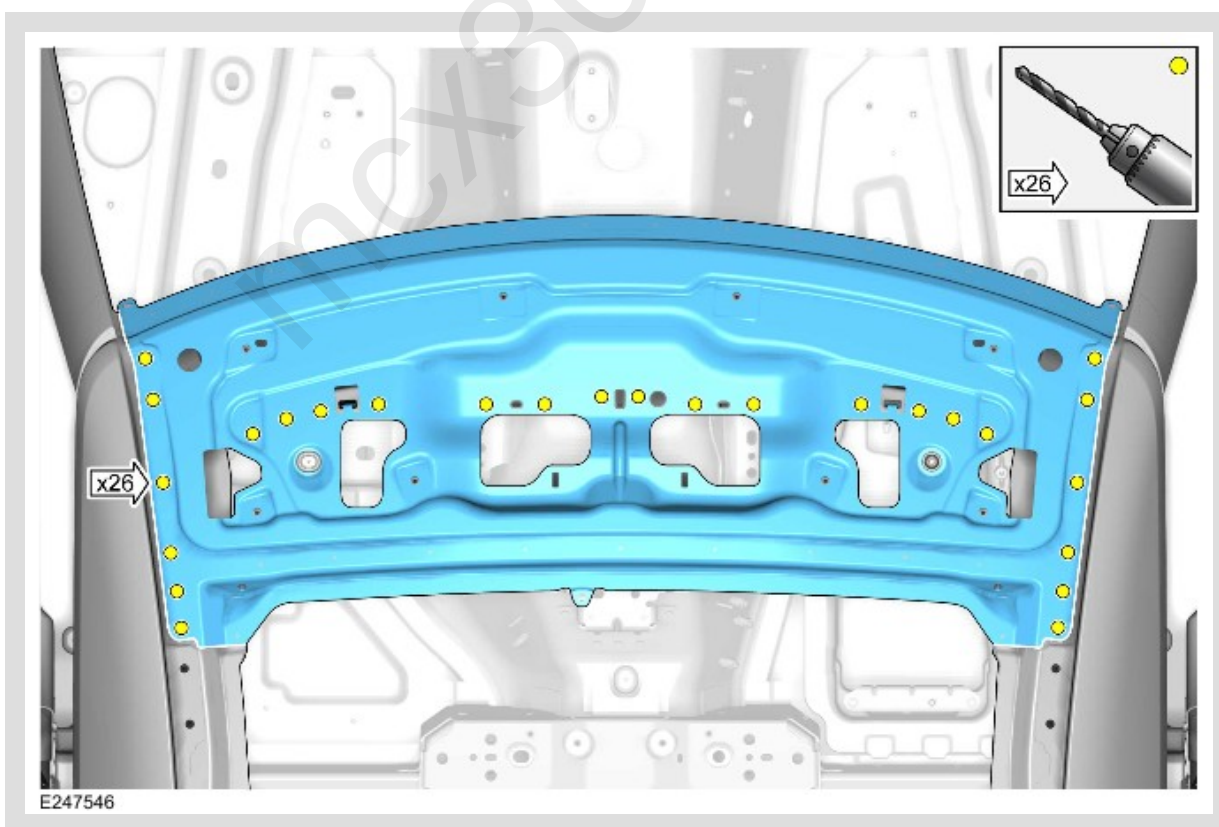


Drill holes where the Breakstem Fasteners (BSFs) are to be installed as indicated.

5.

NOTE:


Make sure that the JLR recommended countersink tool is used for this step.

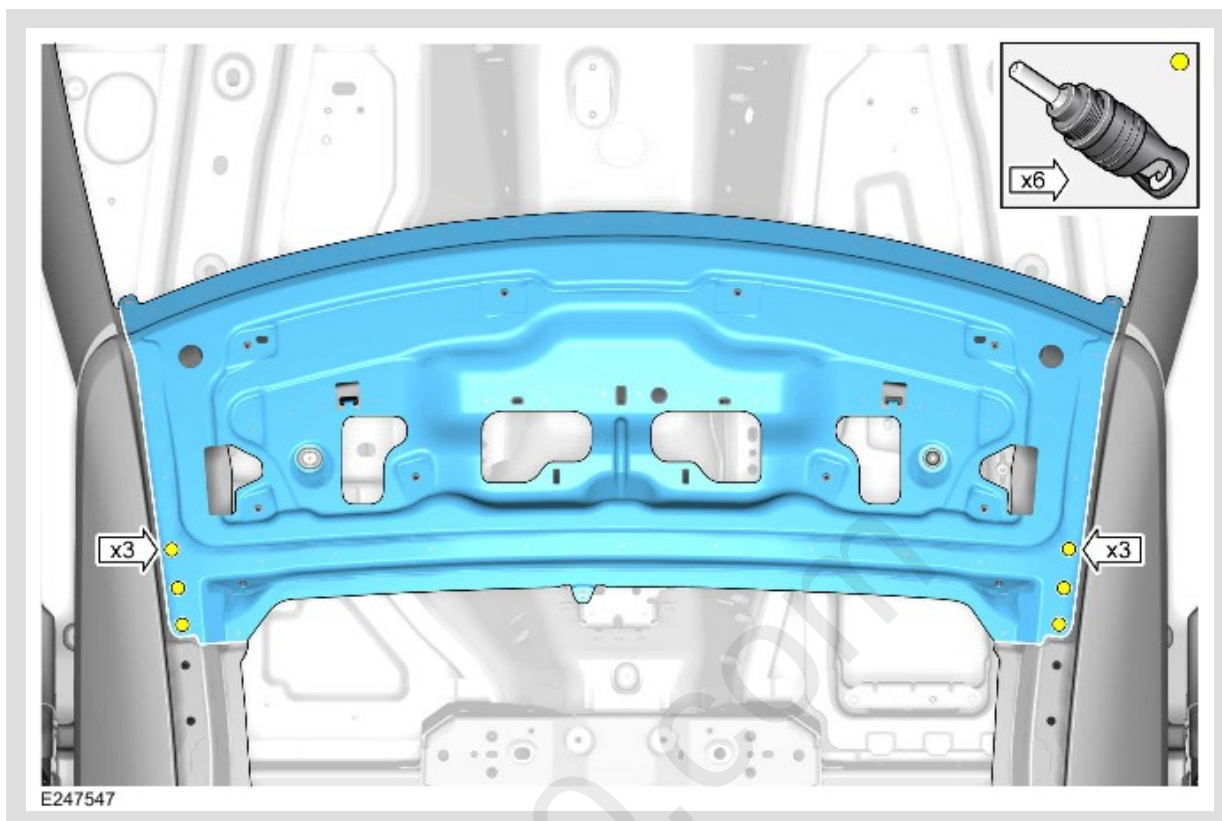

Countersink the holes to a depth of 2 mm as indicated.

The following step(s) applies to:

Vehicles without roof opening panel

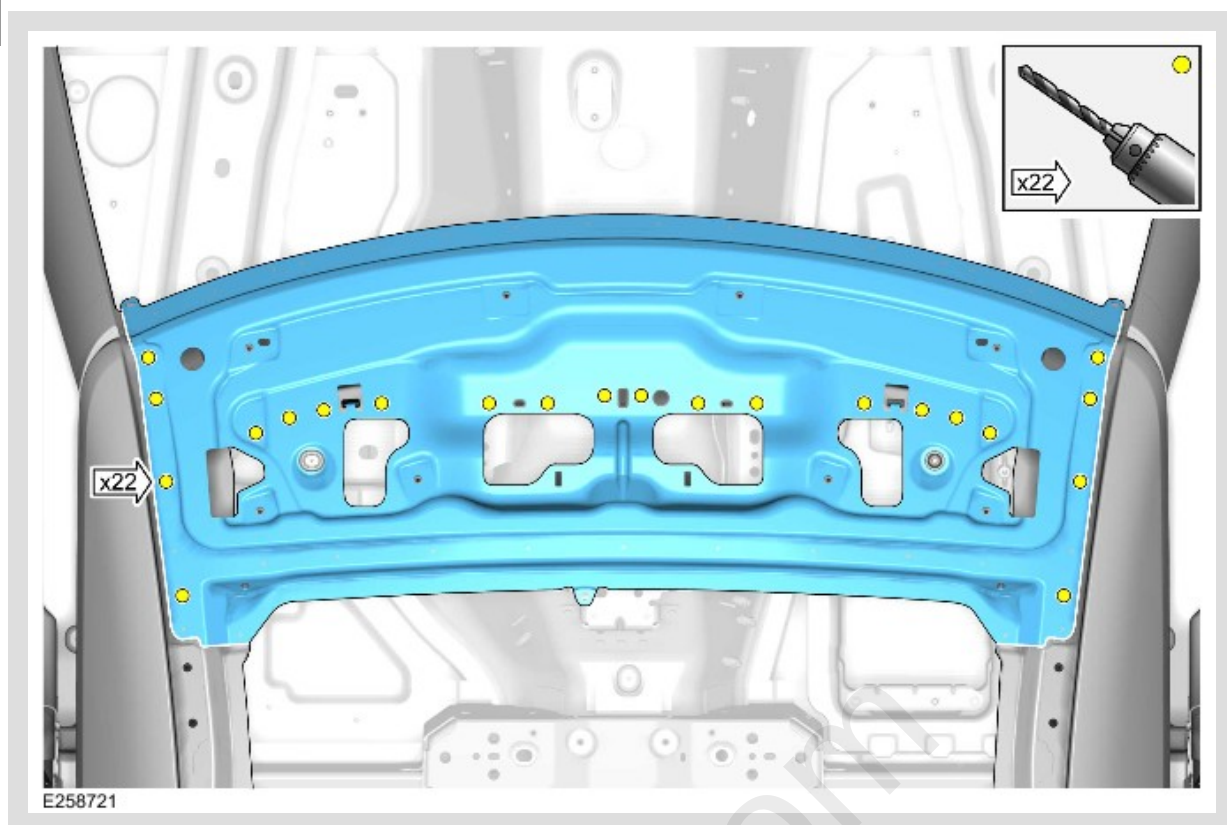


Drill holes where the BSFs are to be installed as indicated.

7.

NOTE:

Make sure that the JLR recommended countersink tool is used for this step.

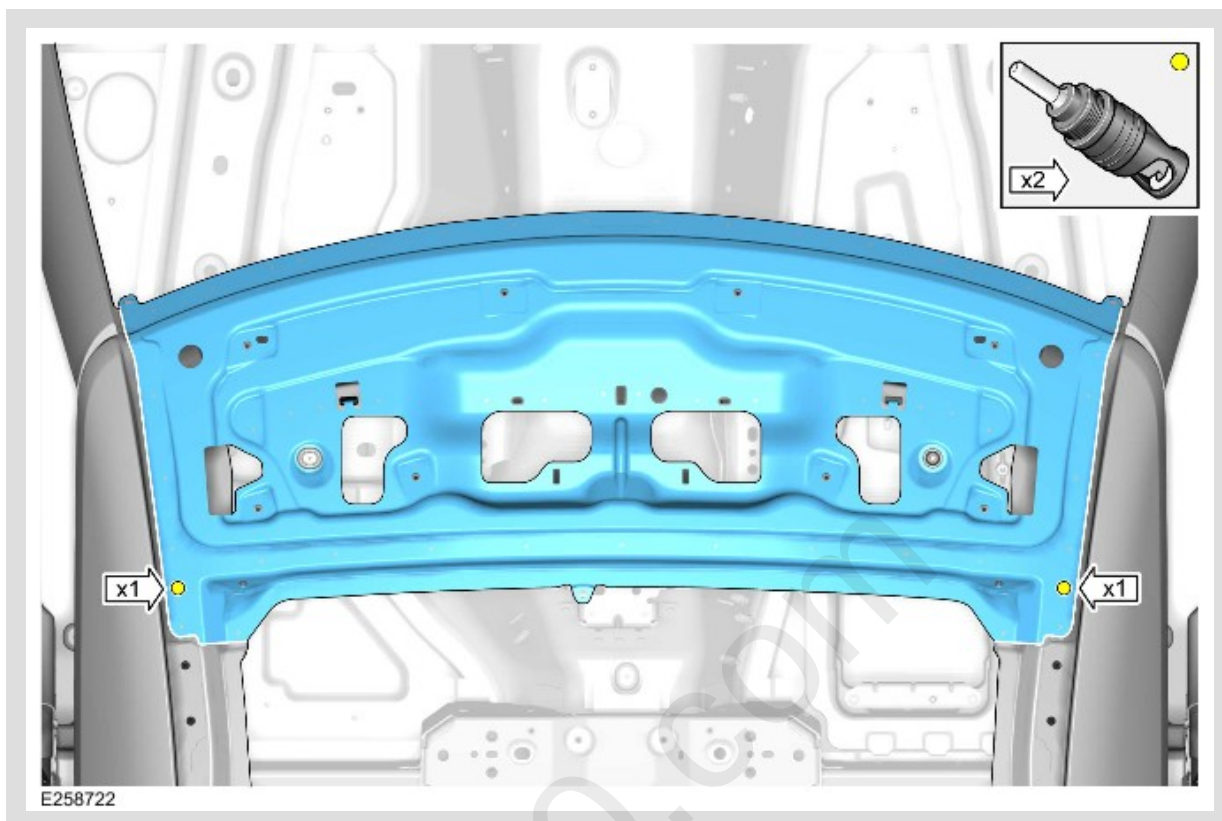


Countersink the holes to a depth of 2 mm as indicated.

The following step(s) applies to:

All vehicles

8.

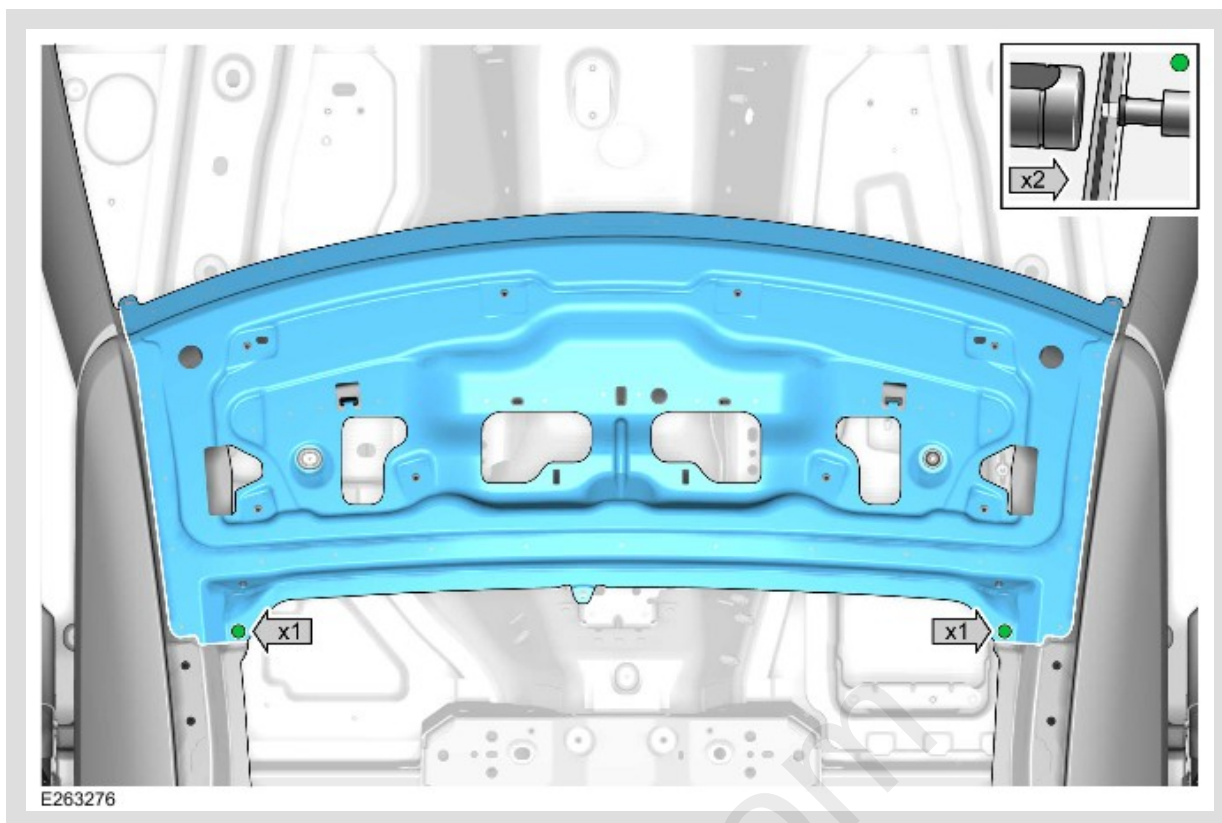

Punch calibrated holes where the Flow Form Rivets (FFRs) are to be installed as indicated.

9. Remove the new windshield header panel upper.


10. Deburr the drilled holes.

11. Clean and prepare the panel surfaces.

12.

 NOTE:

Make sure a continuous bead of adhesive surrounds the fixing holes.

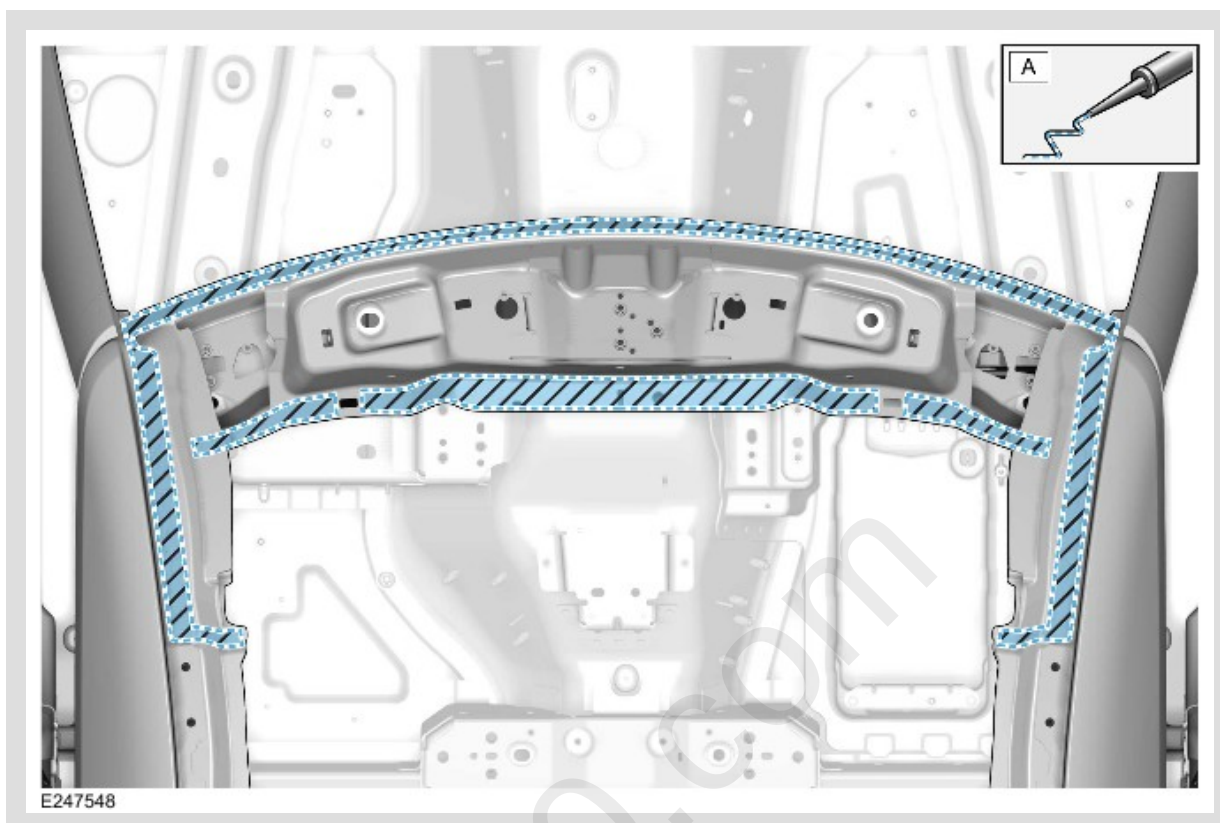

Apply a 5 mm zig zag bead of JLR recommended bonding material as indicated.


13.

Offer up the new windshield header panel upper and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

14.

NOTE:


Make sure the Breakstem Fasteners (BSFs) are installed from inside.

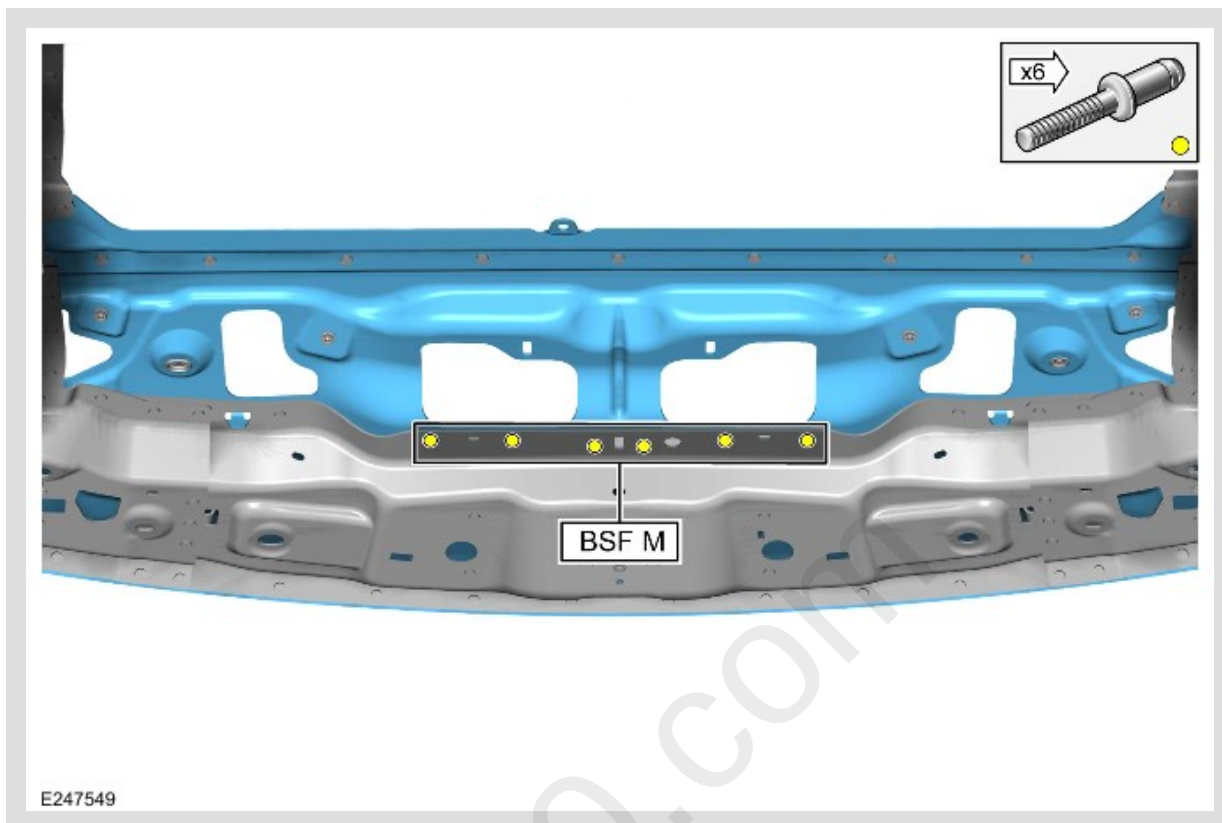

Install the BSFs from inside as indicated.


The following step(s) applies to:

Vehicles with roof opening panel

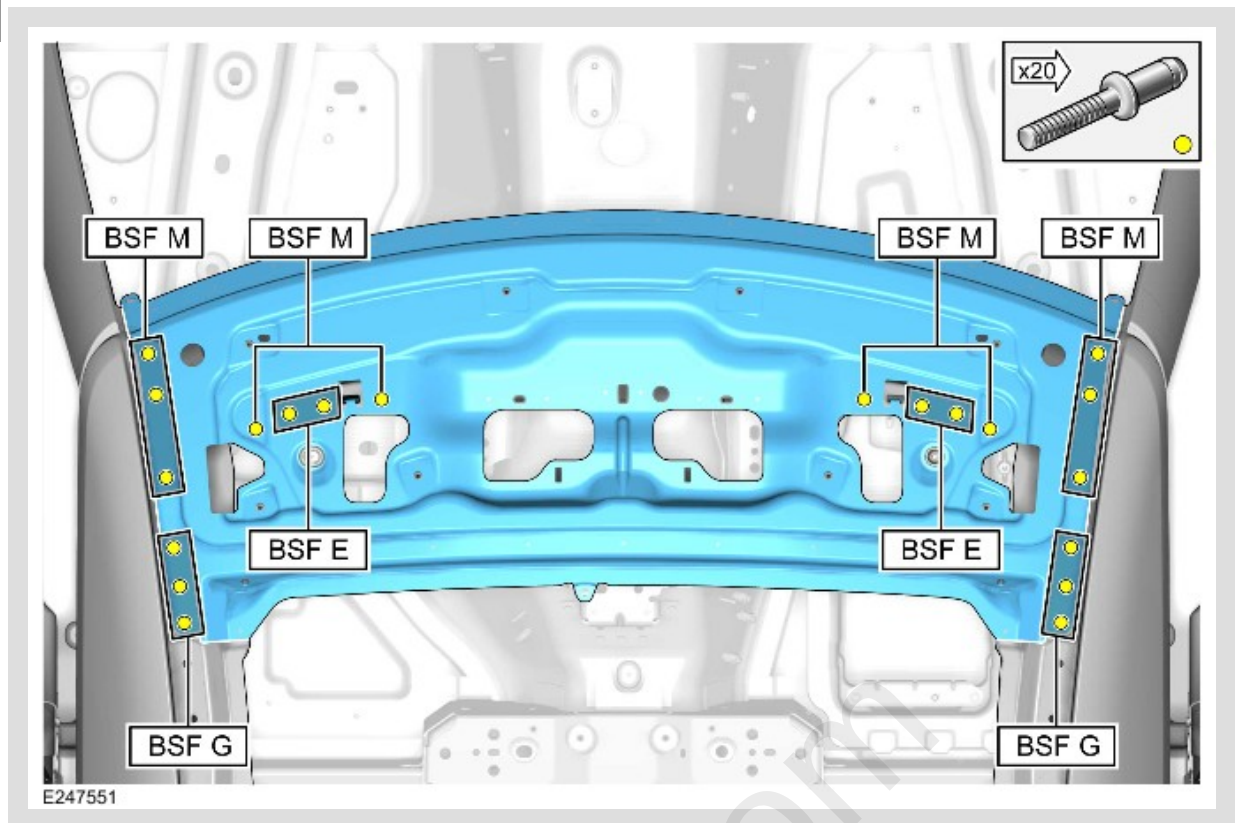

Install the BSFs as indicated.

The following step(s) applies to:
Vehicles without roof opening panel

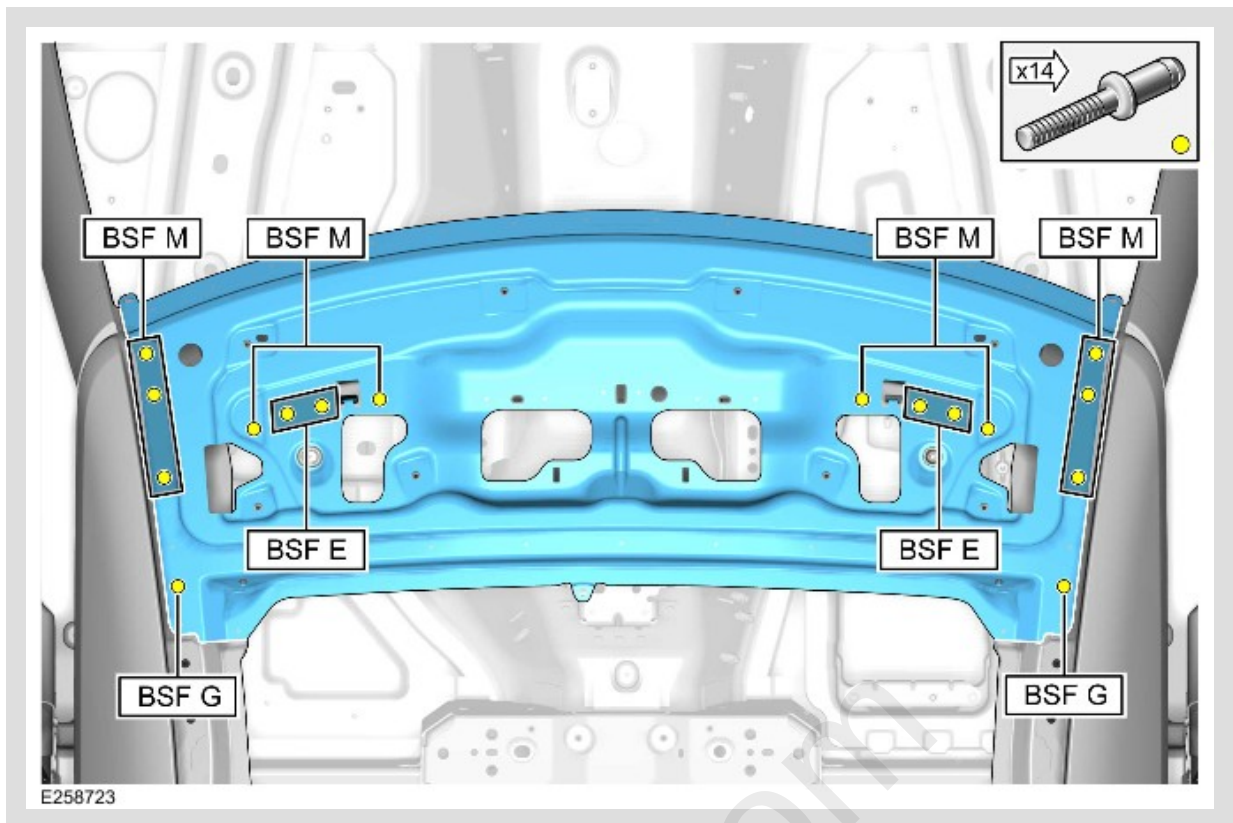


Install the BSFs as indicated.

The following step(s) applies to:

All vehicles

17.

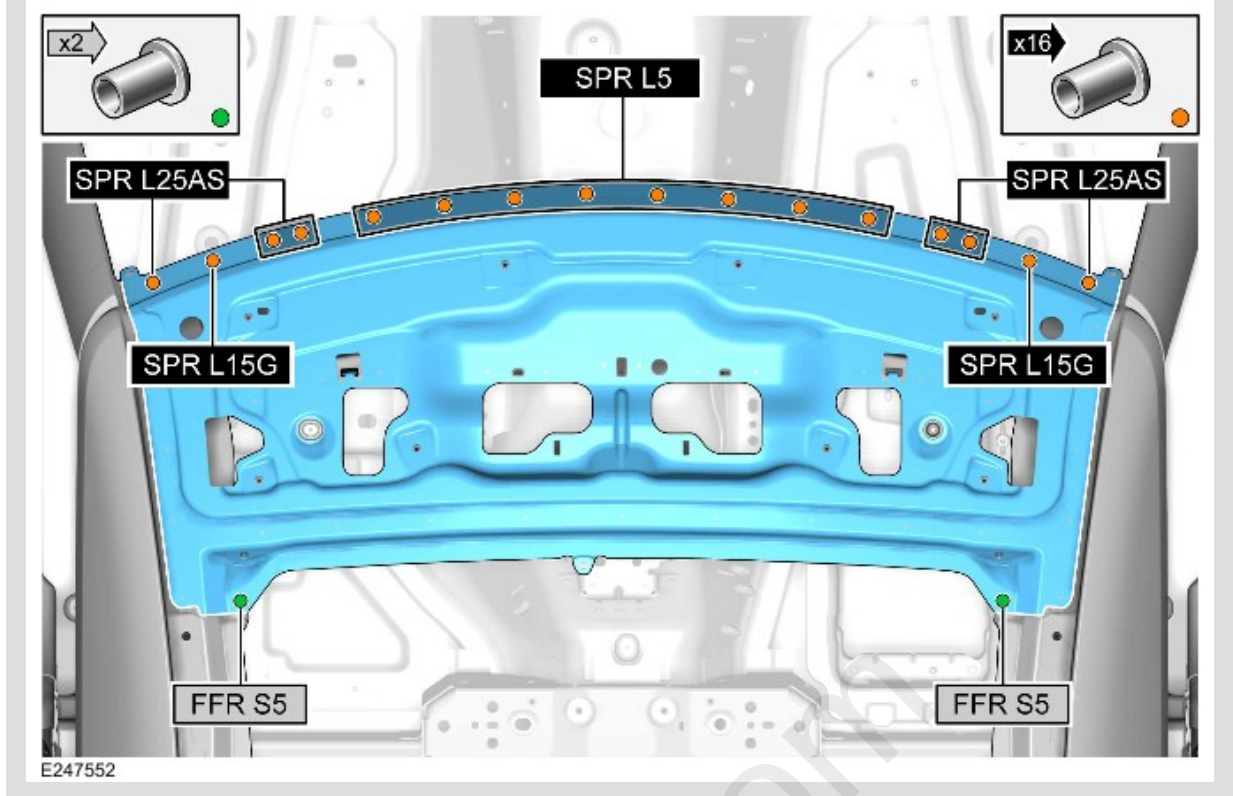

Install the FFRs and Self Piercing Rivets (SPRs) as indicated.

18. Remove any excess adhesive.

19. Make sure that all installed fixings are sealed using a JLR recommended sealer.

20. Make sure that any open or exposed panel joints are correctly sealed.

21. Make sure corrosion protection is applied to all areas affected by the repair.

NOTE:

The installation of associated panels and components is the reversal of the removal procedure.

22. For additional installation information

Refer to: [Roof Panel - 90, Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

23. For additional installation information

Refer to: [Front Roof Trim Panel](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

24.



NOTE:

Vehicles With: Roof Opening Panel

For additional installation information

Refer to: [Roof Opening Panel Frame](#) (501-17 Roof Opening Panel, Removal and Installation).

25.

For additional installation information

Refer to: [Windshield](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

cmjjaGFyZG1vcnRvbjeyMDIwLTASLTE4VDE5OjE4OjA5LjlxN1o7OTAuMTk5LjEyMS4xMTc7

mcx30.com