

PUBLISHED: 06-APR-2020
2020.0 DEFENDER (LE), 501-29

SIDE PANEL SHEET METAL REPAIRS

SIDE PANEL REINFORCEMENT FRONT ASSEMBLY - 110 (G2423998)

mcx30.com

REMOVAL

The following step(s) applies to:

All vehicles




NOTE:

In this procedure the side panel reinforcement front assembly is installed in conjunction with:

- Windshield header panel upper
- Rear header panel upper
- Front roof reinforcement panel
- Front center roof reinforcement panel
- Rear center roof reinforcement panel.

1.

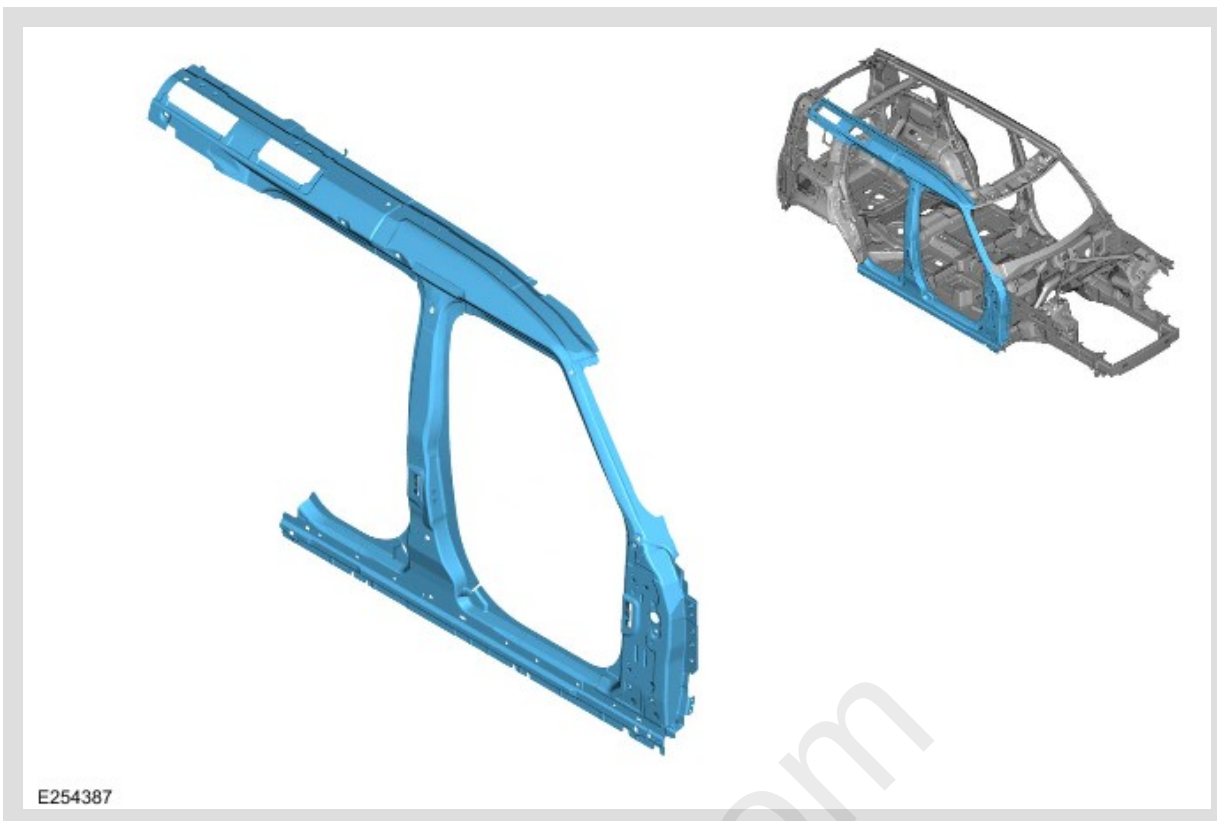

The side panel reinforcement front assembly is serviced as indicated.

2.

Before commencing this procedure make sure that you are aware of all Health and Safety requirements. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.



NOTES:

- Where Breakstem Fastener (BSF) removal is instructed remove the fastener shaft with a 4 mm punch and remove the head with a 6.5 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Self Piercing Rivet (SPR) removal is instructed use either the Jaguar Land Rover (JLR) approved SPR tool or a 5.3 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Flow Form Rivet (FFR) removal is instructed, remove the head and then remove the shaft with a punch. Clean the holes to make sure they are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- To make sure that the vehicle is correctly aligned it must be placed on a JLR approved alignment jig.

When installing the side panel reinforcement front assembly make sure that you are aware of the methods, tools and fixings used in this procedure.

Refer to: [Body Repairs](#) (501-25A Body Repairs - General Information, Description and Operation).

Refer to: [Adhesives, Fixings and Consumables](#) (501-25A Body Repairs - General Information, Description and Operation).

4. For additional information on the fixings required to complete this procedure
Refer to: [Specifications - 110](#) (501-29 Side Panel Sheet Metal Repairs, Specifications).

5. For additional removal information.
Refer to: [Windshield Header Panel Upper - 110](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

6. For additional removal information.
Refer to: [Rear Header Panel Upper - 110](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).


7. For additional removal information.
Refer to: [Front Roof Reinforcement Panel - Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

8. For additional removal information.
Refer to: [Front Center Roof Reinforcement Panel - Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

9. For additional removal information.
Refer to: [Rear Center Roof Reinforcement Panel - Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).


10. Release and position the wiring harness to one side.

11.

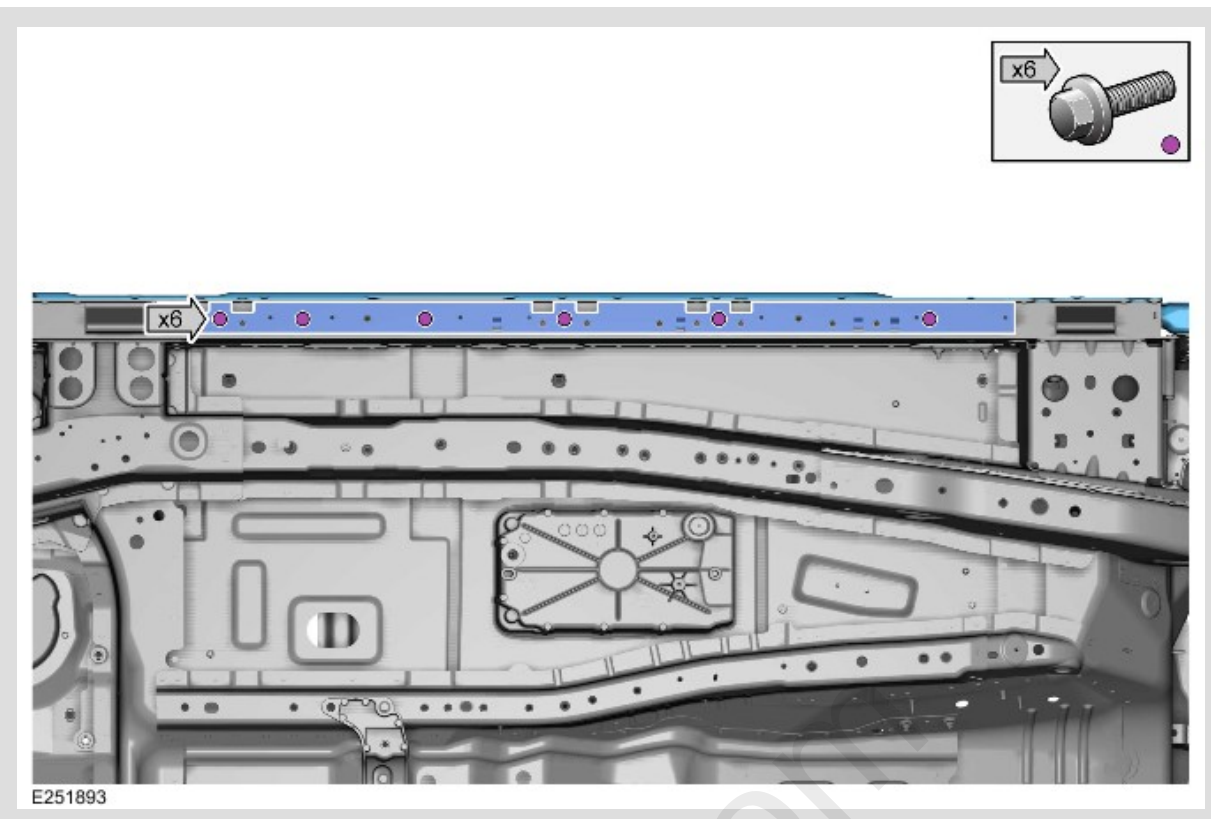


Remove the bolts and bracket as indicated.

12.

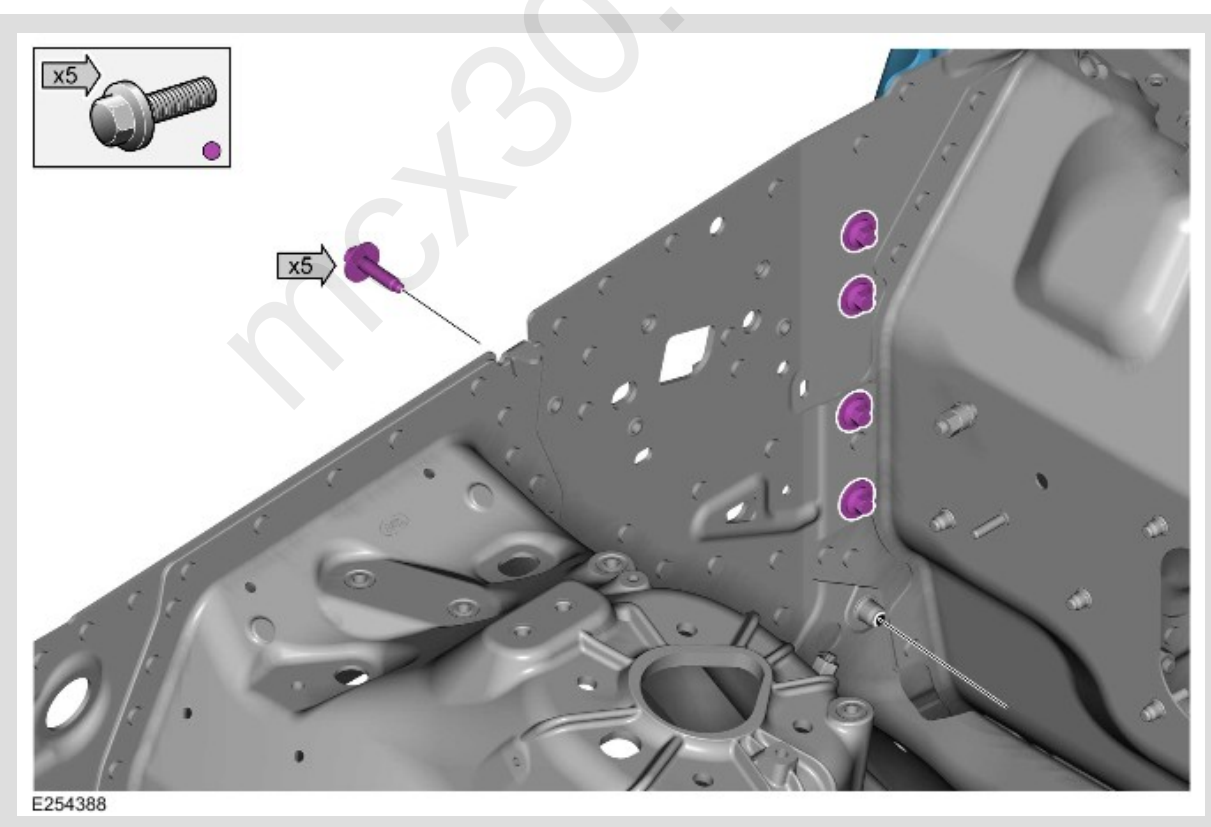

Remove the bolts as indicated.

13.

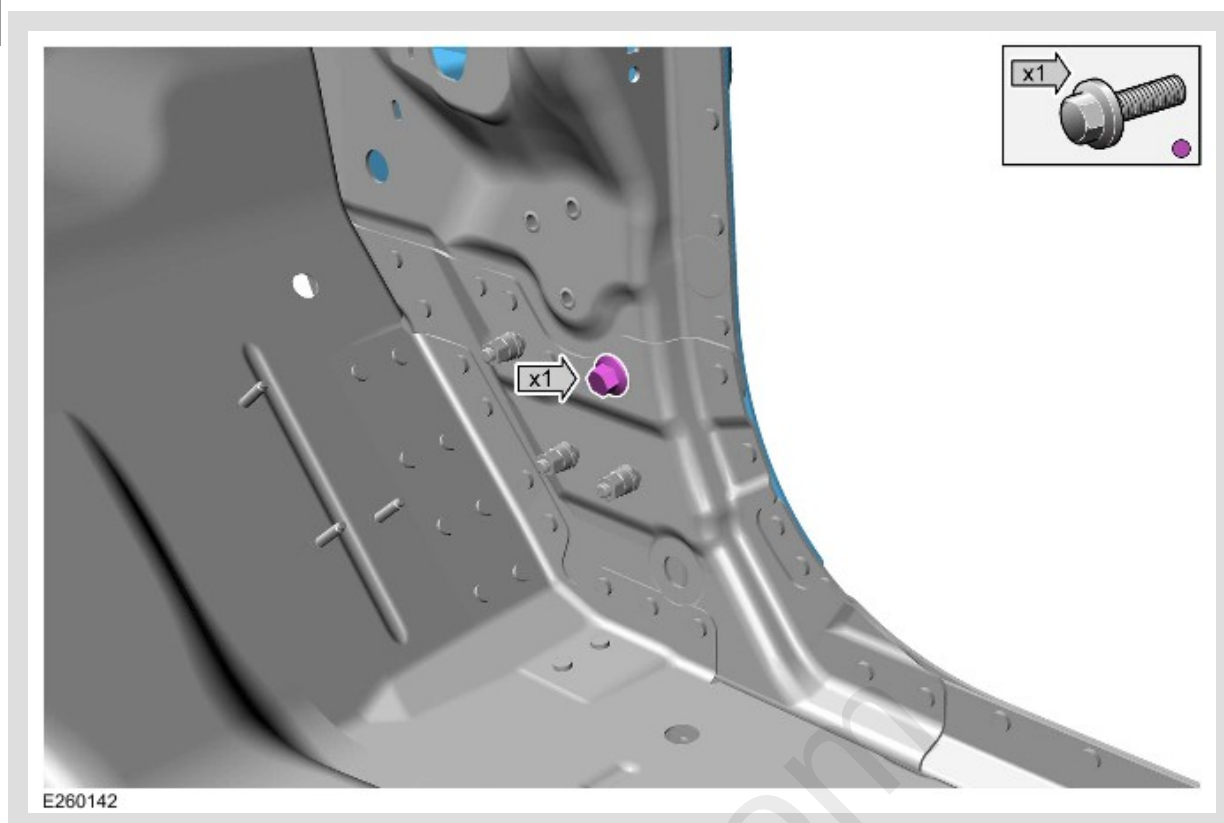


Remove the bolt as indicated.

The following step(s) applies to:


Vehicles with roof opening panel

14.

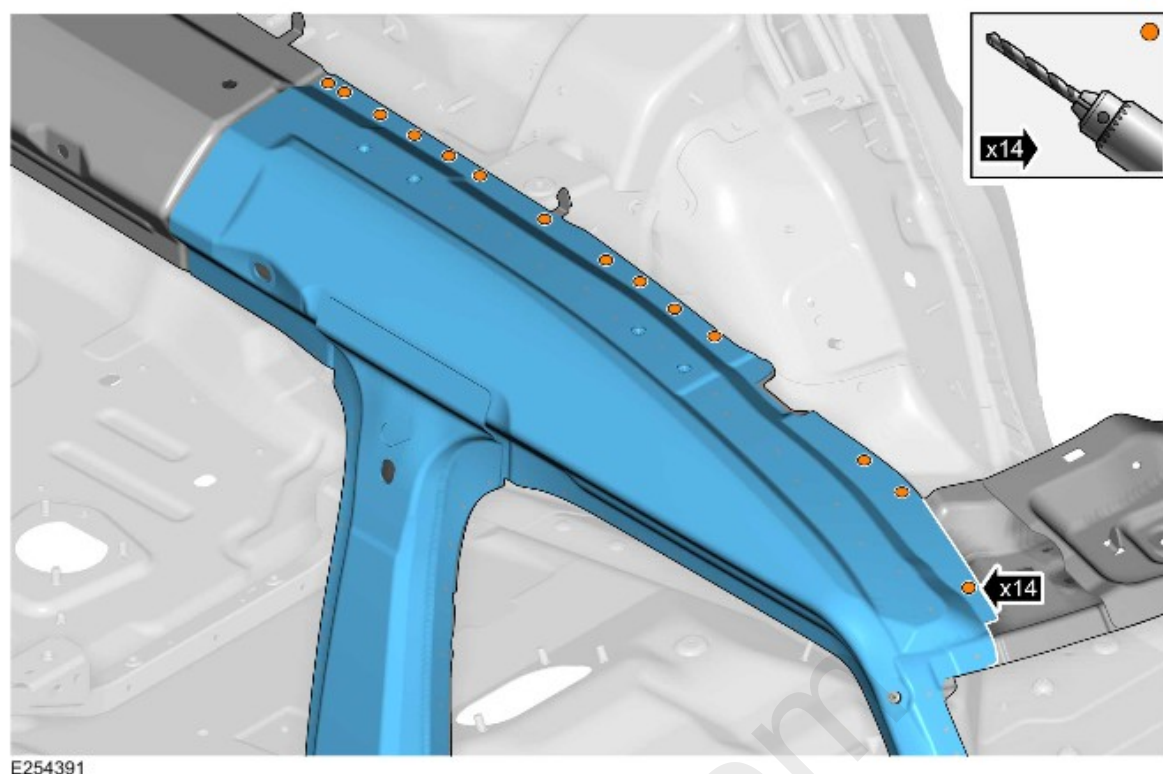

Remove the Self Piercing Rivets (SPRs) as indicated.


15.

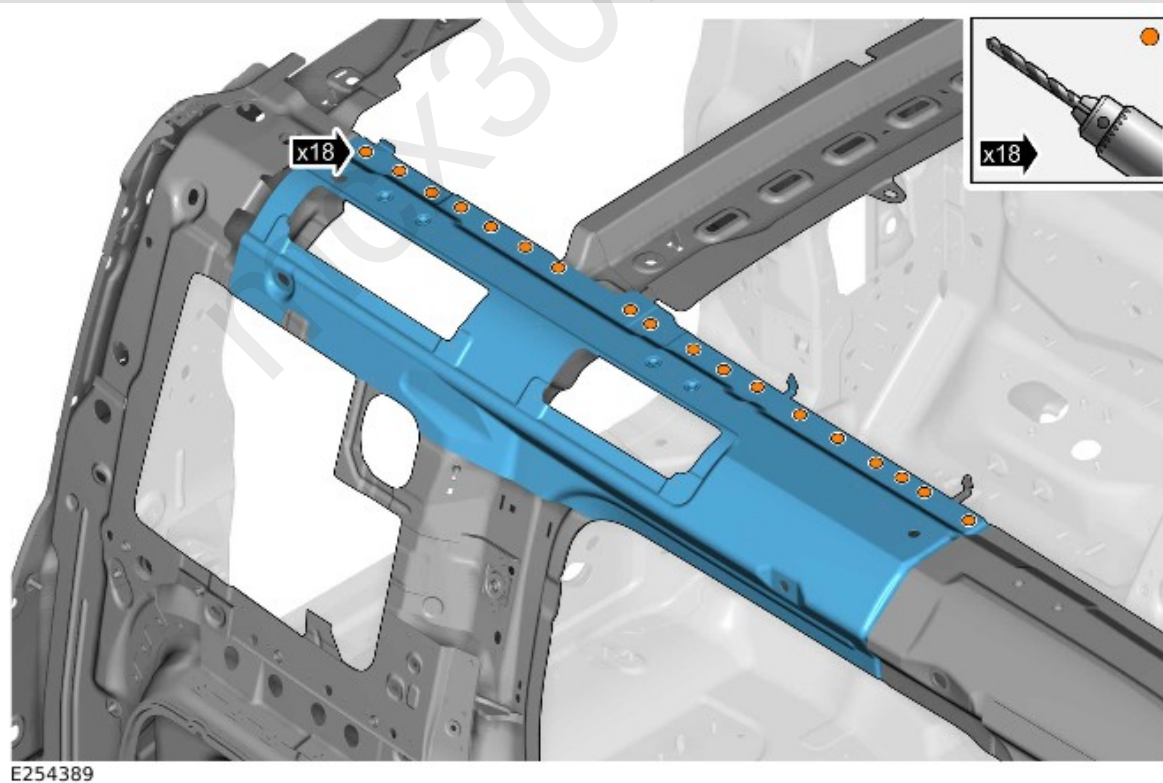

Remove the SPRs as indicated.


The following step(s) applies to:
Vehicles without roof opening panel

16.

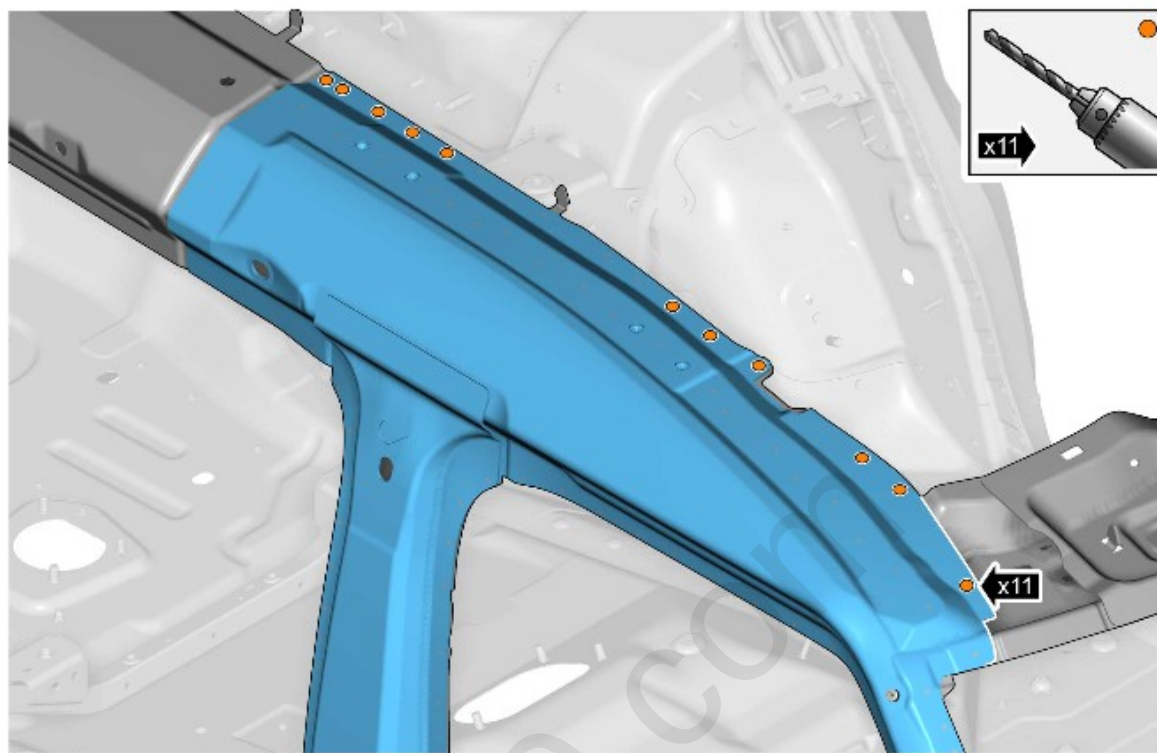

E254392

Remove the SPRs as indicated.

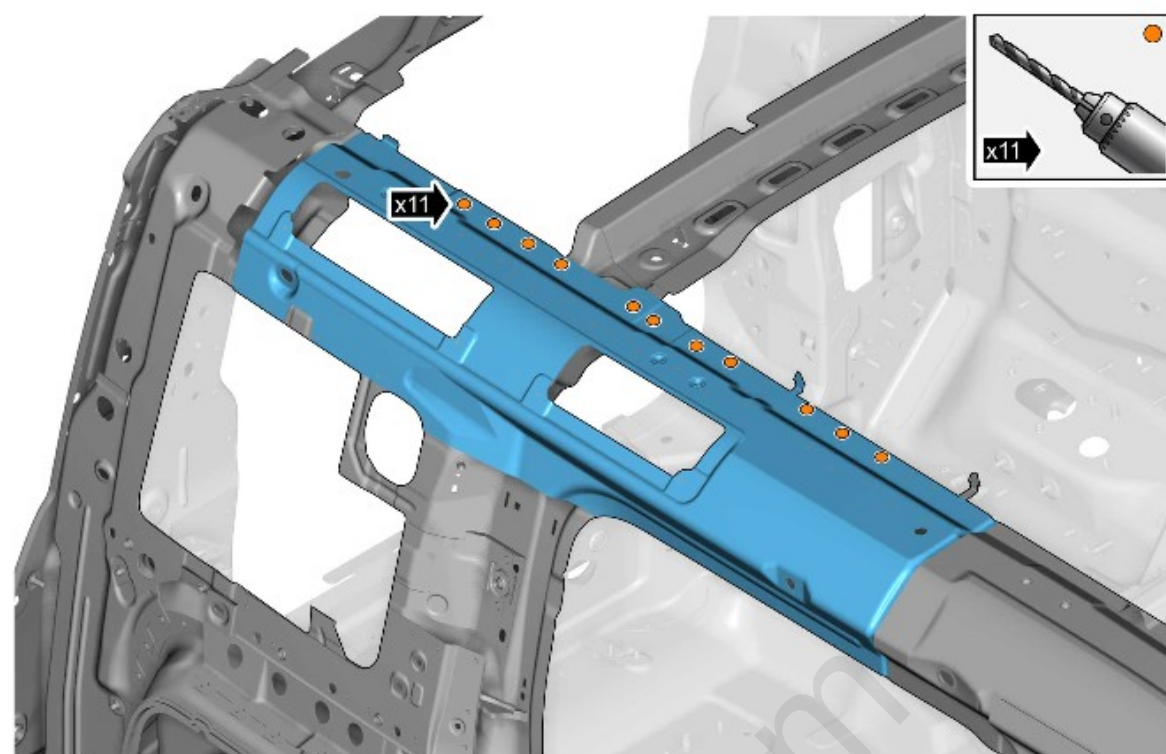

E254390

Remove the SPRs as indicated.

The following step(s) applies to:


All vehicles

18.




Remove the SPRs as indicated.

19.

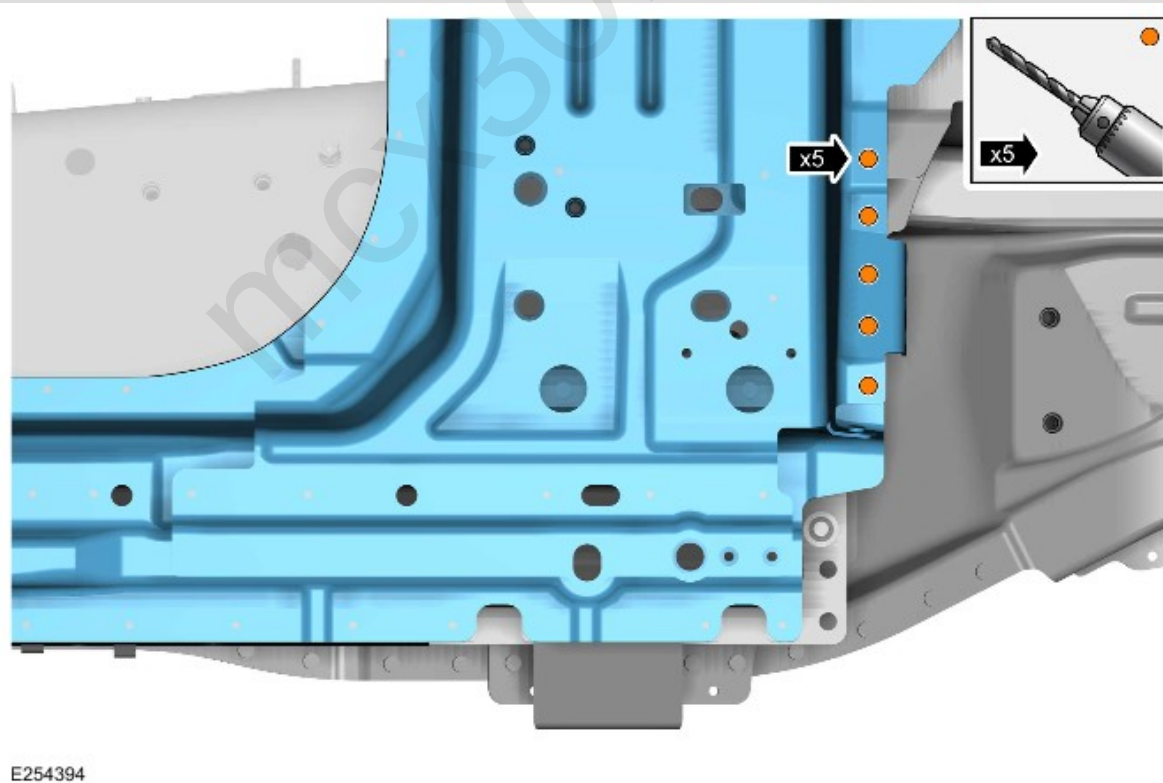

Remove the SPRs as indicated.

20.

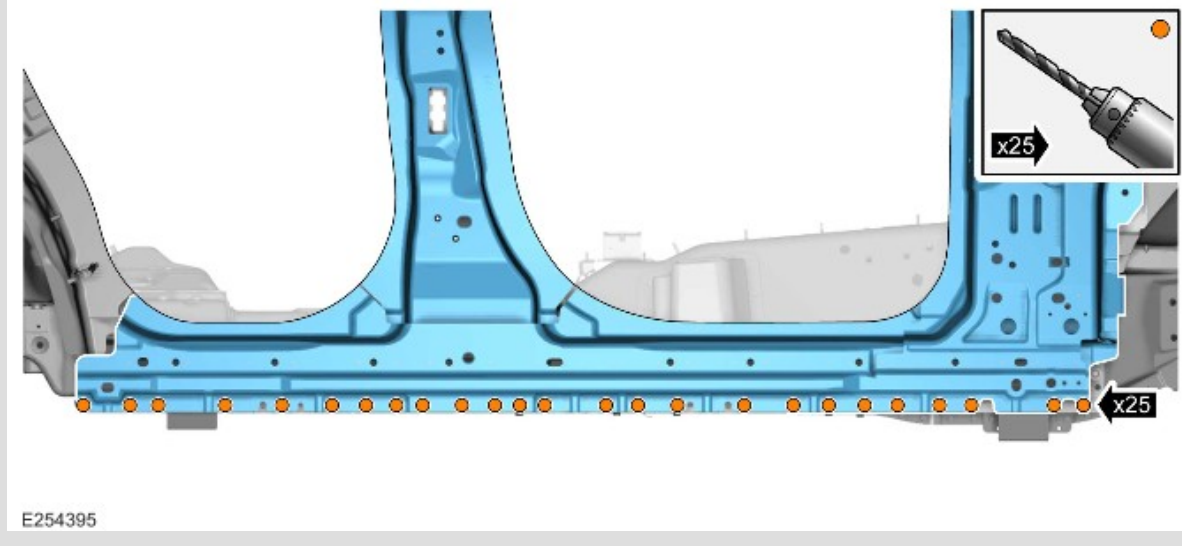


Remove the SPRs as indicated.

21.

NOTE:

Where Flow Form Rivet (FFR) installation is indicated. Make sure that the panel is planished before removal.

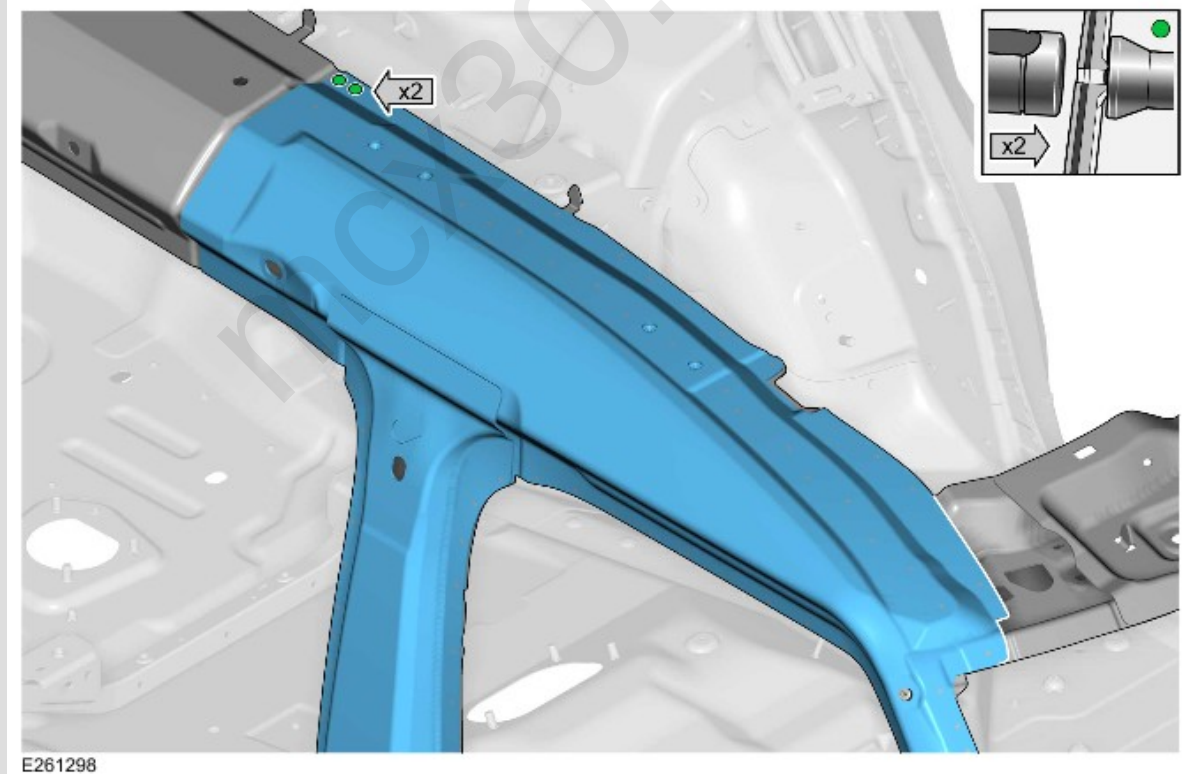

Planish the panel as indicated.




⚠ CAUTION:

This step will require the aid of another technician as the panel will be heavy.

△ NOTE:

Avoid where possible damaging the Noise, Vibration and Harshness (NVH) material located behind the side panel reinforcement front assembly.

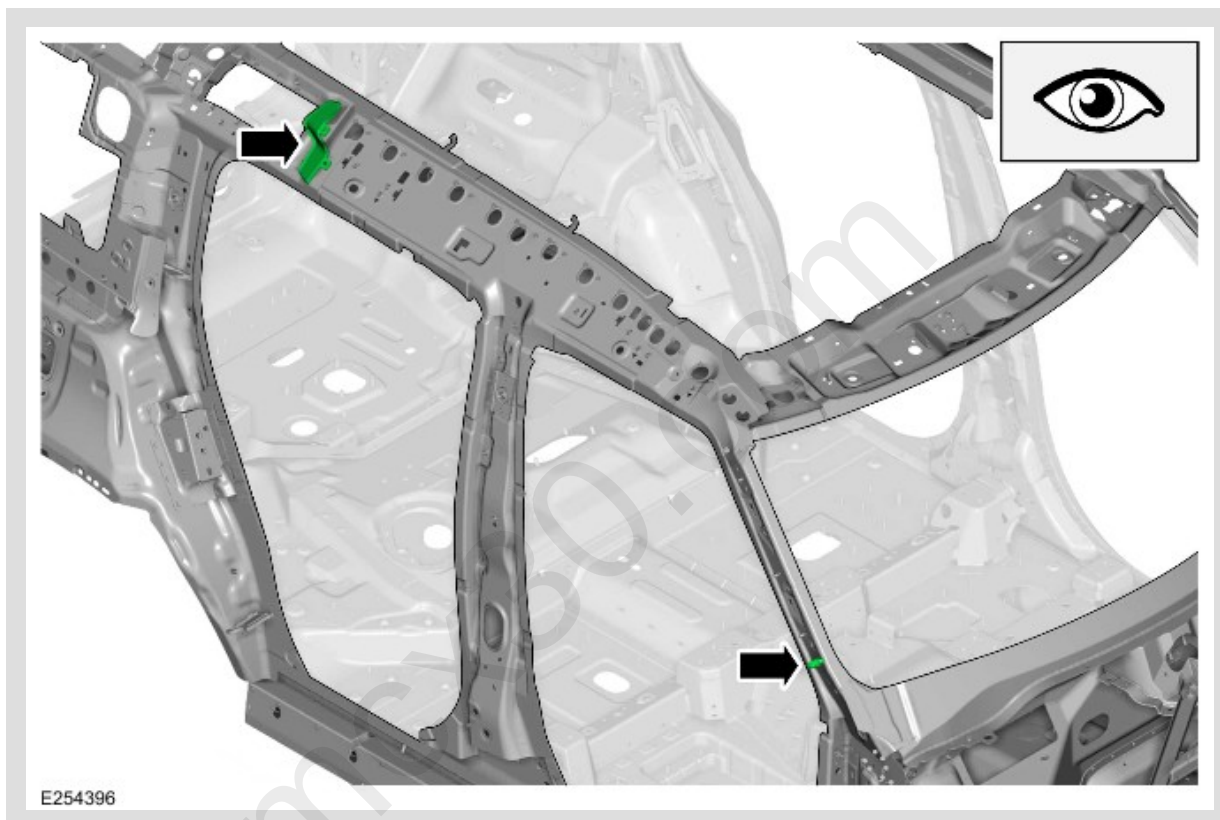

Carefully separate the joints and remove the side panel reinforcement front assembly.

INSTALLATION

The following step(s) applies to:

All vehicles

⚠ CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:

- Breakstem Fastener (BSF) installation involves using the JLR approved BSF installation tool and requires a hole diameter of 6.5 mm.
- Self Piercing Rivet (SPR) installation requires using the JLR approved SPR tool.
- Flow Form Rivet (FFR) installation requires using the JLR approved FFR installation tool.
- Refer to Adhesive, Fixings and Consumables for further information on Flow Form Rivets (FFRs).

1. Remove the rivet remnants.

2. Dress the flanges where necessary.

3.




CAUTION:

This step will require the aid of another technician as the panel will be heavy.

Offer up the new side panel reinforcement front assembly and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

4.

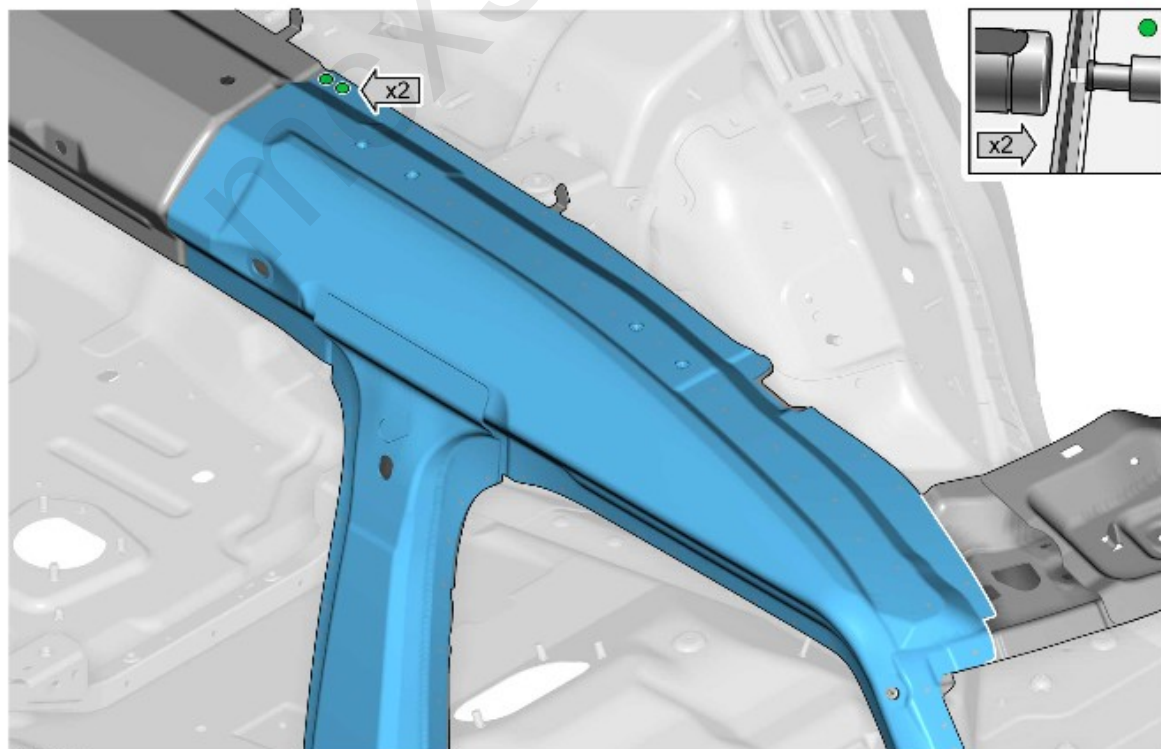

E263467

Punch calibrated holes where the Flow Form Rivets (FFRs) are to be installed as indicated.




Drill holes where the Breakstem Fasteners (BSFs) are to be installed as indicated.

6.


 NOTE:

Make sure that the JLR recommended countersink tool is used for this step.

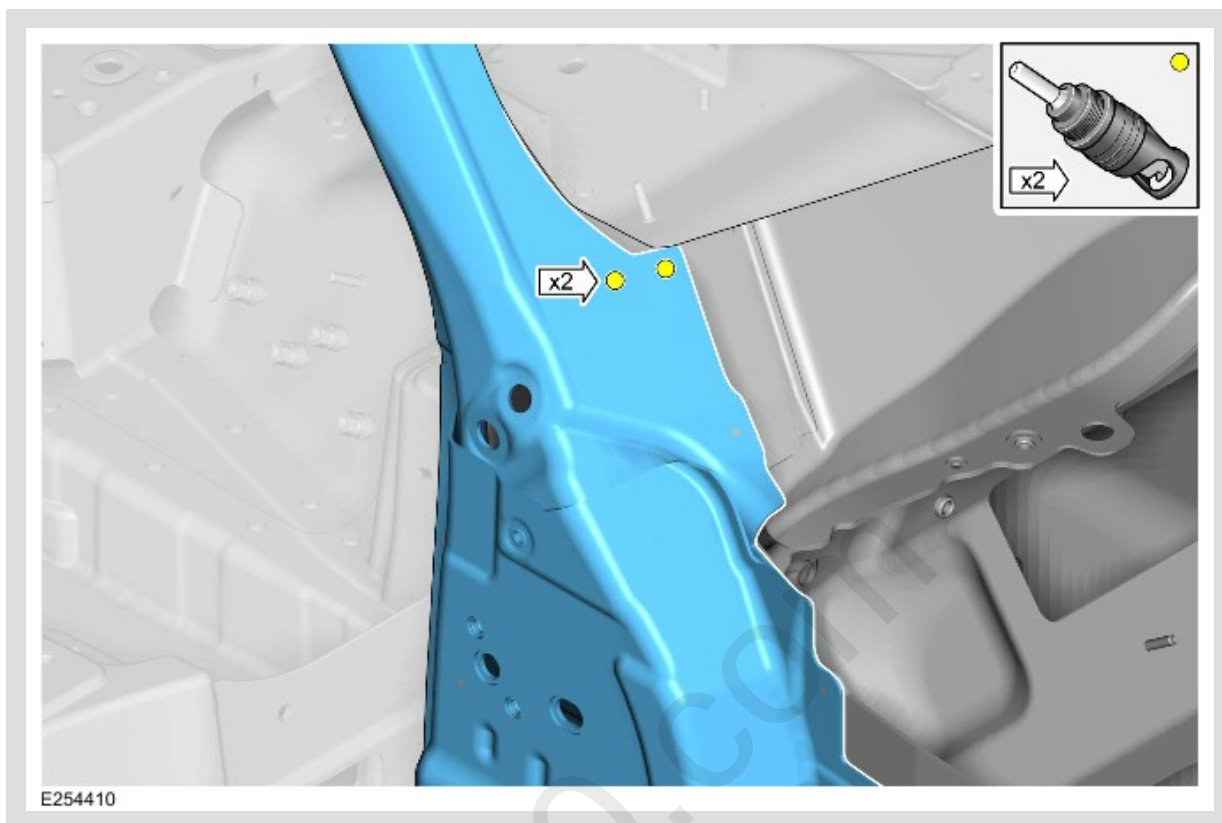


Countersink the holes to a depth of 2 mm as indicated.

7.

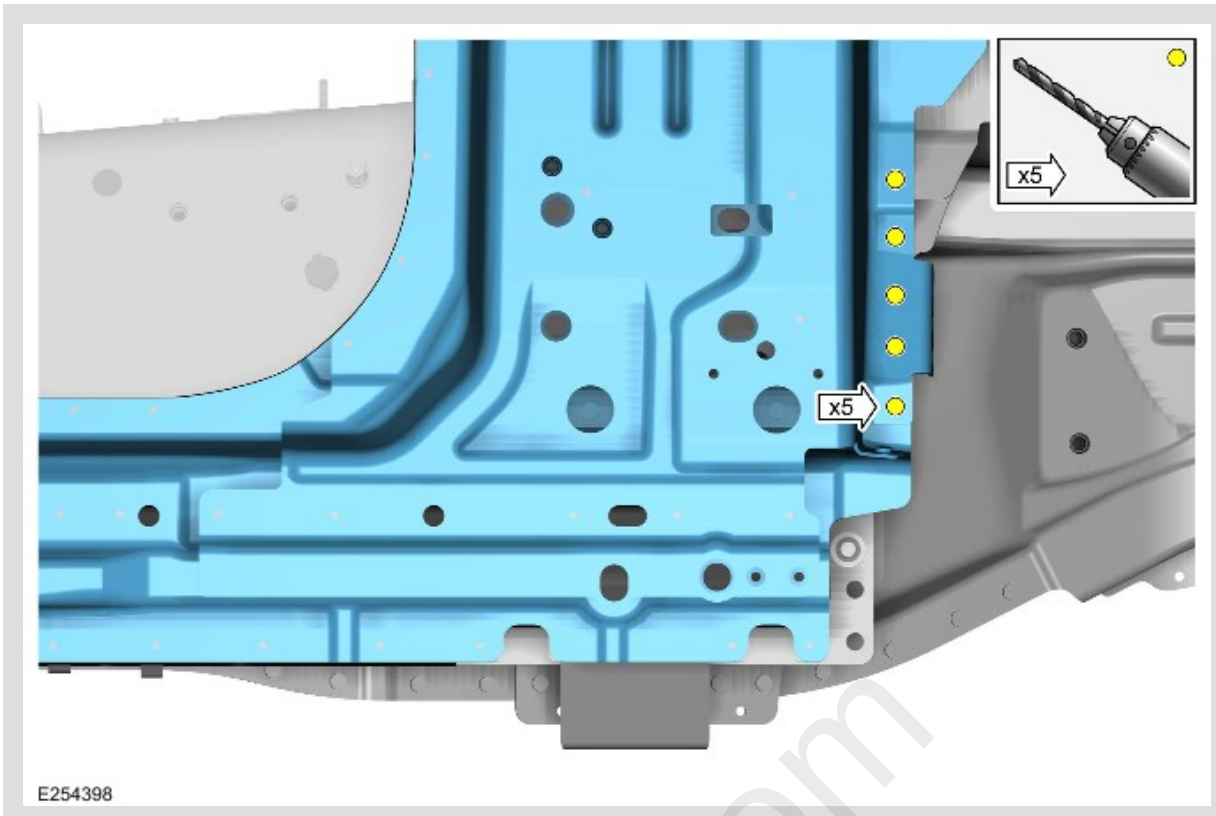

Drill holes where the BSFs are to be installed as indicated.

8.

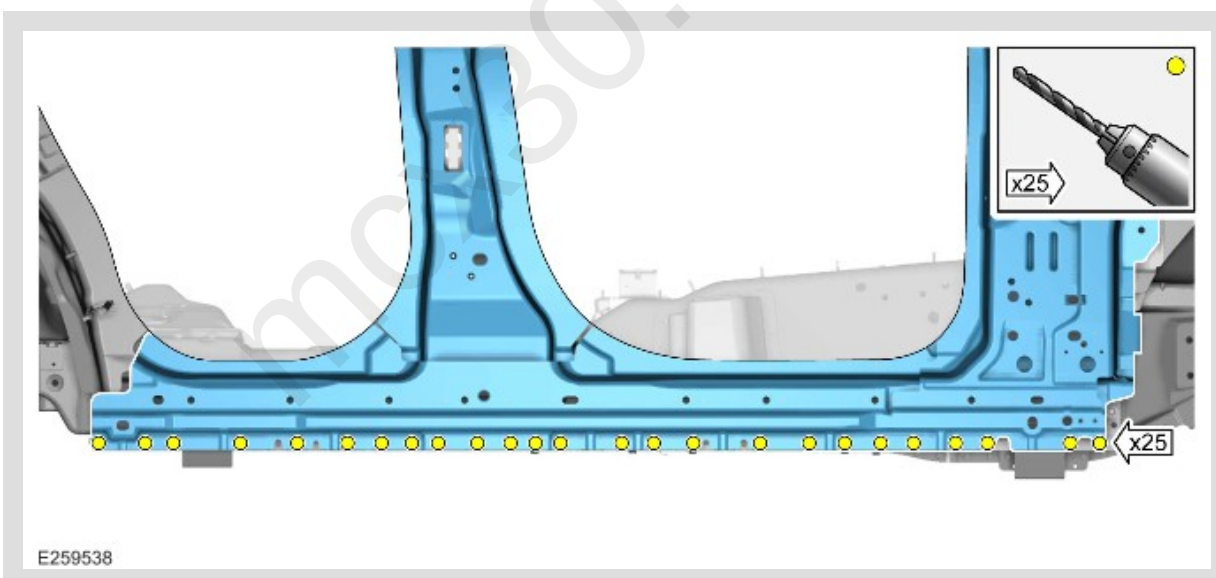

Drill holes where the BSFs are to be installed as indicated.

9.



ⓘ CAUTION:

This step will require the aid of another technician as the panel will be heavy.

Remove the new side panel reinforcement front assembly.

10. Deburr the drilled holes.


11. Clean and prepare the panel surfaces.

12.

 NOTE:

Make sure a continuous bead of adhesive surrounds the fixing holes.


- A: Apply a 5 mm zig zag bead of JLR recommended bonding material as indicated.
- B: Apply a 5 mm zig zag bead of JLR recommended flexible sealant as indicated.

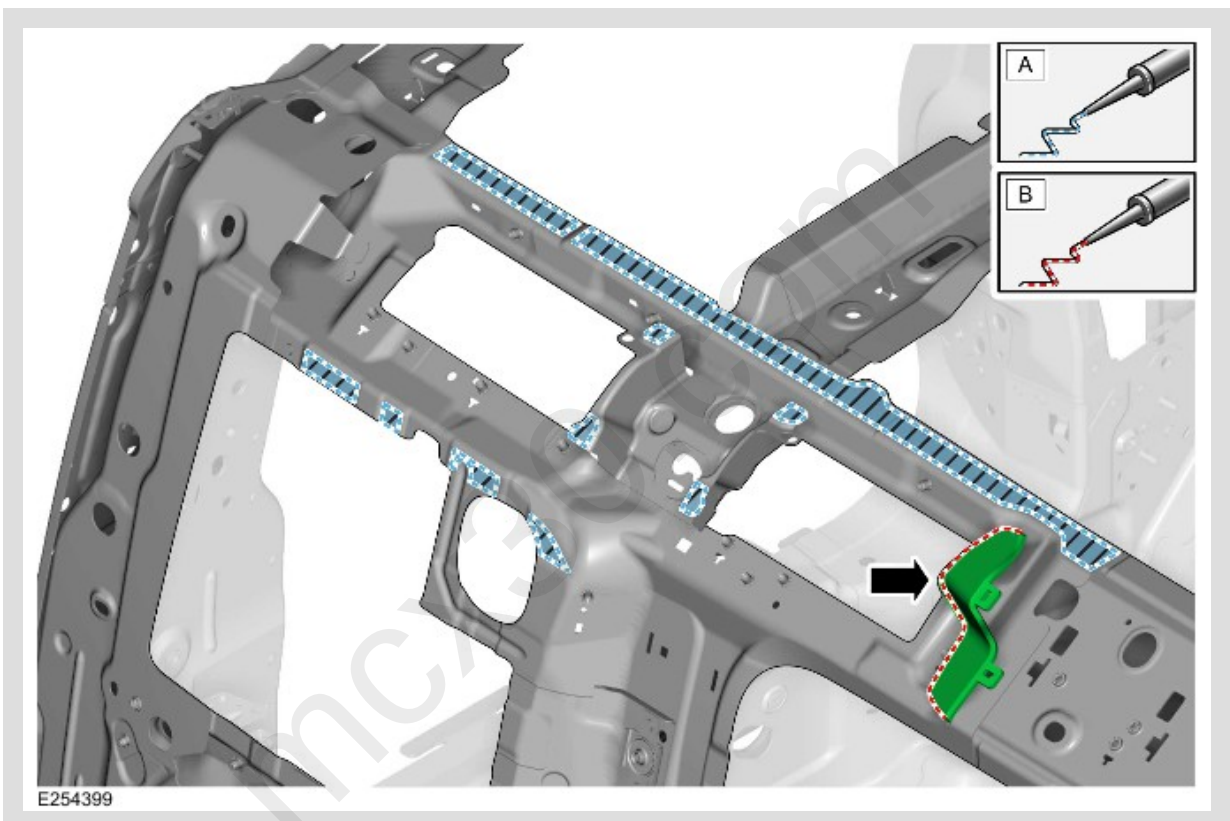

NOTE:


Make sure a continuous bead of adhesive surrounds the fixing holes.

- A: Apply a 5 mm zig zag bead of JLR recommended bonding material as indicated.
- B: Apply a 5 mm zig zag bead of JLR recommended flexible sealant as indicated.

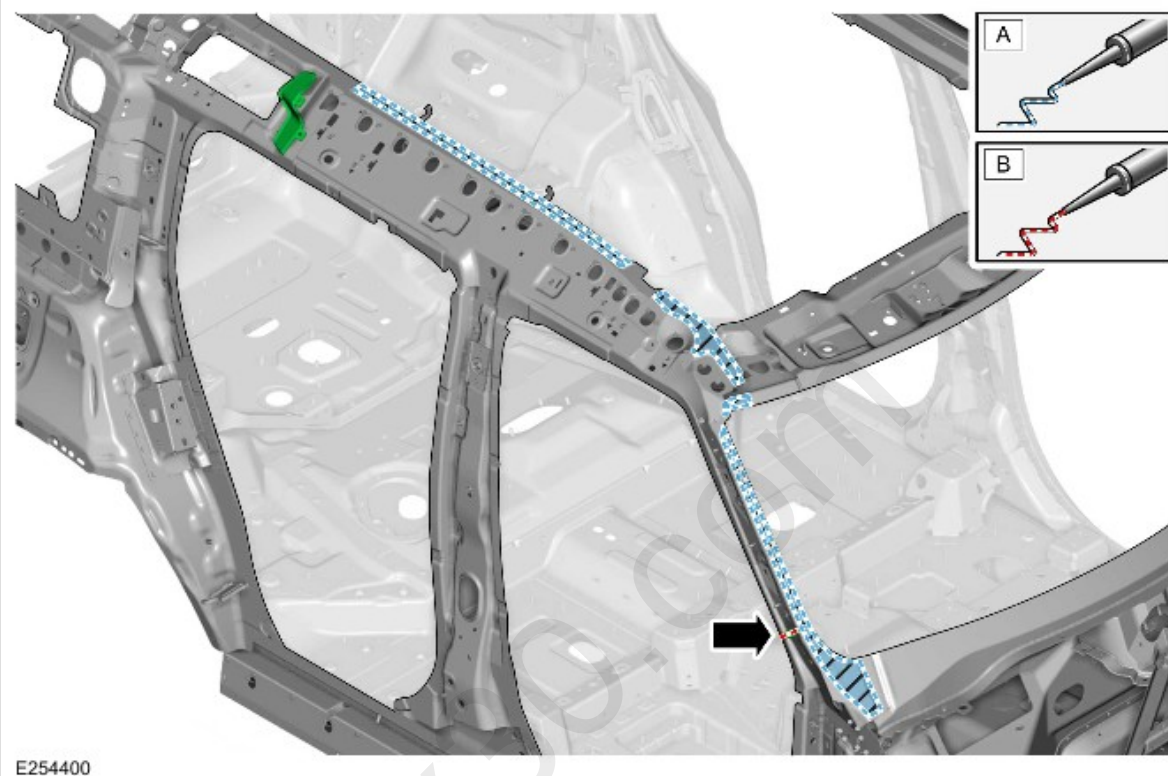

 NOTE:

Make sure a continuous bead of adhesive surrounds the fixing holes.

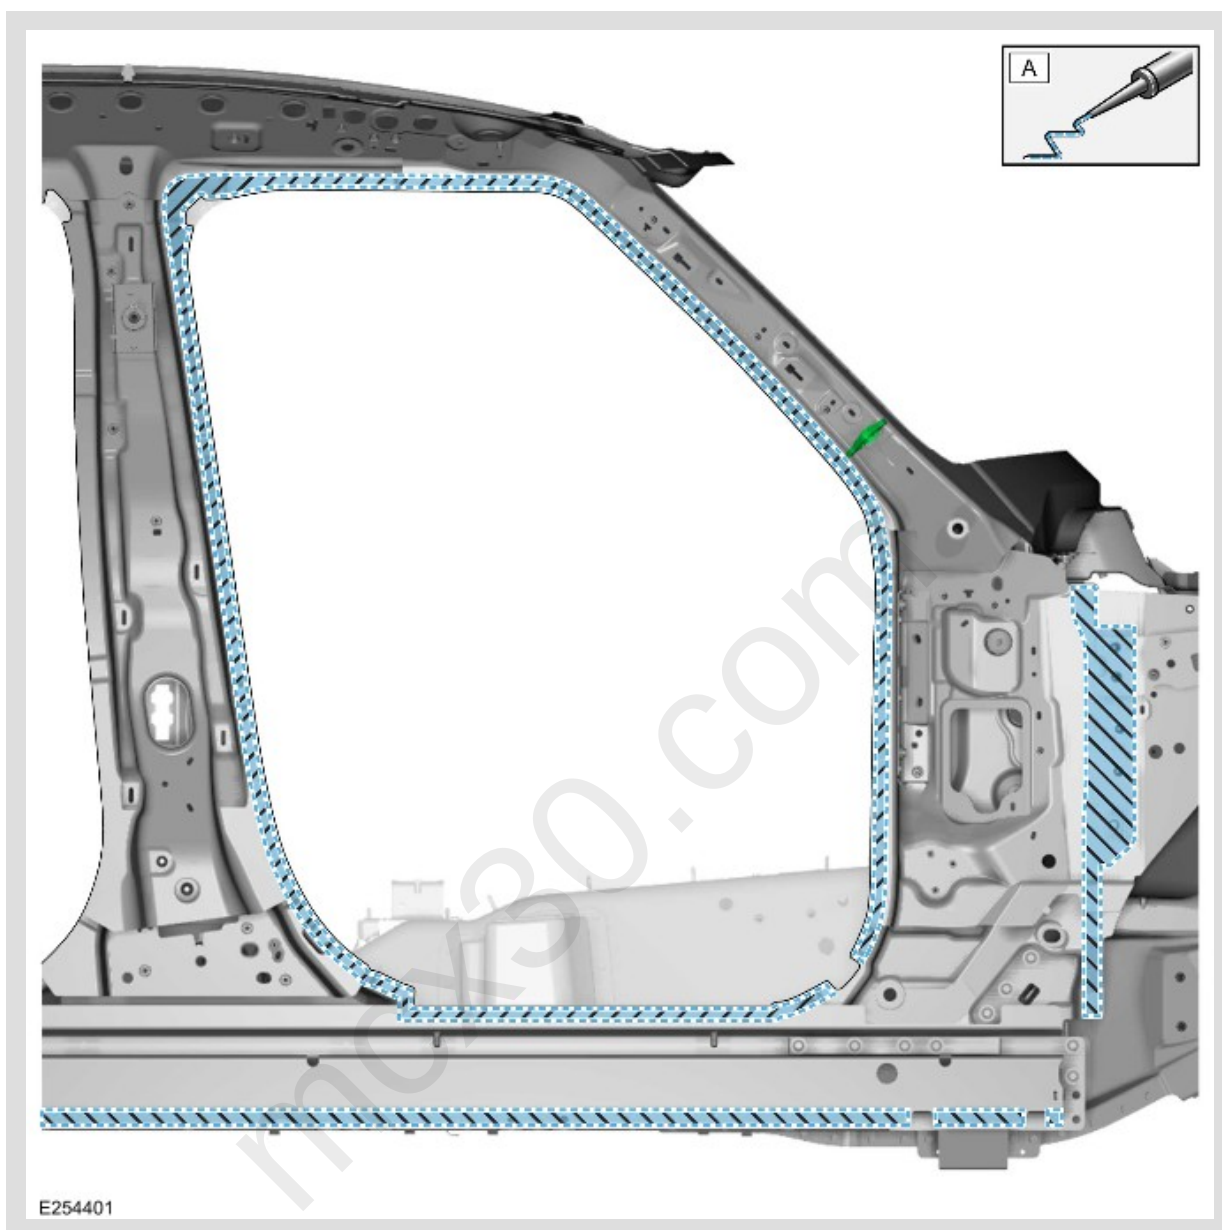


Apply a 5 mm zig zag bead of the JLR recommended bonding material as indicated.

15.

 NOTE:

Make sure a continuous bead of adhesive surrounds the fixing holes.

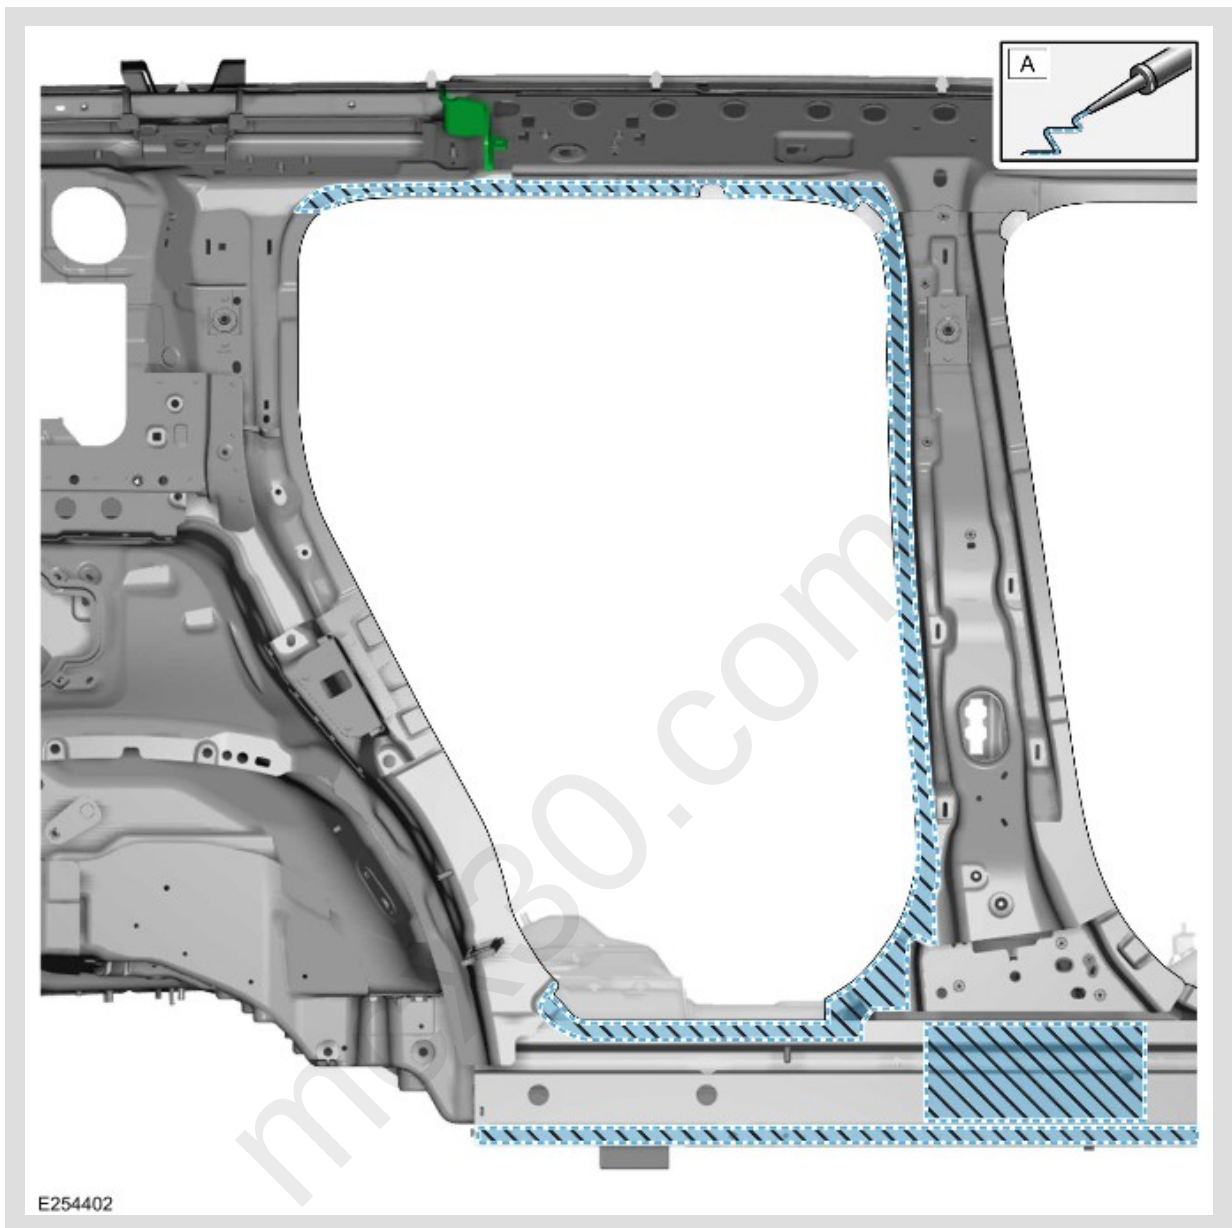

Apply a 5 mm zig zag bead of the JLR recommended bonding material as indicated.

16.



 CAUTION:


This step will require the aid of another technician as the panel will be heavy.

Offer up the new side panel reinforcement front assembly and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.


The following step(s) applies to:

Vehicles with roof opening panel

17.

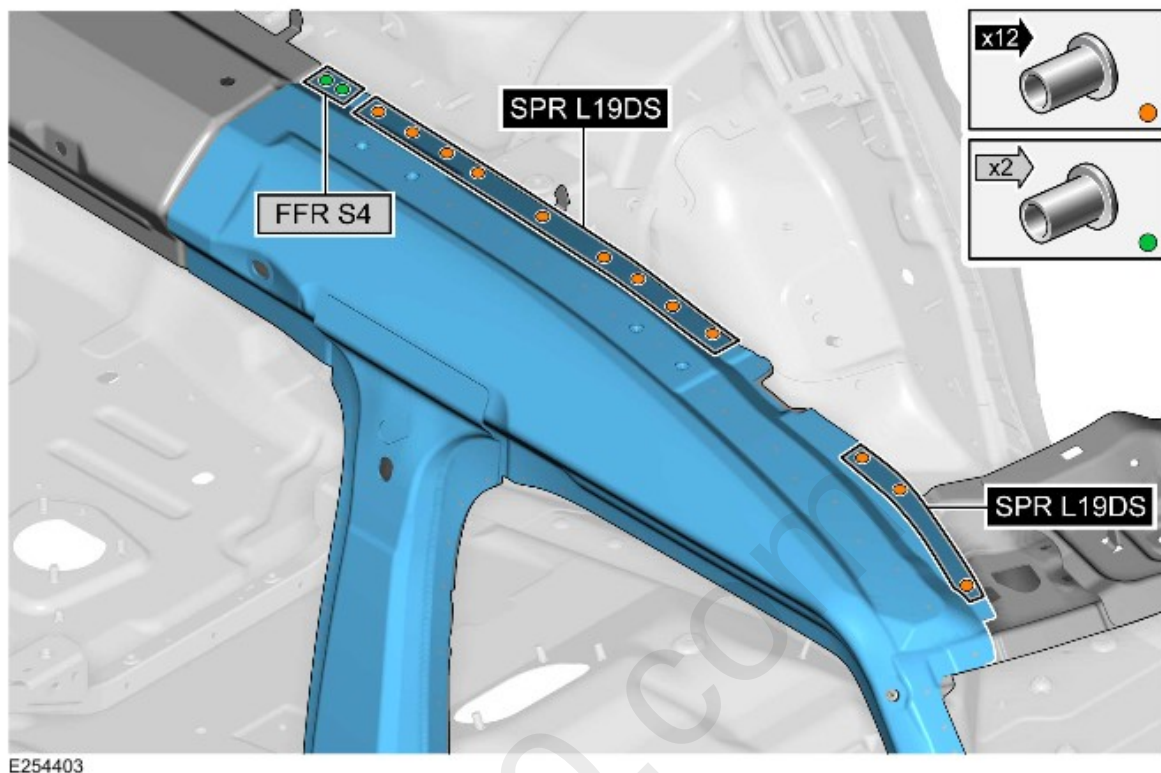


Install the FFRs and Self Piercing Rivets (SPRs) as indicated.

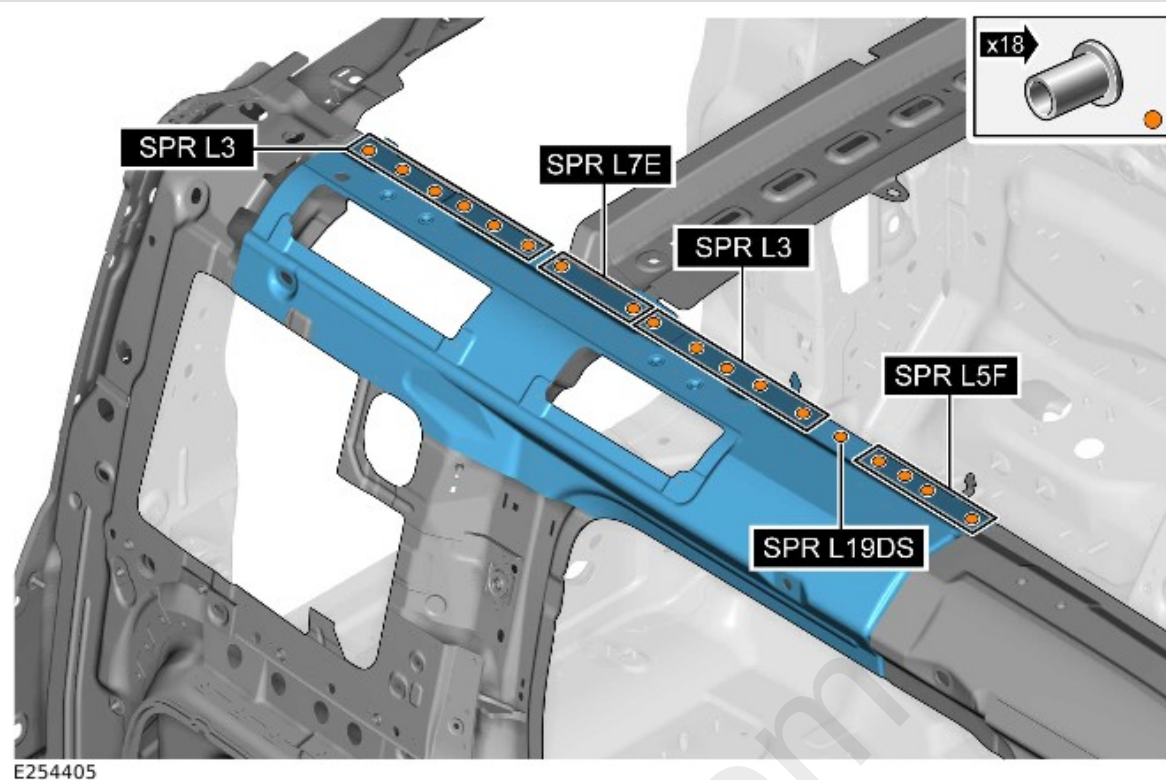

Install the SPRs as indicated.


The following step(s) applies to:
Vehicles without roof opening panel

19.

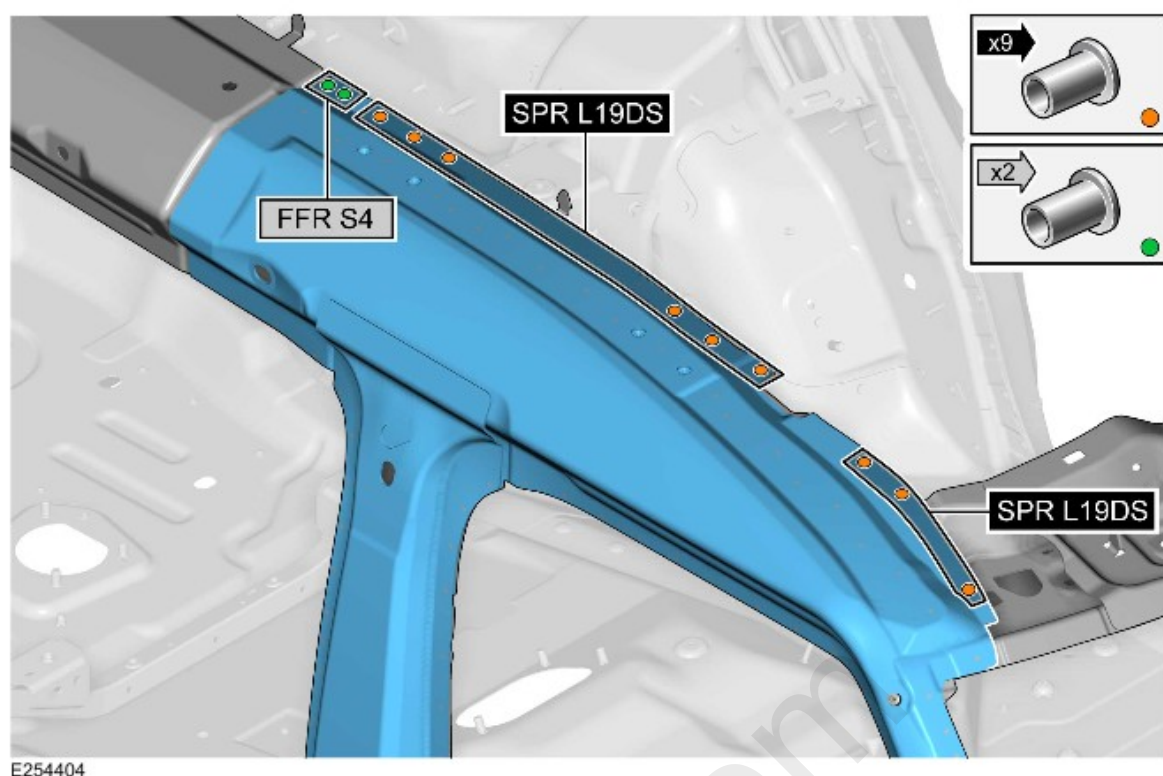

Install the FFRs and SPRs as indicated.

20.

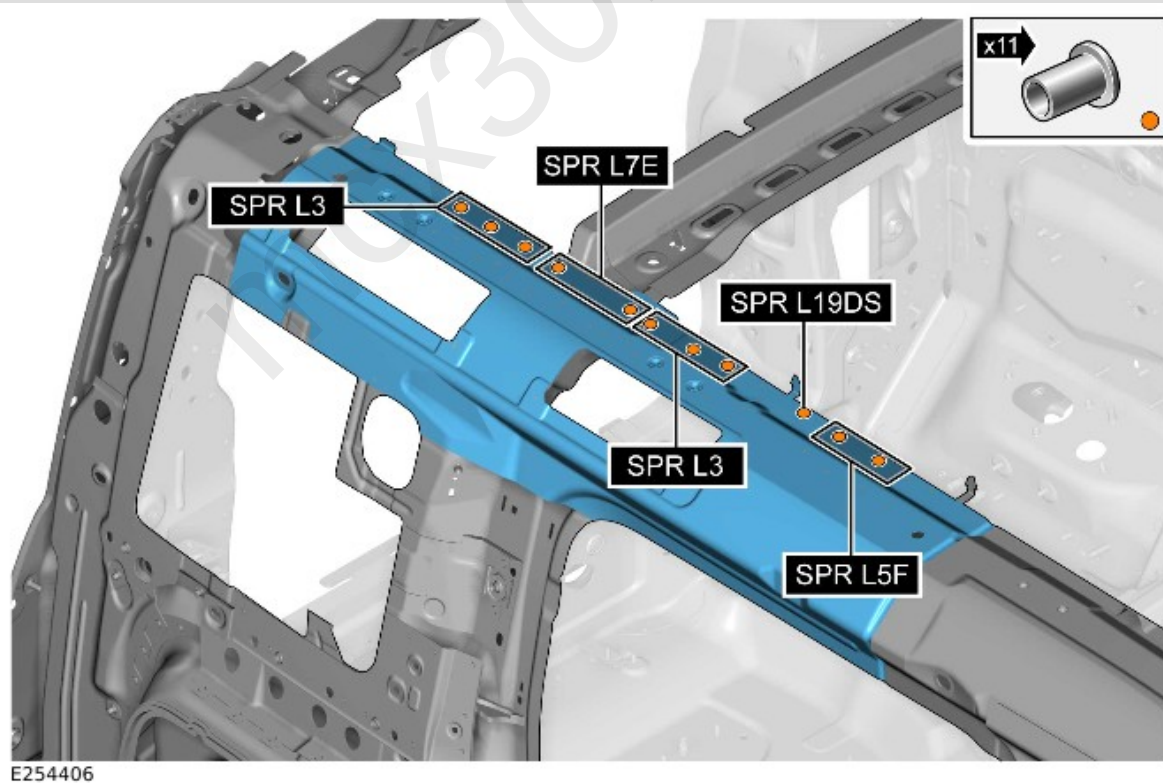


Install the SPRs as indicated.

The following step(s) applies to:

All vehicles


21.

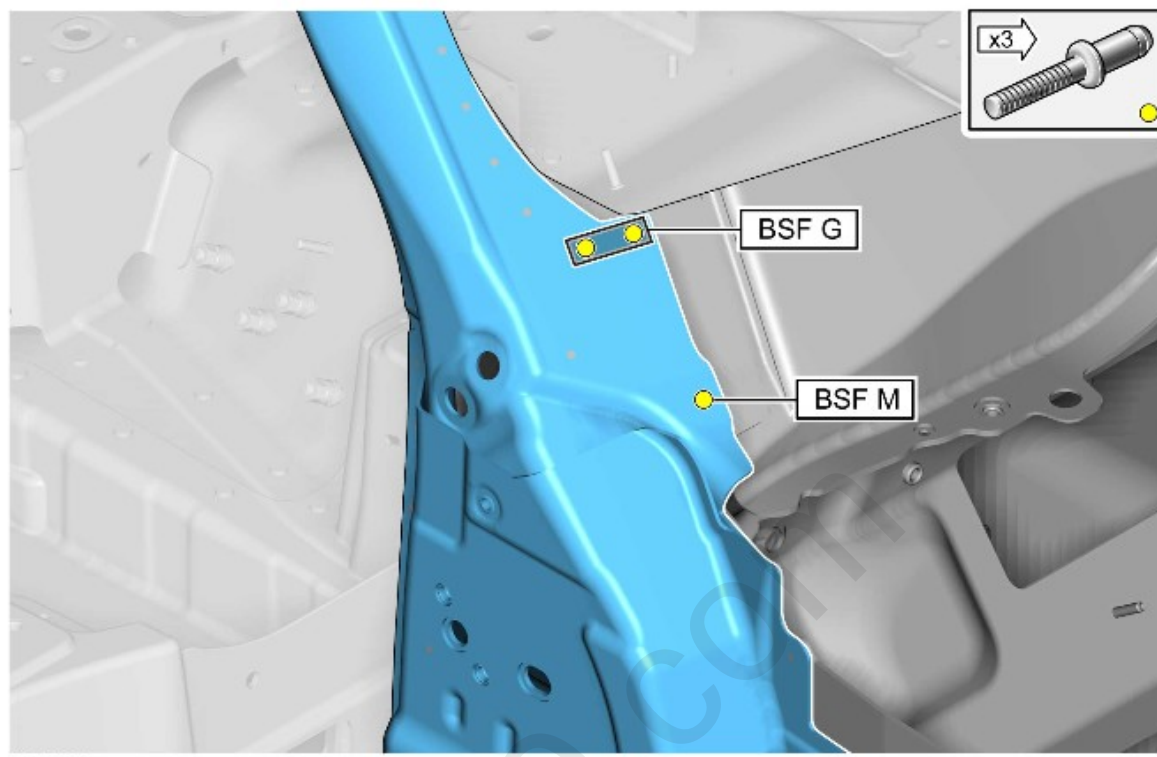

E254407


Install the BSFs as indicated.

22.

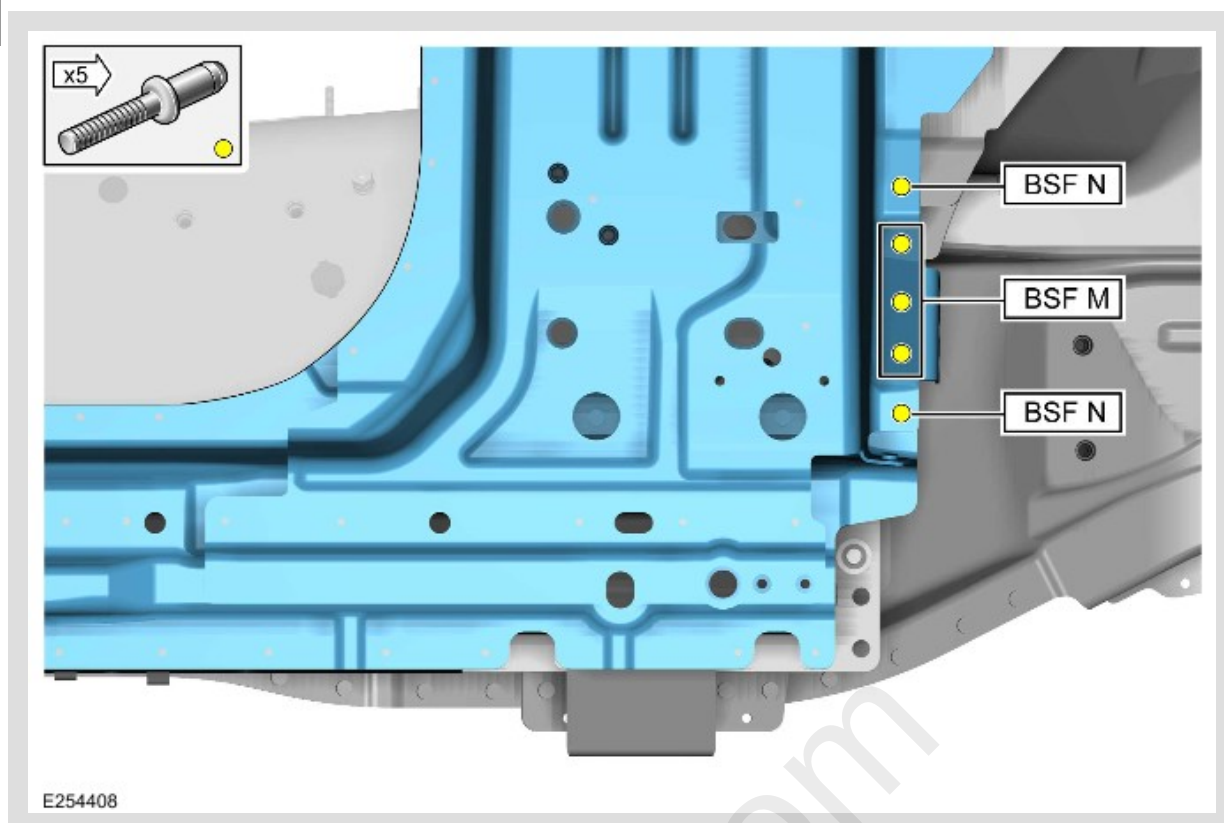


Install the BSFs as indicated.

23.

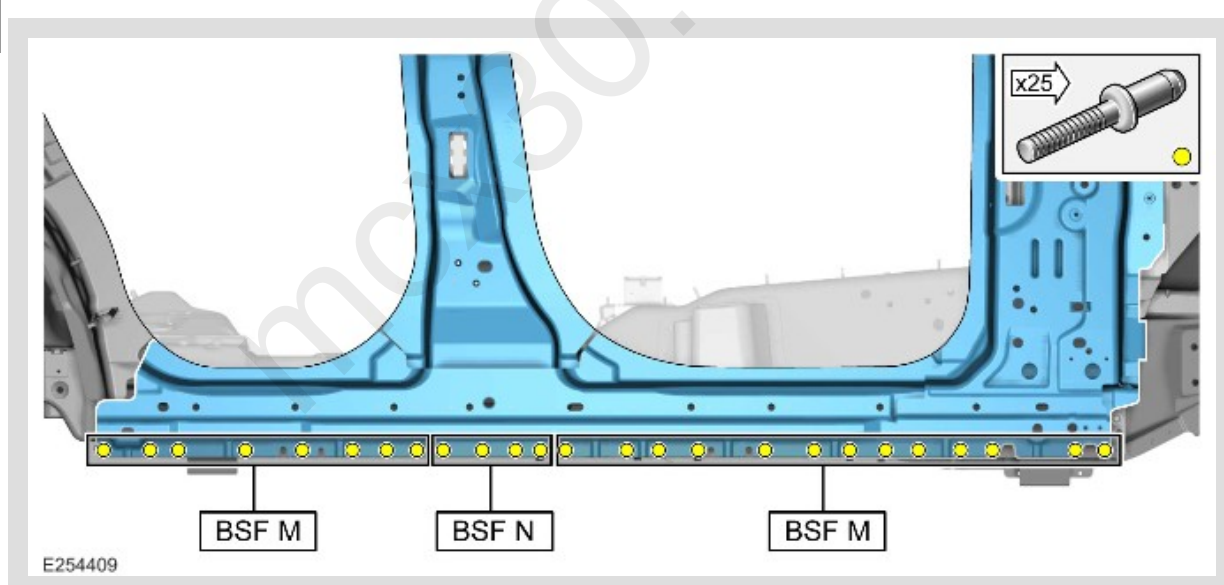

Install the BSFs as indicated.


24.

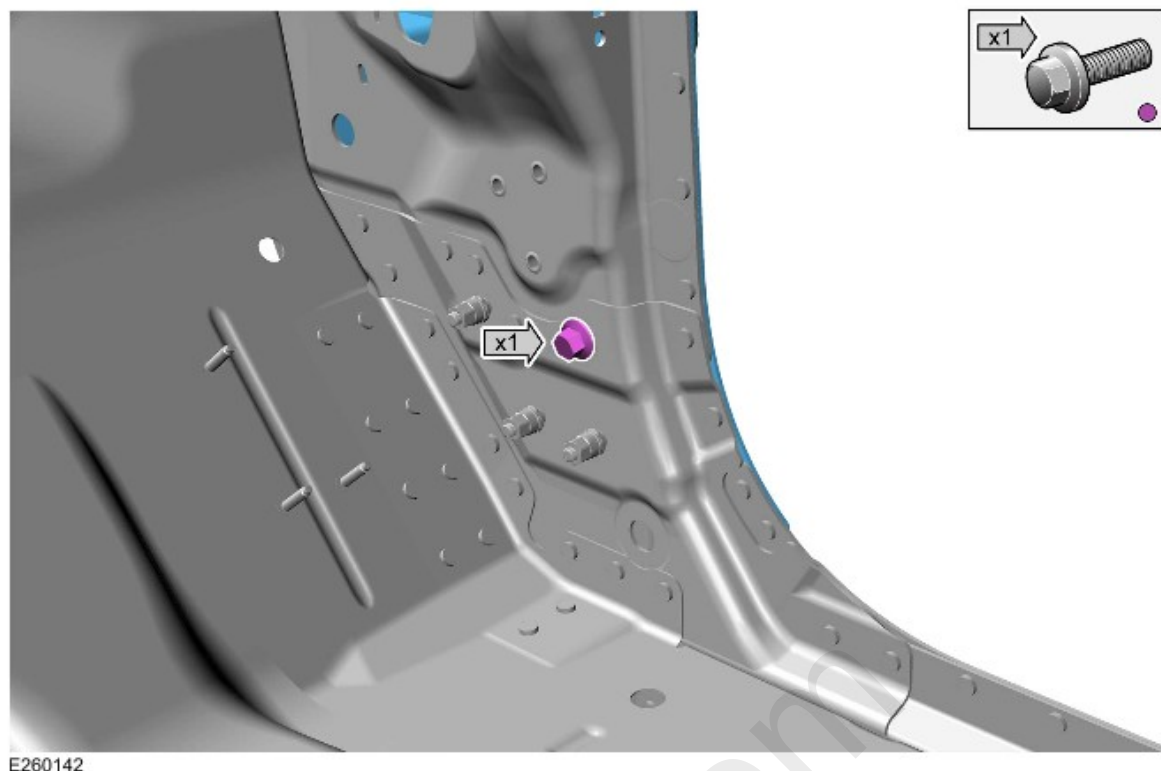

Install the bolt and tighten.

Torque: 60Nm


25.

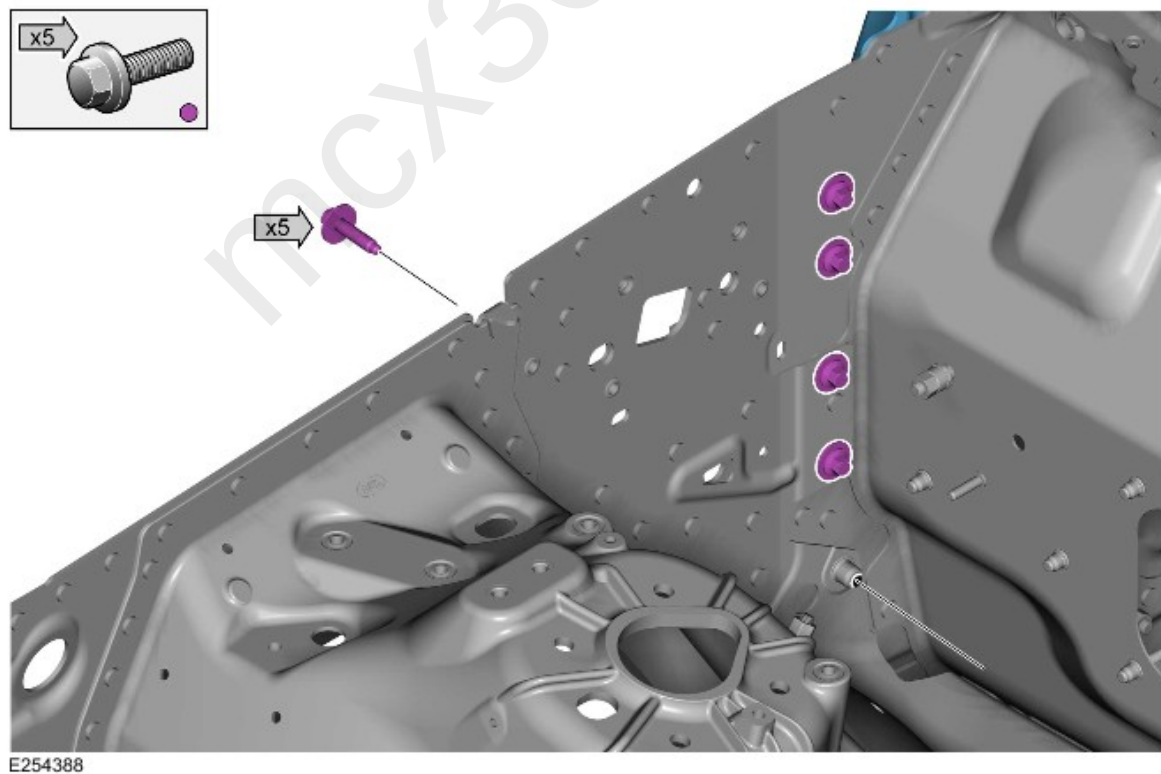

Install the bolts and tighten.

Torque: 25 Nm

26.

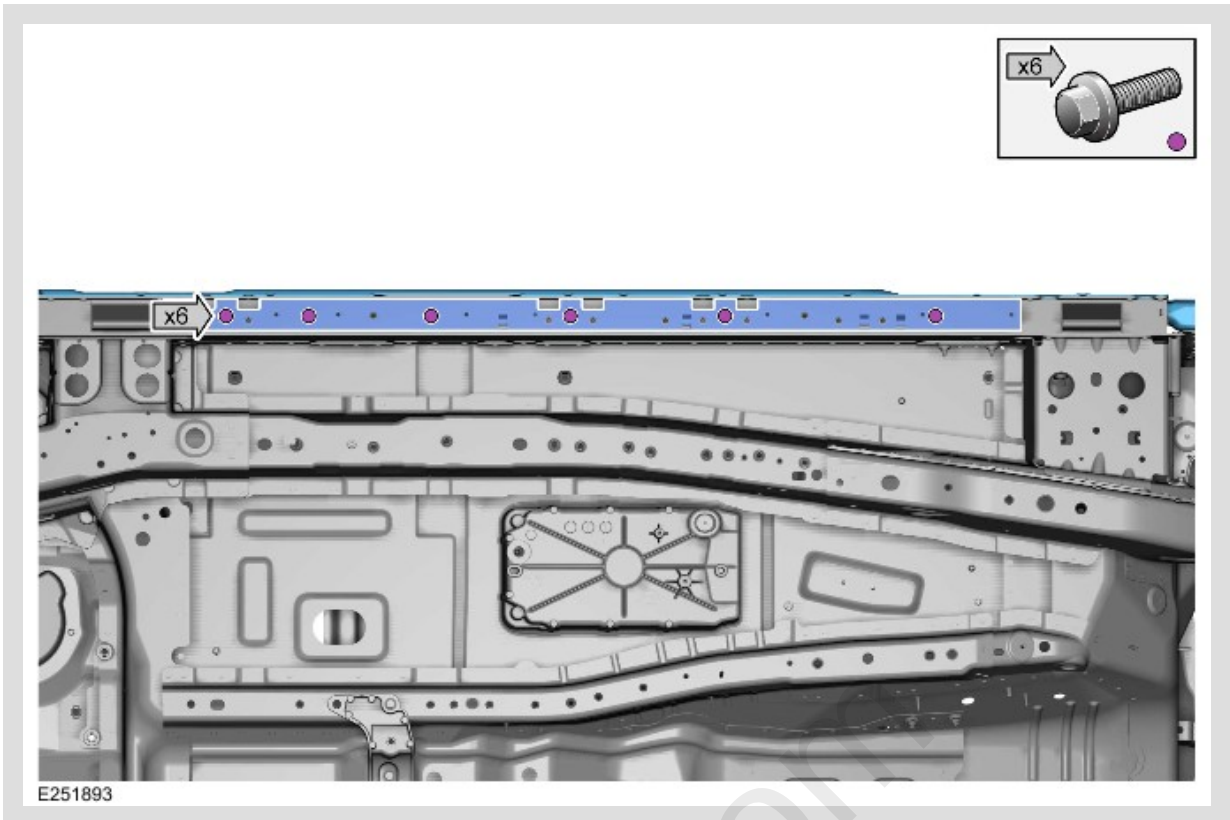

Install the bracket and tighten the bolts.

Torque: 25Nm

27. Remove any excess adhesive.

28. Make sure that any open or exposed panel joints are correctly sealed.

29. Make sure that all installed fixings are sealed using a JLR recommended sealer.

30. Make sure corrosion protection is applied to all areas affected by the repair.



NOTE:

The installation of associated panels and components is the reversal of the removal procedure.

31. For additional installation information.

Refer to: [Rear Center Roof Reinforcement Panel - Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

32. For additional installation information.

Refer to: [Front Center Roof Reinforcement Panel - Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

33. For additional installation information.

Refer to: [Front Roof Reinforcement Panel - Vehicles Without: Roof Opening Panel](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

34. For additional installation information.

Refer to: [Rear Header Panel Upper - 110](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

35. For additional installation information.

Refer to: [Windshield Header Panel Upper - 110](#) (501-28 Roof Sheet Metal Repairs, Removal and Installation).

cmjaGFyZG1vbnRvbjsyMDIwLTA5LTE4VDE5OjMyOjM5LjEwOFo7OTAuMTk5LjEyMS4xMTc7

mcx30.com