

PUBLISHED: 16-JUN-2020
2020.0 DEFENDER (LE), 501-29

SIDE PANEL SHEET METAL REPAIRS

B-PILLAR INNER PANEL LOWER – 90 (G2452611)

mcx30.com


REMOVAL

 NOTE:

In this procedure the B-pillar inner lower panel is installed in conjunction with:

- Rear wheelhouse outer
- B-pillar reinforcement.

1.

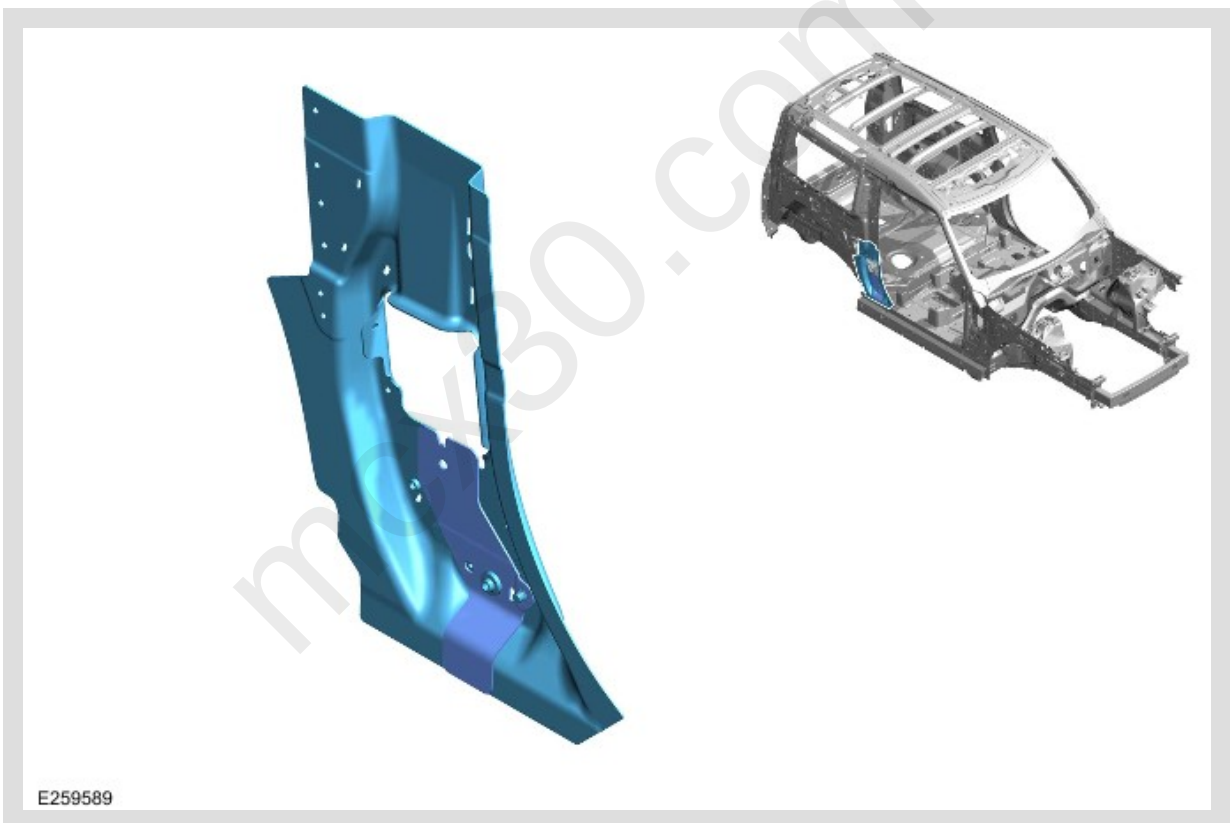

The B-pillar inner lower panel is serviced as indicated.

2. Before commencing this procedure make sure that you are aware of all Health and Safety requirements. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.

NOTES:

- Where Breakstem Fastener (BSF) removal is instructed remove the fastener shaft with a 4 mm punch and remove the head with a 6.5 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Self Piercing Rivet (SPR) removal is instructed use either the Jaguar Land Rover (JLR) approved SPR tool or a 5.3 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Flow Form Rivet (FFR) removal is instructed remove the head and then remove the shaft with a punch. Clean the holes to make sure they are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- To make sure that the vehicle is correctly aligned it must be placed on a JLR approved alignment jig.

When installing the B-pillar inner lower panel make sure that you are aware of the methods, tools and fixings used in this procedure.

Refer to: [Body Repairs](#) (501-25A Body Repairs - General Information, Description and Operation).

Refer to: [Adhesives, Fixings and Consumables](#) (501-25A Body Repairs - General Information, Description and Operation).

4.

For additional information

Refer to: [Specifications - 110](#) (501-29 Side Panel Sheet Metal Repairs, Specifications).

5.

For additional removal information.

Refer to: [Rear Wheelhouse Outer - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

6.


For additional removal information.

Refer to: [Rocker Panel Reinforcement - 90](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

7.


Release and position the wiring harness to one side.

8.

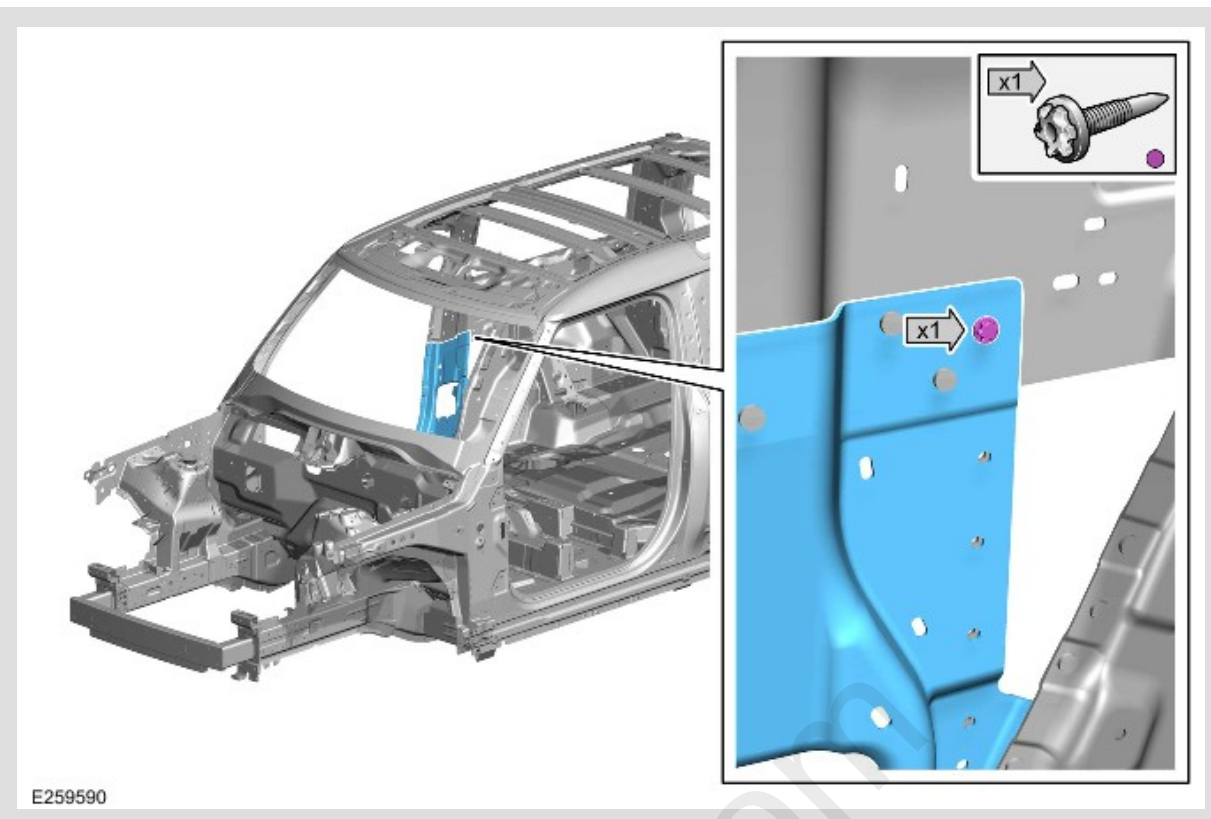

Remove the friction drilling screw as indicated.

9.

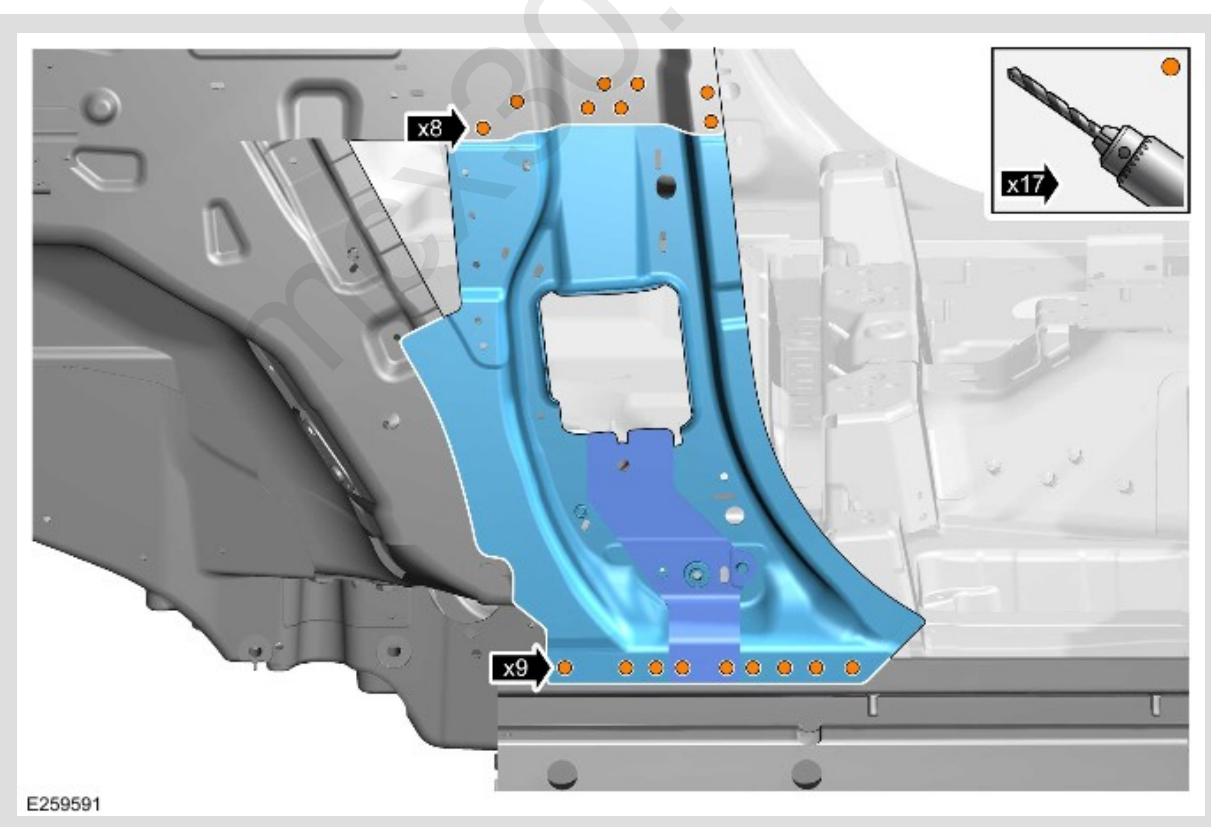


Remove the self piercing rivets as indicated.

10.

NOTE:

Where Flow Form Rivet (FFR) installation is indicated. Make sure that the panel is planished before removal.

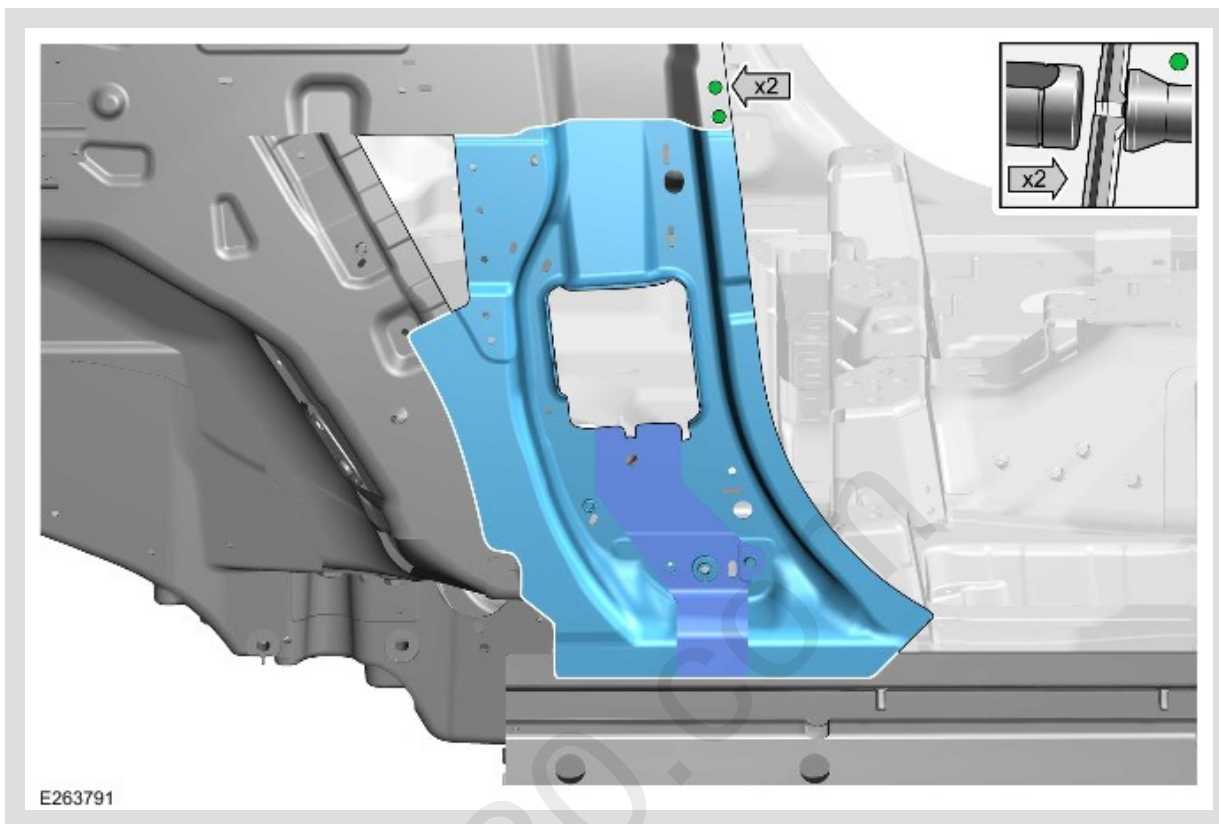

Planish the panel as indicated.

11. Carefully separate the joints and remove the B-pillar inner lower panel.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- Breakstem Fastener (BSF) installation involves using the JLR approved BSF installation tool and requires a hole diameter of 6.5 mm.
- Flow Form Rivet (FFR) installation requires using the JLR approved FFR installation tool.
- Refer to Adhesive, Fixings and Consumables for further information on Flow Form Rivets (FFRs).

1. Remove the rivet remnants.

2. Dress the flanges where necessary.

3. Offer up the new B-pillar inner lower panel and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

4.

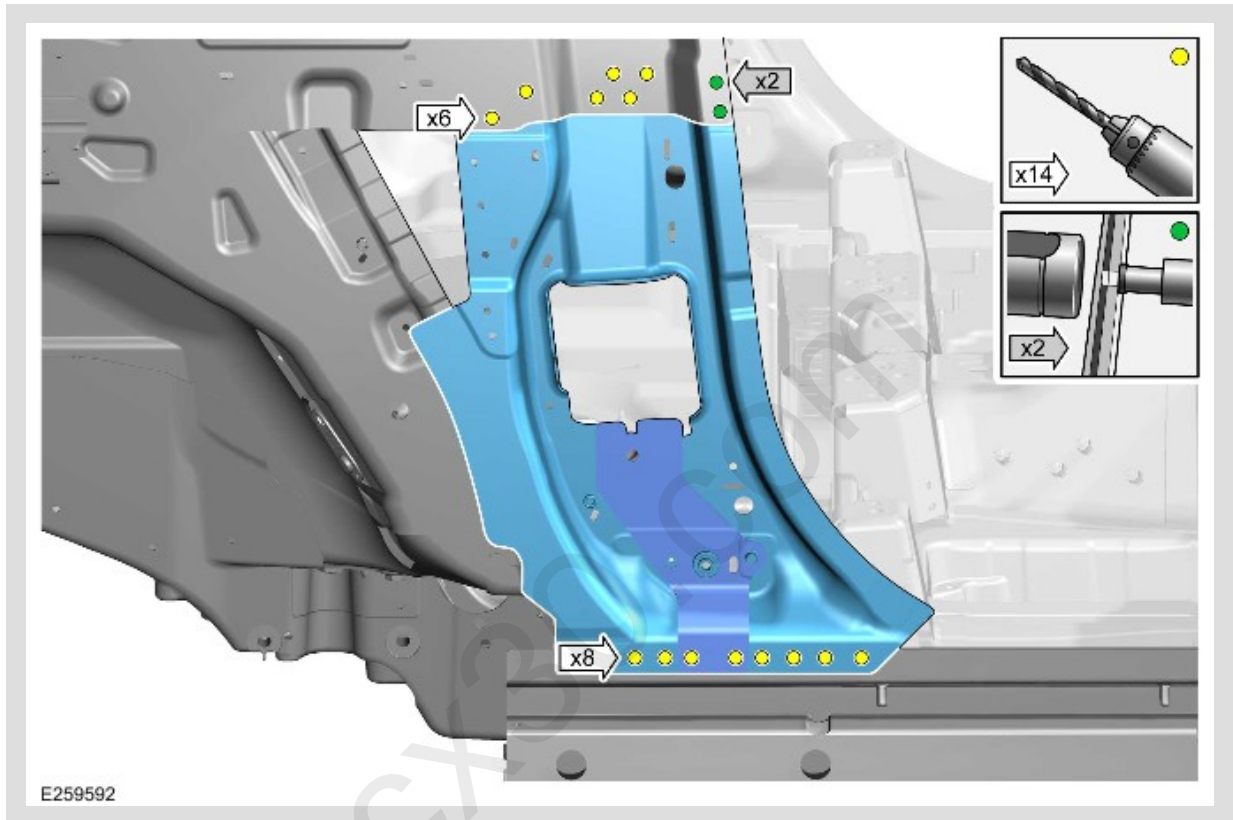


Drill holes where the Breakstem Fasteners (BSFs) are to be installed as indicated. Punch calibrated holes where the Flow Form Rivets (FFRs) are to be installed as indicated.

5.

 NOTE:

When installing the B-pillar inner lower panel in conjunction with the rear wheelhouse outer panel.

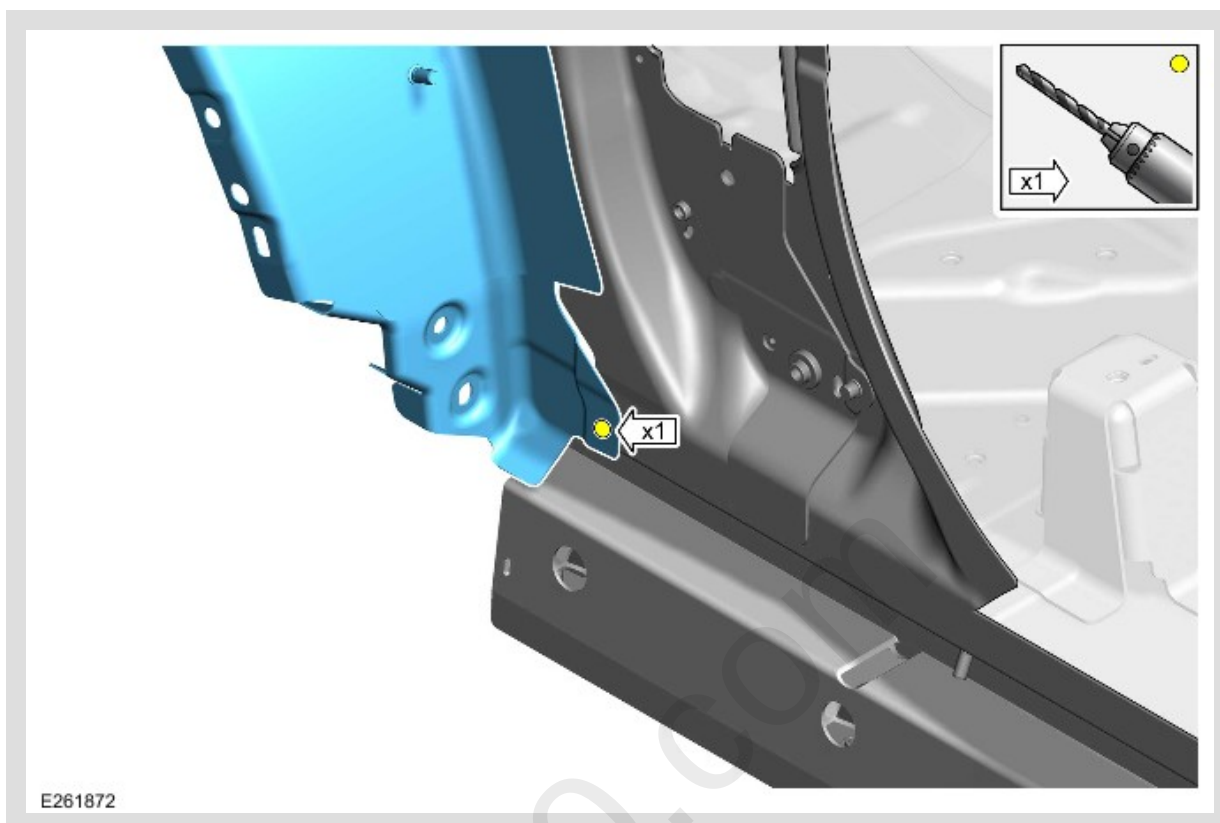

Drill a hole where the BSF is to be installed as indicated.

6. Remove the new B-pillar inner lower panel.


7. Deburr the drilled holes.

8. Clean and prepare the panel surfaces.

9.

NOTE:


Make sure a continuous bead of adhesive surrounds the fixing holes.

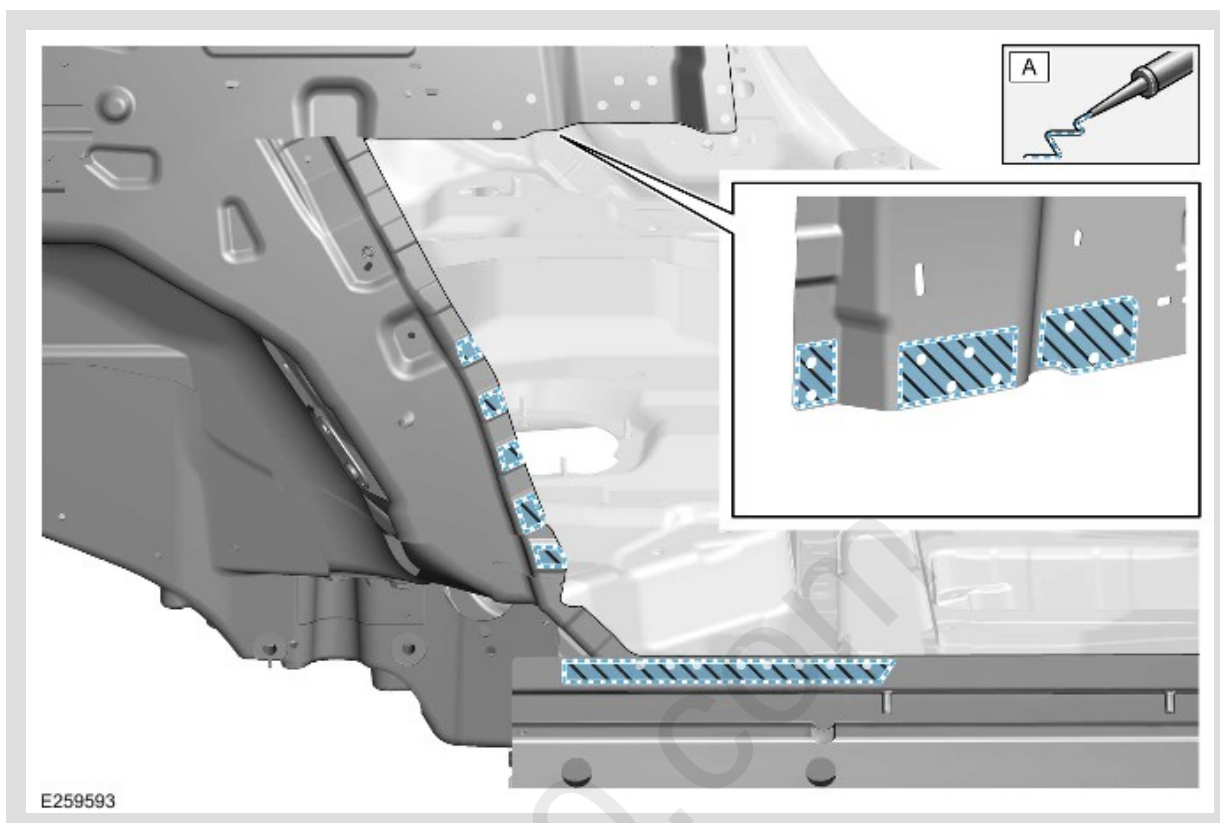

Apply a 5 mm zig zag bead of the JLR recommended bonding material as indicated.

10. Offer up the new B-pillar inner lower panel and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.


11.

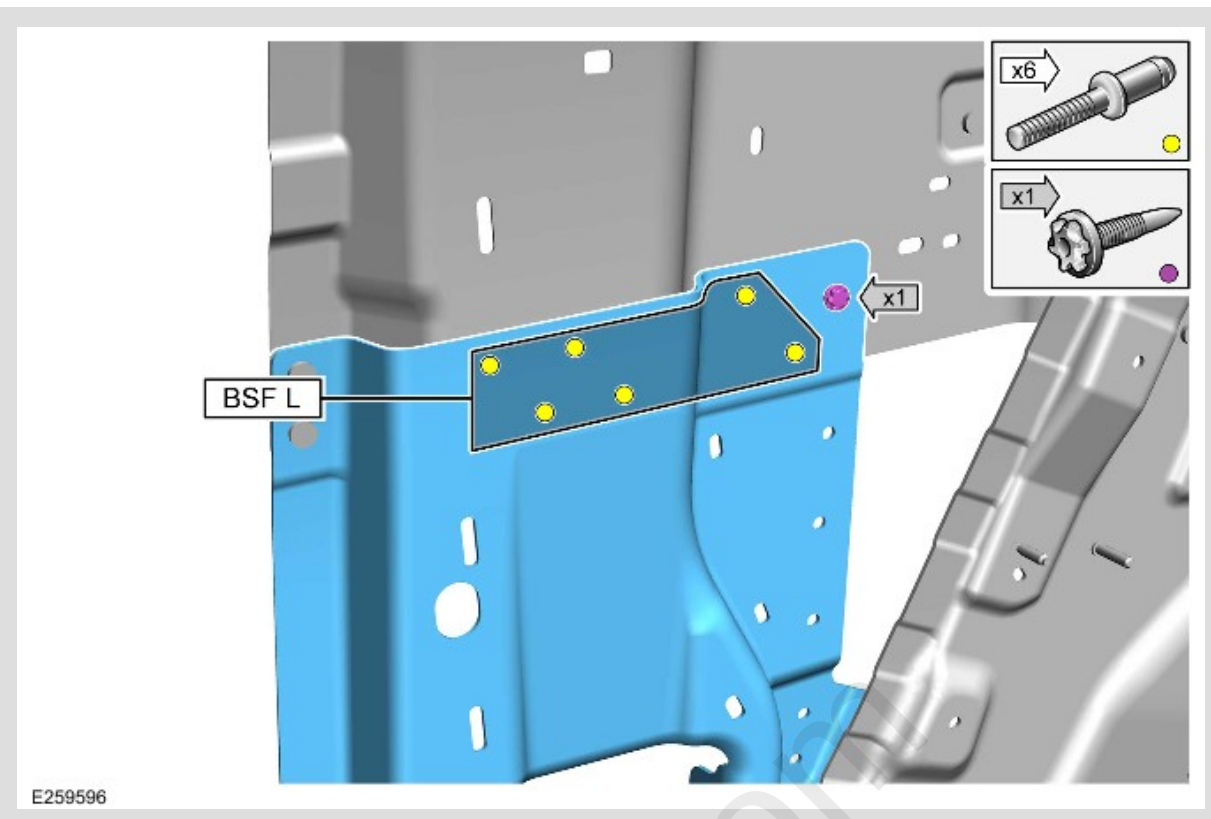

Install the BSFs as indicated. Install the new M6 Friction Drilling Screw (FDS) and tighten.

Torque: 10 Nm

12.

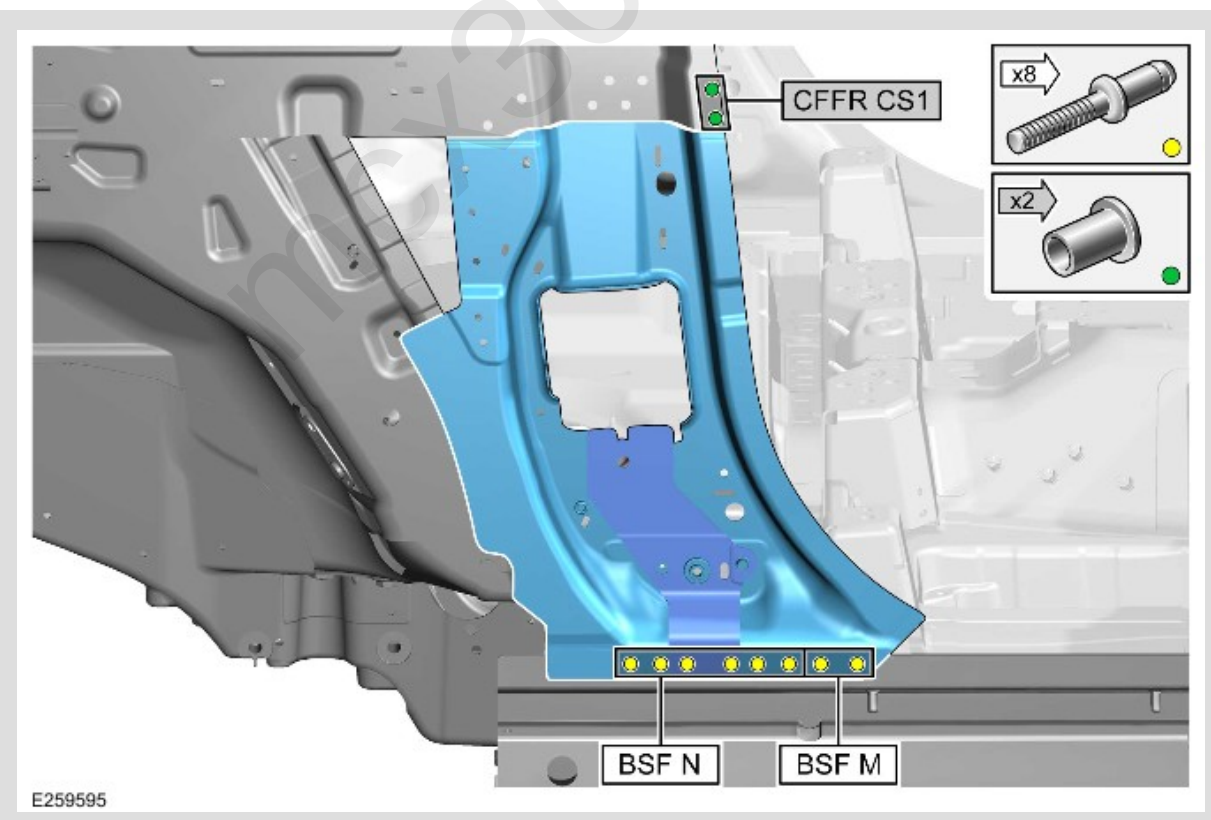


Install the BSFs and FFRs as indicated.

13.

⚠ CAUTION:

*Breakstem Fastener (BSF) to be installed in conjunction with the rear wheelhouse outer panel.

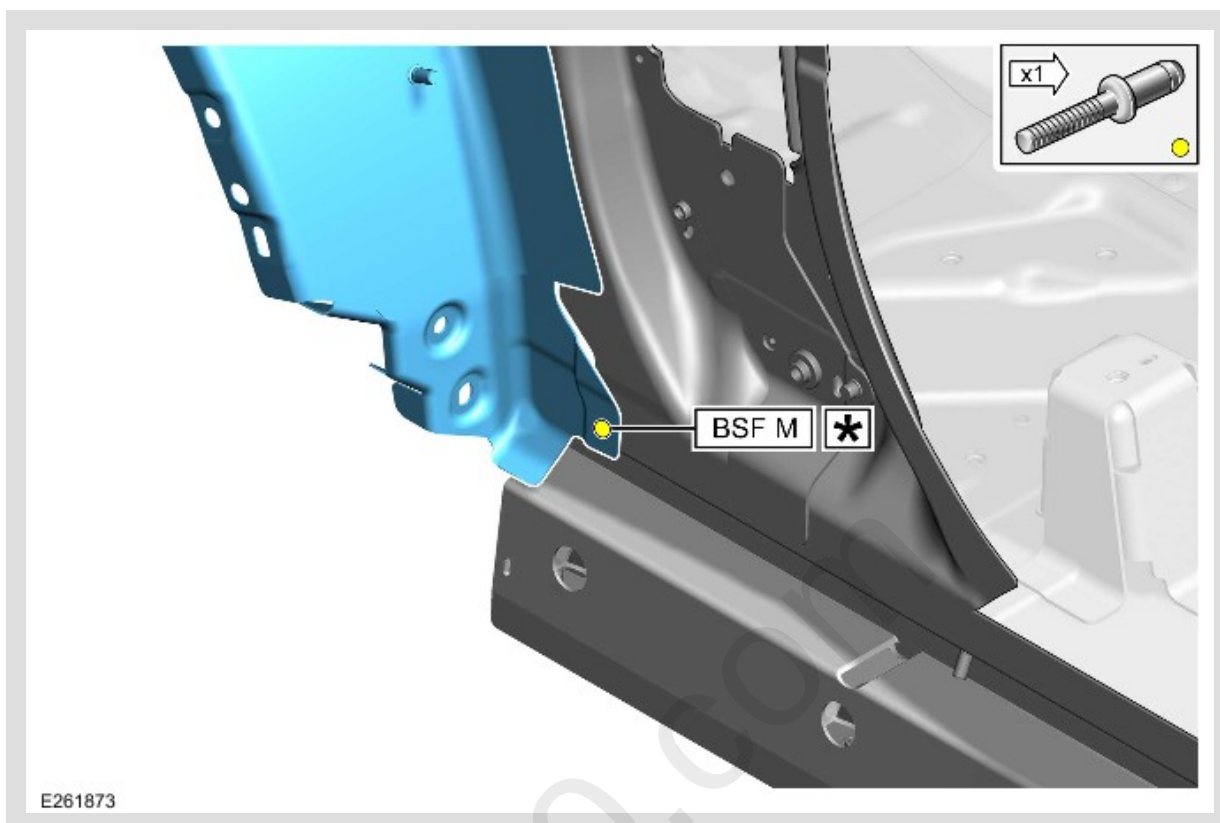

*When installing the B-pillar inner lower panel in conjunction with the rear wheelhouse outer panel.

Refer to: [Rear Wheelhouse Outer - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

14. Remove any excess adhesive.

15. Make sure that any open or exposed panel joints are correctly sealed.

16. Make sure that all installed fixings are sealed using a JLR recommended sealer.

17. Make sure corrosion protection is applied to all areas affected by the repair.



NOTE:

The installation of associated panels and components is the reversal of the removal procedure.

18. For additional installation information.

Refer to: [Rocker Panel Reinforcement - 90](#) (501-29 Side Panel Sheet Metal Repairs, Removal and Installation).

19. For additional installation information.

Refer to: [Rear Wheelhouse Outer - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

cmIjaGFyZG1vbnRvbjsyMDIwLTA5LTE4VDE5OjM4OjM0LjYyNV67OTAuMTk5LjEyMS4xMTc7

mcx30.com