

PUBLISHED: 06-APR-2020
2020.0 DEFENDER (LE), 501-30

REAR END SHEET METAL REPAIRS

BACK PANEL OUTER - 110 (G2402069)

mcx30.com


REMOVAL

 NOTE:

In this procedure the back panel outer is installed in conjunction with:

- Rear silencer
- Diesel exhaust fluid tank
- Outer tail lamp outer panel section
- Outer tail lamp outer panel.

1.

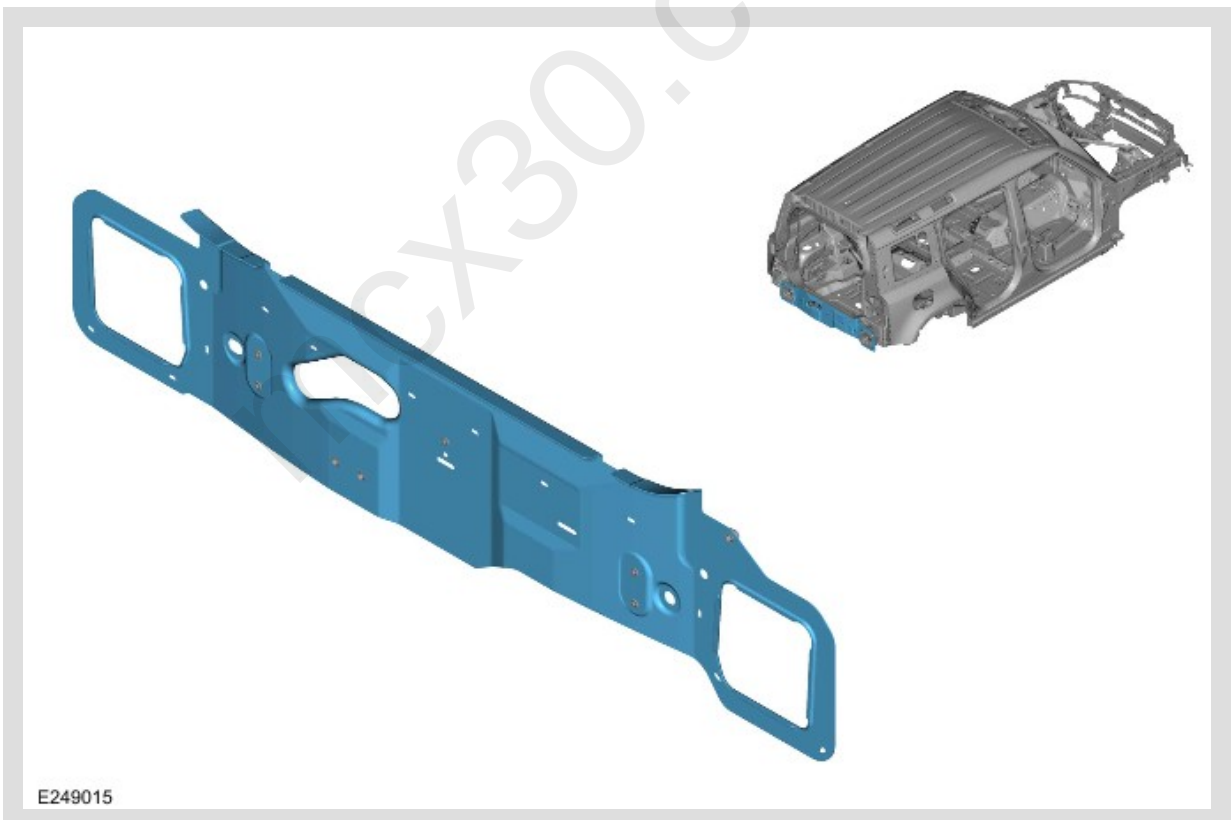

The back panel outer is serviced as indicated.

2.

Before commencing this procedure make sure that you are aware of all Health and Safety requirements. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.

**NOTES:**

- Where Breakstem Fastener (BSF) removal is instructed remove the fastener shaft with a 4 mm punch and remove the head with a 6.5 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Self Piercing Rivet (SPR) removal is instructed use either the Jaguar Land Rover (JLR) approved SPR tool or a 5.3 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Flow Form Rivet (FFR) removal is instructed, remove the head and then remove the shaft with a punch. Clean the holes to make sure they are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

When installing the back panel outer make sure that you are aware of the methods, tools and fixings used in this procedure.

Refer to: [Body Repairs](#) (501-25A Body Repairs - General Information, Description and Operation).

Refer to: [Adhesives, Fixings and Consumables](#) (501-25A Body Repairs - General Information, Description and Operation).

4.

For additional information on the fixings required to complete this procedure

Refer to: [Specifications - 110](#) (501-30 Rear End Sheet Metal Repairs, Specifications).

5.

For additional removal information

Refer to: [Rear Silencer - Vehicles Without: Diesel Exhaust Fluid](#) (309-00A Exhaust System - INGENIUM I4 2.0L Diesel, Removal and Installation).

Refer to: [Rear Silencer - Vehicles With: Diesel Exhaust Fluid](#) (309-00A Exhaust System - INGENIUM I4 2.0 L Diesel, Removal and Installation).

Refer to: [Rear Silencer](#) (309-00B Exhaust System - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Rear Silencer](#) (309-00C Exhaust System - INGENIUM I6 3.0L Petrol, Removal and Installation).

6.

**NOTE:**

INGENIUM I4 2.0L Diesel only.

For additional removal information

Refer to: [Diesel Exhaust Fluid Tank](#) (303-08A Engine Emission Control - INGENIUM I4 2.0L Diesel, Removal and Installation).

7.

For additional removal information

Refer to: [Outer Tail Lamp Outer Panel Section Left Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

Refer to: [Outer Tail Lamp Outer Panel Section Right Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

8. For additional removal information


Refer to: [Outer Tail Lamp Outer Panel Left Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

Refer to: [Outer Tail Lamp Outer Panel Right Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

9. Release and position the wiring harness to one side.

10. Release the tailgate weatherstrip and position to one side.

- 11.

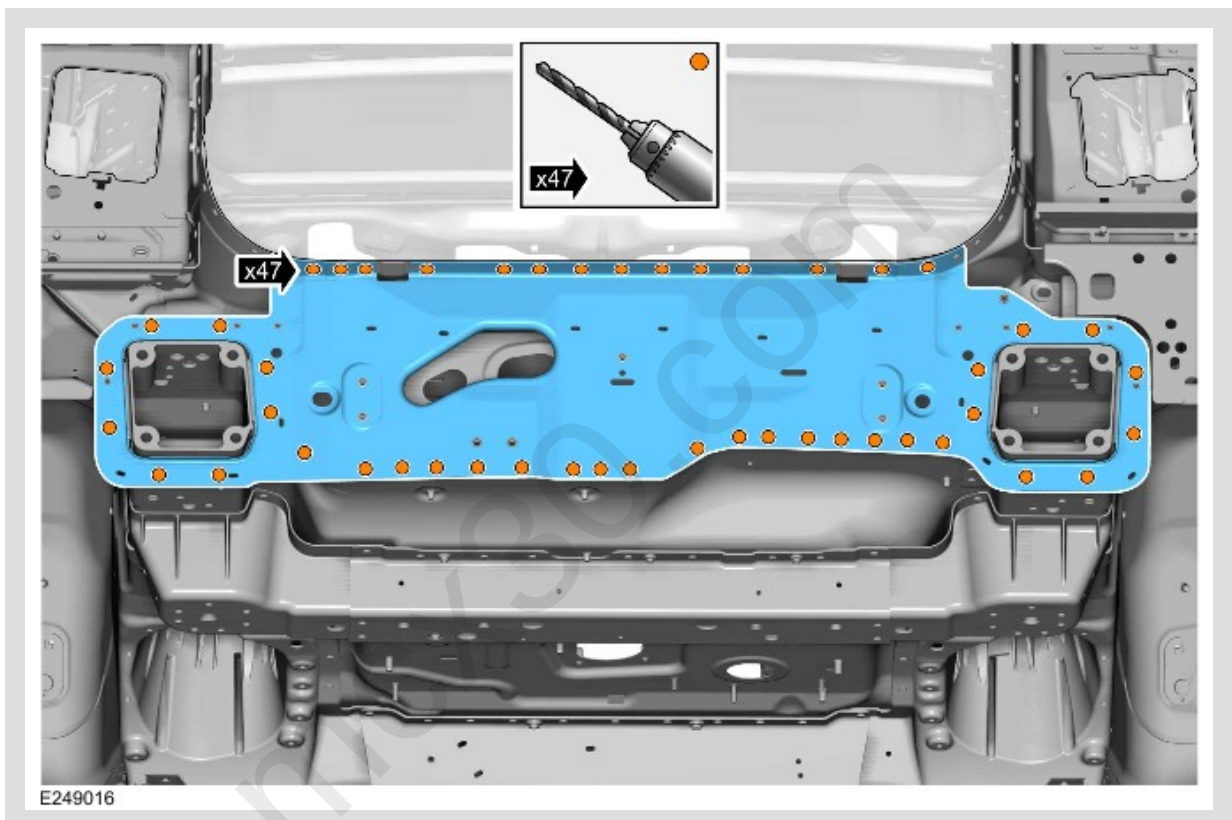


Remove the self piercing rivets as indicated.

12.

NOTE:

Where Flow Form Rivet (FFR) installation is indicated. Make sure that the panel is planished before removal.

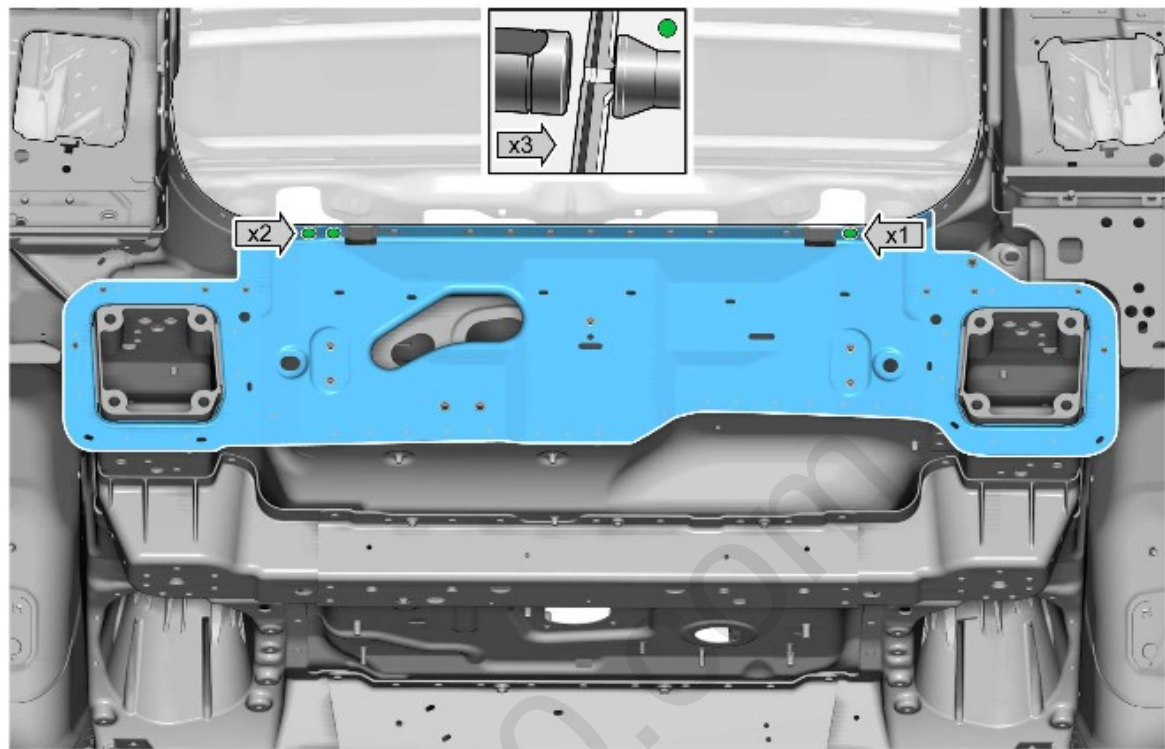

Planish the panel as indicated.

13. Carefully separate the joints and remove the back panel outer.

INSTALLATION

CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

NOTES:


- Breakstem Fastener (BSF) installation involves using the JLR approved BSF installation tool and requires a hole diameter of 6.5 mm.
- Self Piercing Rivet (SPR) installation requires using the JLR approved SPR tool.
- Flow Form Rivet (FFR) installation requires using the JLR approved FFR installation tool.
- Refer to Adhesive, Fixings and Consumables for further information on Flow Form Rivets (FFRs).

1. Remove the rivet remnants.

2. Dress the flanges where necessary.

3. Offer up the new back panel outer and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

4.

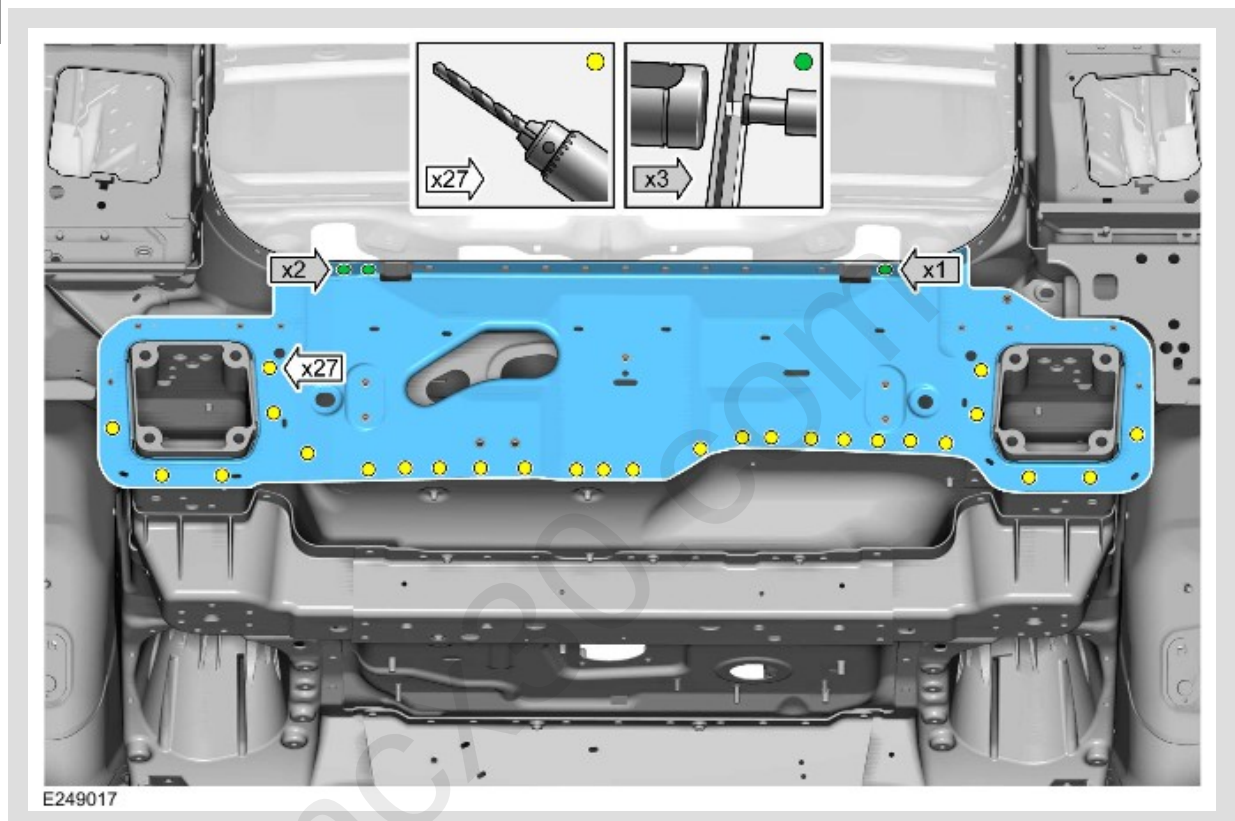

Drill holes where the Breakstem Fasteners (BSFs) are to be installed. Punch calibrated holes where the Flow Form Rivets (FFRs) are to be installed as indicated.

5. Remove the new back panel outer.


6. Deburr the drilled holes.

7. Clean and prepare the panel surfaces.

8.

 NOTE:


Make sure a continuous bead of adhesive surrounds the fixing holes.

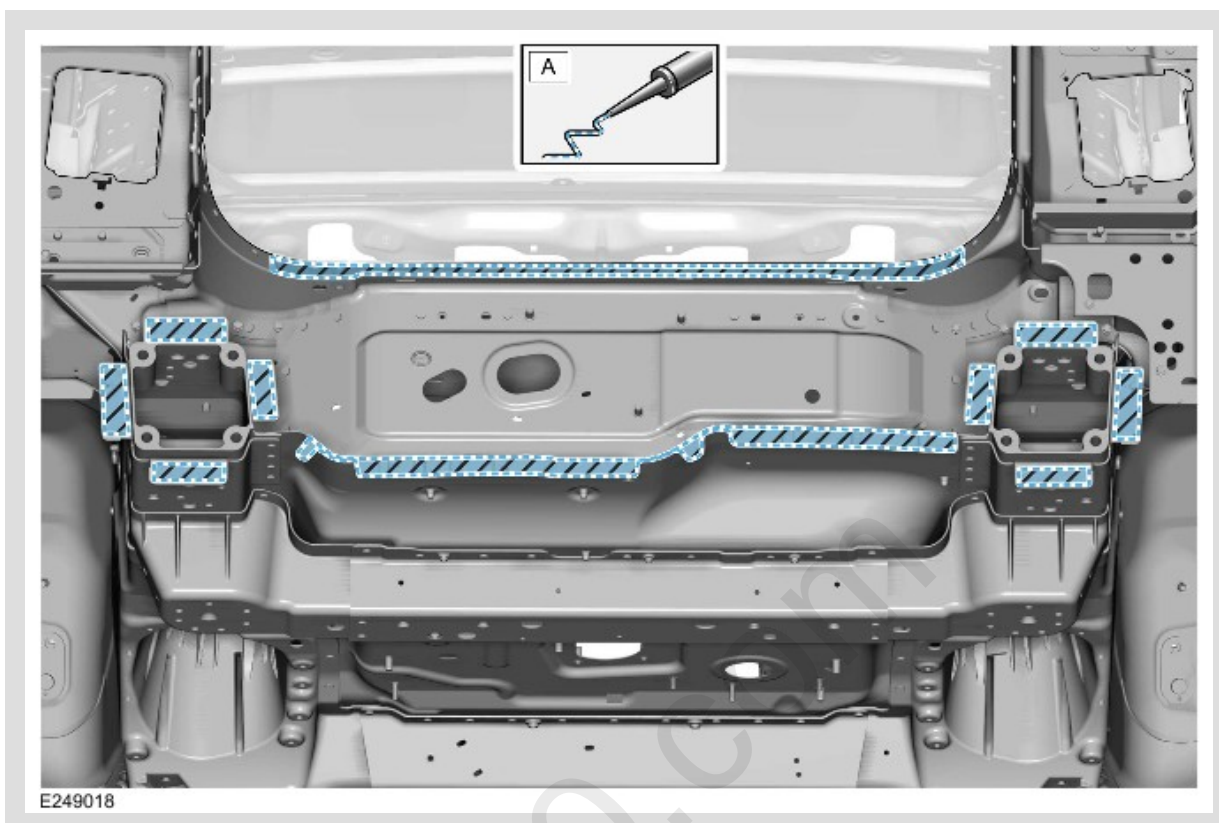

Apply a 5 mm zig zag bead of the JLR recommended bonding material as indicated.


9. Offer up the new back panel outer and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

10.

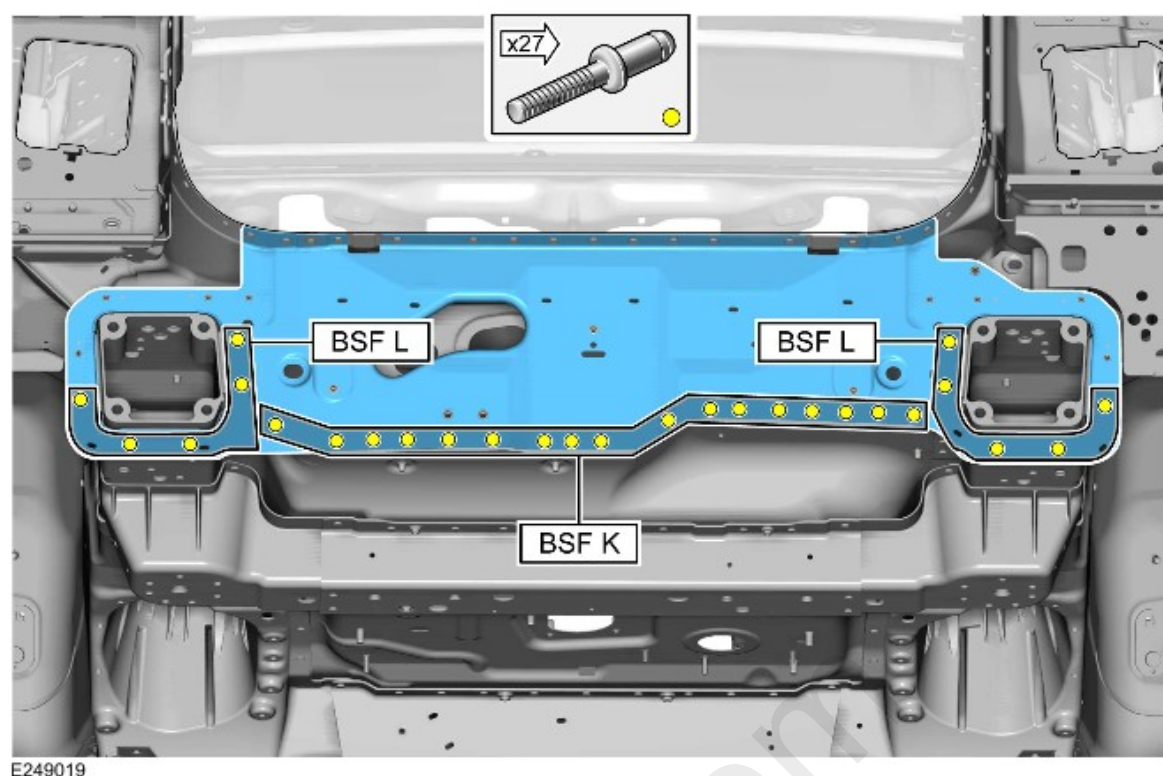

Install the BSFs as indicated.

11.

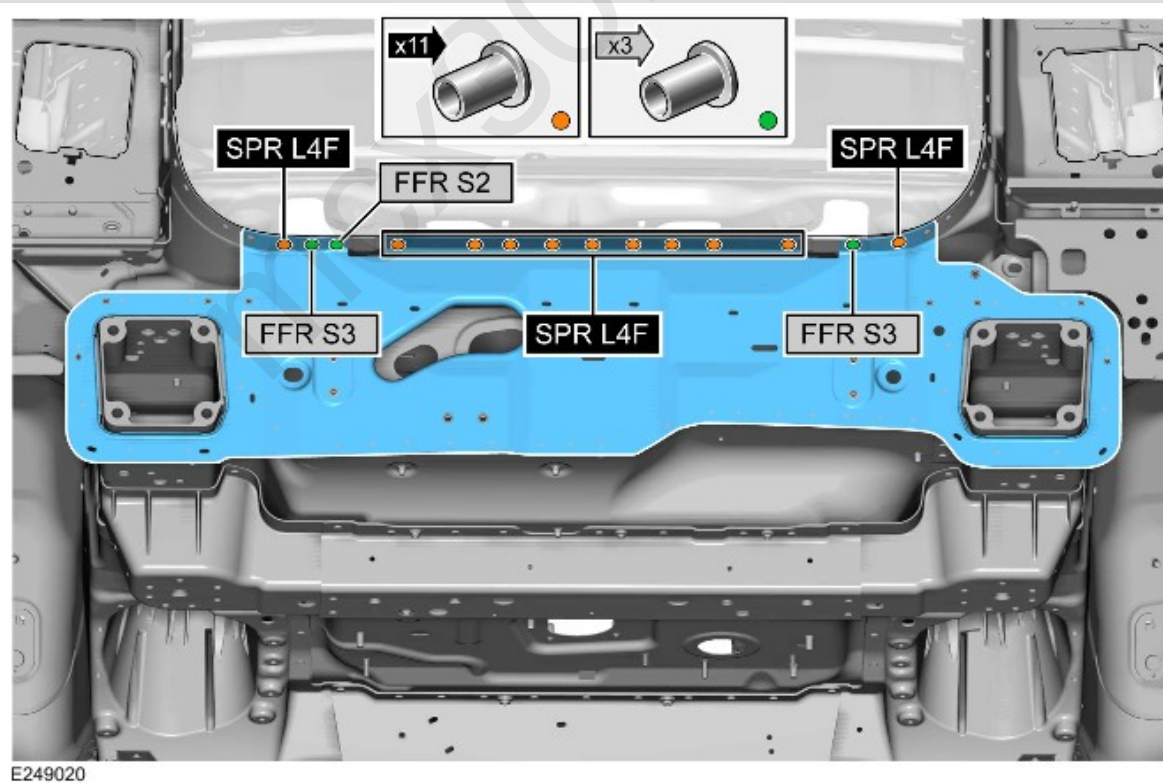


Install the FFRs and Self Piercing Rivets (SPRs) as indicated.

12.

⚠ CAUTION:

When installing the back panel outer, in conjunction with the outer tail lamp outer panel, install the Breakstem Fasteners (BSFs) as indicated.

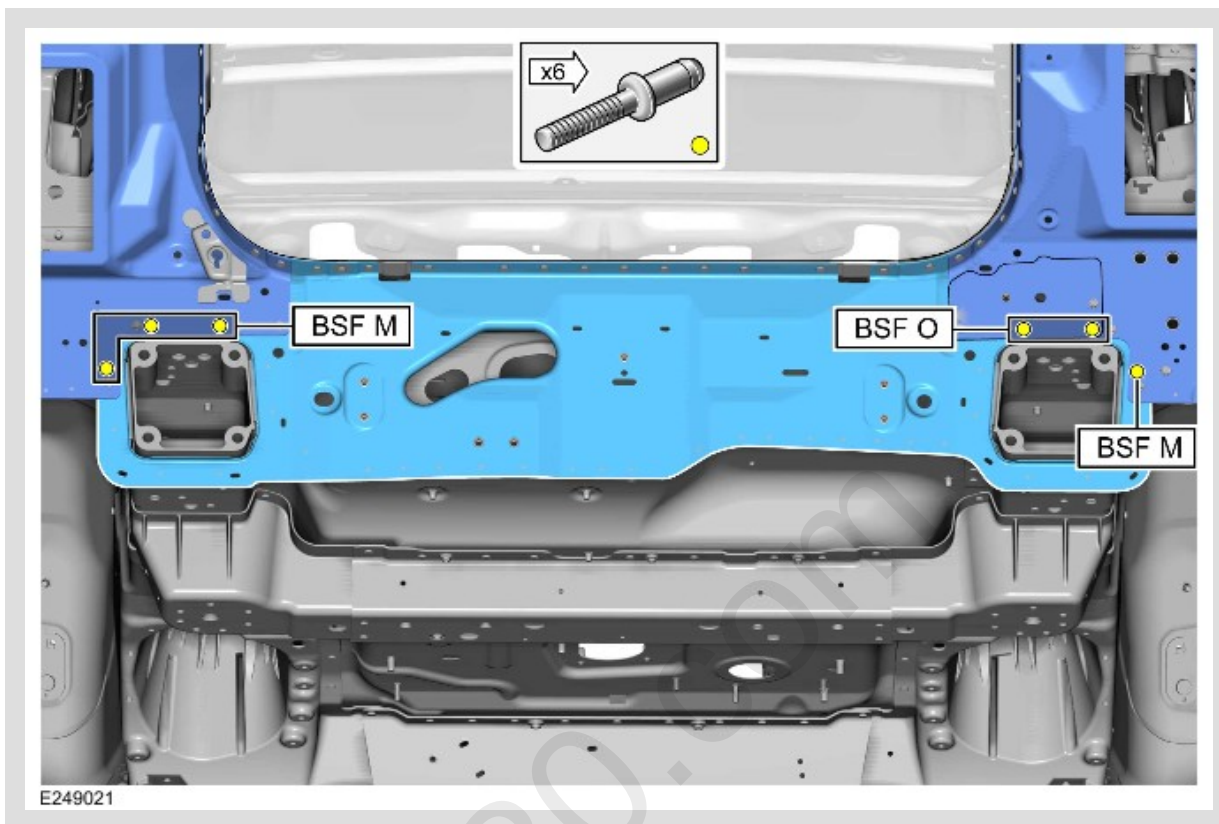

Install the BSFs as indicated.

13. Remove any excess adhesive.

14. Make sure that any open or exposed panel joints are correctly sealed.

15. Make sure corrosion protection is applied to all areas affected by the repair.

16. Make sure that all installed fixings are sealed using a JLR recommended sealer.

△ NOTE:

The installation of associated panels and components is the reversal of the removal procedure.

17. For additional installation information.

Refer to: [Outer Tail Lamp Outer Panel Left Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

Refer to: [Outer Tail Lamp Outer Panel Right Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

18. For additional installation information.

Refer to: [Outer Tail Lamp Outer Panel Section Left Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

Refer to: [Outer Tail Lamp Outer Panel Section Right Side - 110](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

19.

 NOTE:

INGENIUM I4 2.0L Diesel only.

For additional installation information.

Refer to: [Diesel Exhaust Fluid Tank](#) (303-08A Engine Emission Control - INGENIUM I4 2.0L Diesel, Removal and Installation).

20. For additional installation information.

Refer to: [Rear Silencer - Vehicles Without: Diesel Exhaust Fluid](#) (309-00A Exhaust System - INGENIUM I4 2.0L Diesel, Removal and Installation).

Refer to: [Rear Silencer - Vehicles With: Diesel Exhaust Fluid](#) (309-00A Exhaust System - INGENIUM I4 2.0L Diesel, Removal and Installation).

Refer to: [Rear Silencer](#) (309-00B Exhaust System - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Rear Silencer](#) (309-00C Exhaust System - INGENIUM I6 3.0L Petrol, Removal and Installation).