

PUBLISHED: 28-JAN-2020
2020.0 DEFENDER (LE), 501-30

REAR END SHEET METAL REPAIRS

REAR FLOOR PANEL CENTER CROSS MEMBER - 90

[G2452662]

mcx30.com


REMOVAL

 NOTE:

In this procedure the rear floor panel center cross member is installed in conjunction with:

- Fuel tank
- Rear subframe
- Back panel inner extensions
- Rear floor panel.

1.

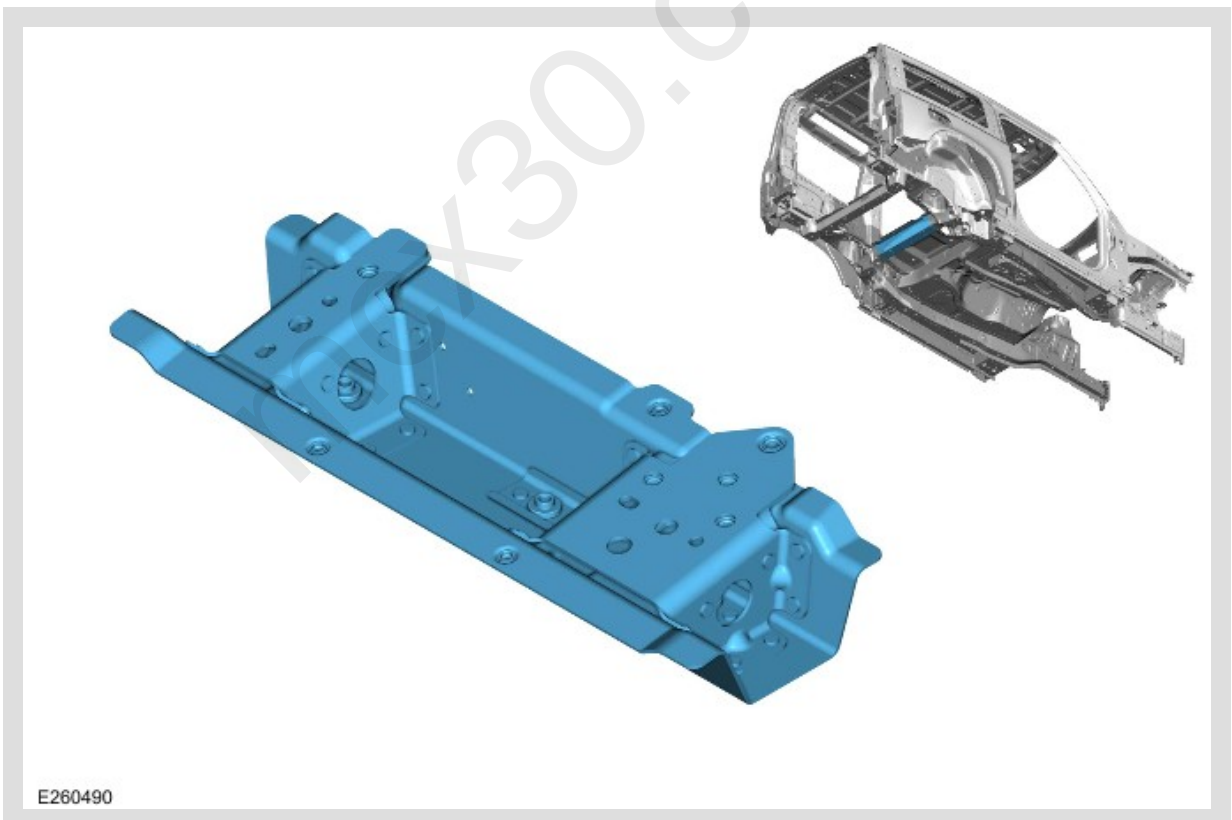

The rear floor panel center cross member is serviced as indicated.

2.

Before commencing this procedure make sure that you are aware of all Health and Safety requirements. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.



NOTES:

- Where Breakstem Fastener (BSF) removal is instructed remove the fastener shaft with a 4 mm punch and remove the head with a 6.5 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Self Piercing Rivet (SPR) removal is instructed use either the Jaguar Land Rover (JLR) approved SPR tool or a 5.3 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.
- To make sure that the vehicle is correctly aligned it must be placed on a JLR approved alignment jig.

When installing the rear floor panel center cross member make sure that you are aware of the methods, tools and fixings used in this procedure.

Refer to: [Body Repairs](#) (501-25A Body Repairs - General Information, Description and Operation).

Refer to: [Adhesives, Fixings and Consumables](#) (501-25A Body Repairs - General Information, Description and Operation).

4.

For additional information on the fixings required to complete this procedure

Refer to: [Specifications - 110](#) (501-30 Rear End Sheet Metal Repairs, Specifications).

5.

For additional removal information

Refer to: Fuel Tank - INGENIUM I4 2.0L Petrol - PHEV (310-01 Fuel Tank and Lines - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Fuel Tank - INGENIUM I4 2.0L Petrol, 110](#) (310-01A Fuel Tank and Lines - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Fuel Tank - 110](#) (310-01B Fuel Tank and Lines - INGENIUM I6 3.0L Petrol, Removal and Installation).

Refer to: [Fuel Tank - 110](#) (310-01C Fuel Tank and Lines - INGENIUM I4 2.0L Diesel, Removal and Installation).

6.

For additional removal information

Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

7.

For additional removal information

Refer to: [Back Panel Inner Extensions - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

8.


For additional removal information

Refer to: [Rear Floor Panel - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

9.

Release and position the wiring harness to one side.

10.

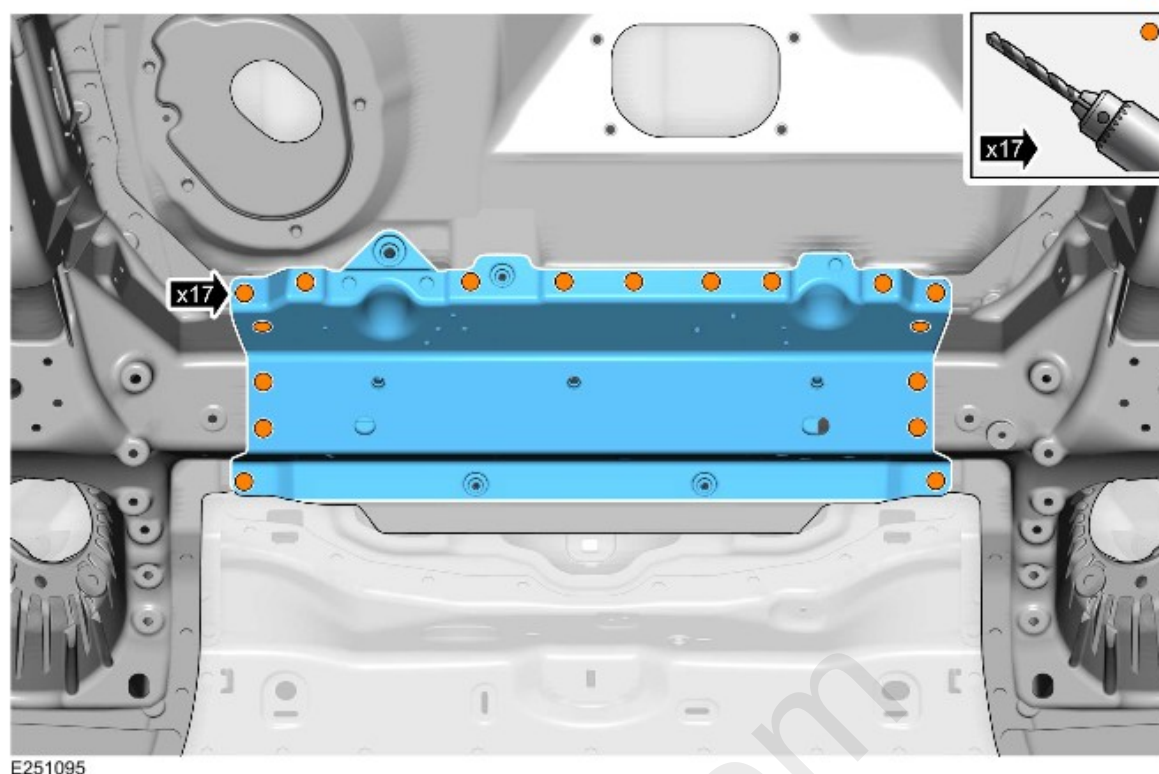

Remove the self piercing rivets as indicated.

11. Carefully separate the joints and remove the rear floor panel center cross member.

INSTALLATION

⚠ CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.

△ NOTE:


Breakstem Fastener (BSF) installation involves using the Jaguar Land Rover (JLR) approved BSF installation tool and requires a hole diameter of 6.5 mm.

1. Remove the rivet remnants.
2. Dress the flanges where necessary.
3. Offer up the new rear floor panel center cross member and new rear floor panel. Clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

4.

NOTE:

Care should be taken not to drill through into the inner panel.

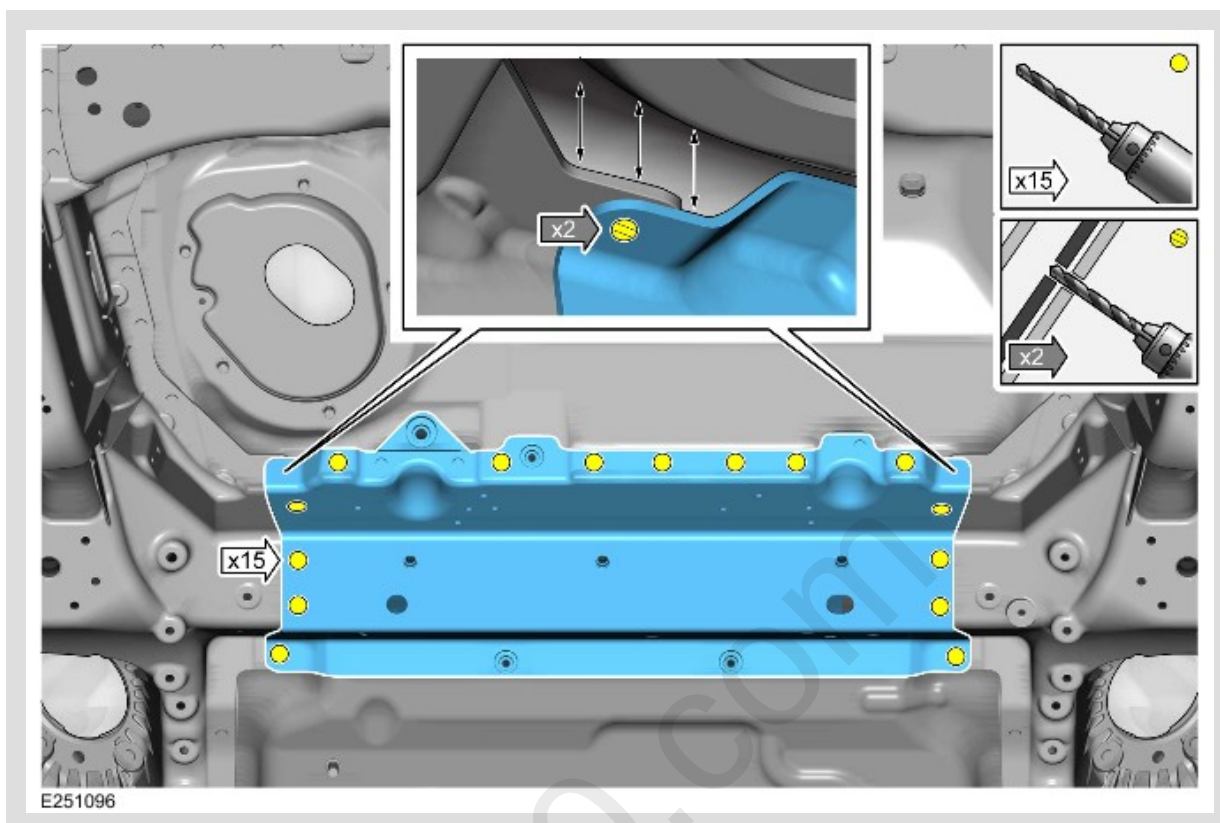

Drill holes where the Breakstem Fasteners (BSFs) are to be installed as indicated.

5. Remove the new rear floor panel center cross member and new rear floor panel.


6. Deburr the drilled holes.

7. Clean and prepare the panel surfaces.

8.

 NOTE:


Make sure a continuous bead of adhesive surrounds fixing holes.

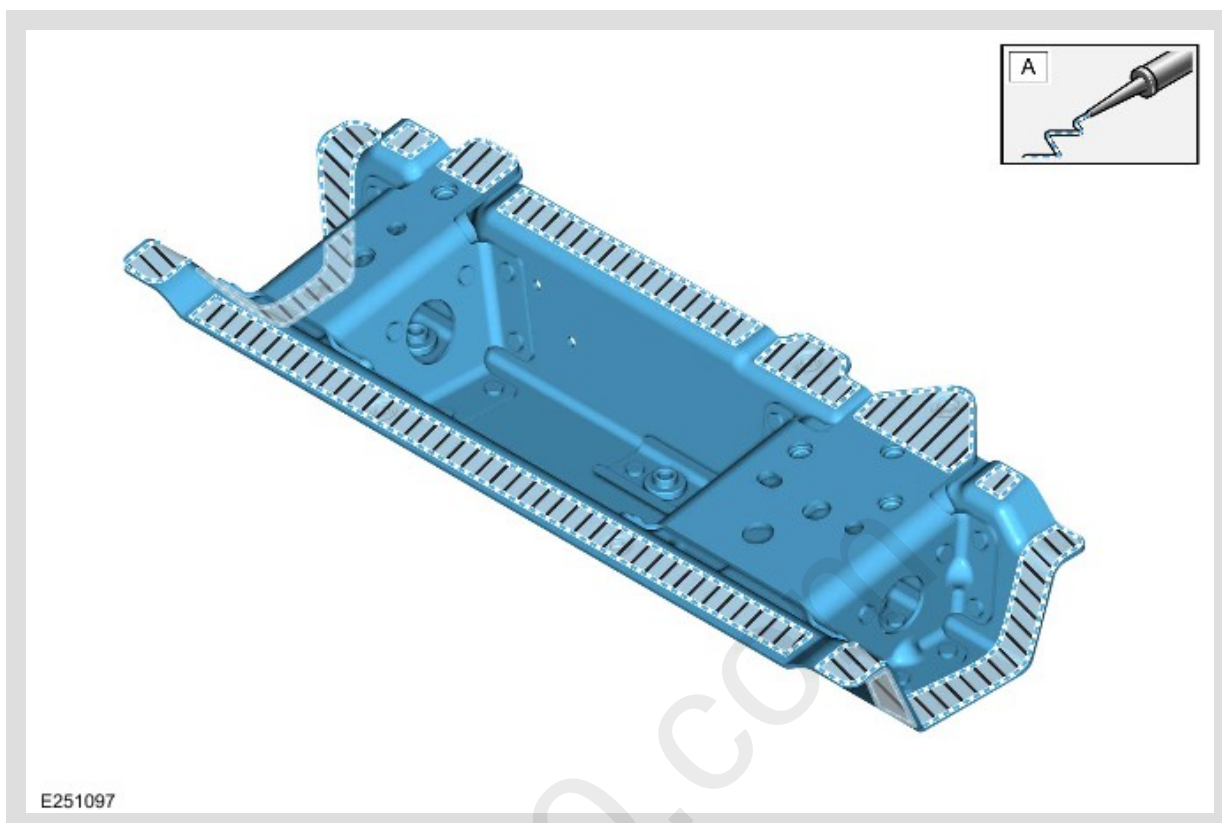

Apply a 5 mm zig zag bead of the JLR recommended bonding material as indicated.

9.


Offer up the new rear floor panel center cross member and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

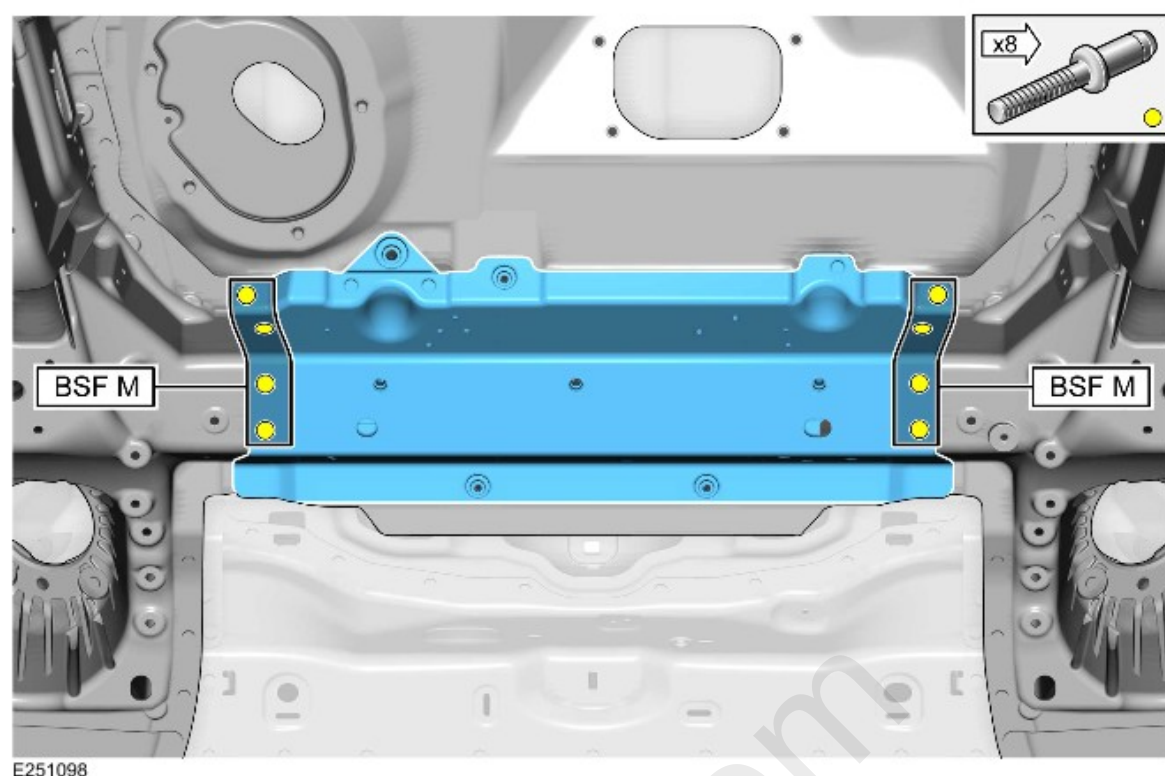

Install the BSFs as indicated.

 NOTE:

Make sure that the Breakstem Fasteners (BSFs) are installed from the inside.

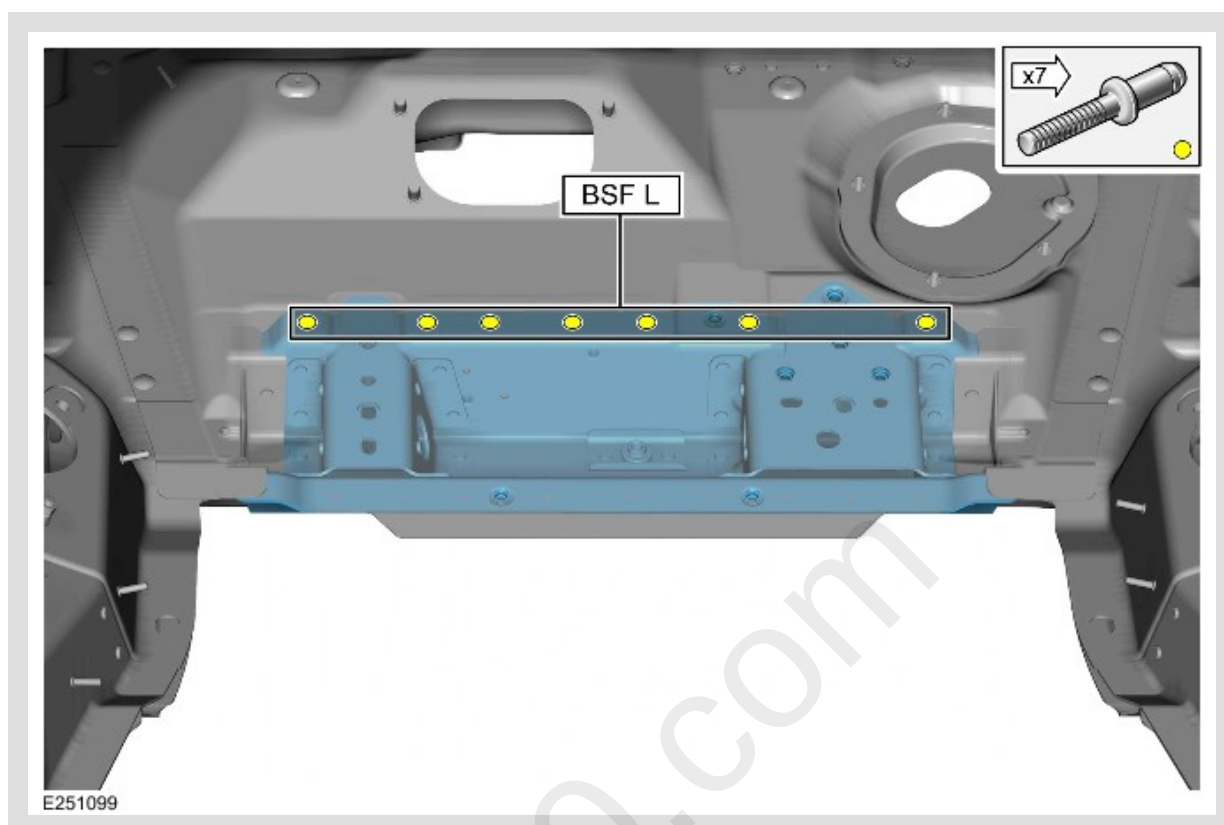


Install the BSFs as indicated.

12.

 NOTES:

- When installing the rear floor panel center cross member in conjunction with the rear floor panel.
- Make sure that the Breakstem Fasteners (BSFs) are installed from the inside.

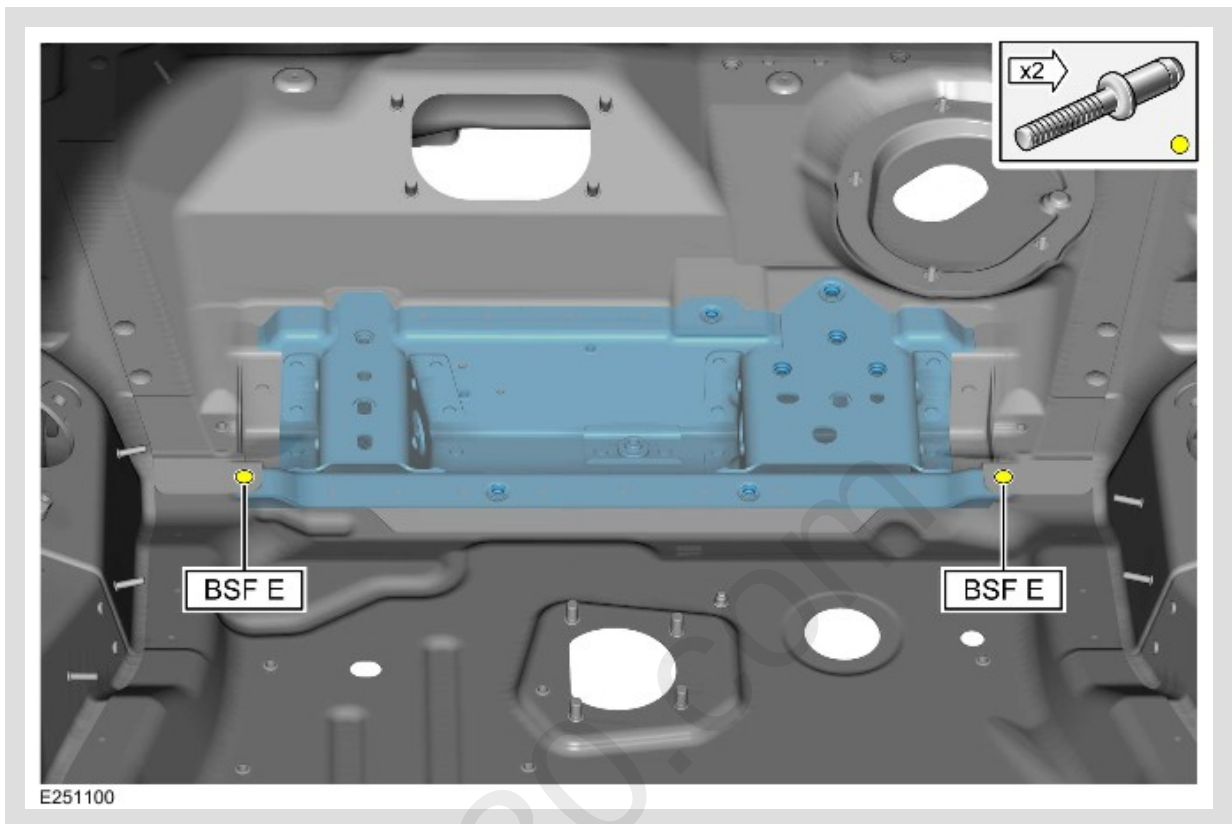

Install the BSFs as indicated.

13. Remove any excess adhesive.

14. Make sure that any open or exposed panel joints are correctly sealed.

15. Make sure corrosion protection is applied to all areas affected by the repair.

16. Make sure that all installed BSFs are sealed using a JLR recommended sealer.

 NOTE:

The installation of associated panels and components is the reversal of the removal procedure.

17. For additional installation information

Refer to: [Rear Floor Panel - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

18. For additional installation information

Refer to: [Back Panel Inner Extensions - 90](#) (501-30 Rear End Sheet Metal Repairs, Removal and Installation).

19. For additional installation information

Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

20. For additional installation information

Refer to: Fuel Tank - INGENIUM I4 2.0L Petrol - PHEV (310-01 Fuel Tank and Lines - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Fuel Tank - INGENIUM I4 2.0L Petrol, 110](#) (310-01A Fuel Tank and Lines - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Fuel Tank - 110](#) (310-01B Fuel Tank and Lines - INGENIUM I6 3.0L Petrol, Removal and Installation).

Refer to: [Fuel Tank - 110](#) (310-01C Fuel Tank and Lines - INGENIUM I4 2.0L Diesel, Removal and Installation).