

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. [Engine/Propulsion](#)
2. [Exhaust](#)
3. [Repair Instructions](#)
- 4.

Exhaust Control Valve Actuator Linkage Replacement


Warning:

In order to avoid being burned, do not service the exhaust system while it is still hot. Service the system when it is cool.

Warning:

Avoid contact with HOT components. Wear safety glasses and protective gloves to avoid personal injury.

Removal Procedure

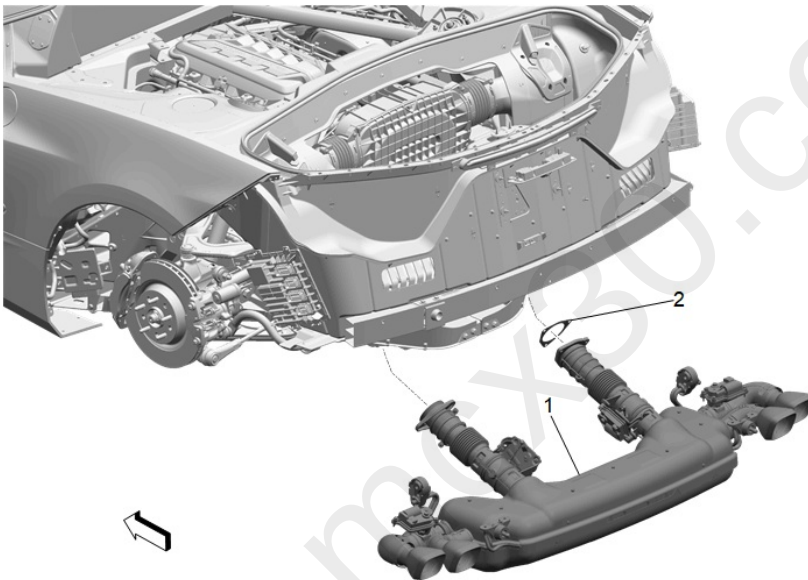


1. [Click here for full size](#)
2. Exhaust Muffler (1) >> Remove - Exhaust Muffler Replacement
3. [Click here for full size](#)
4. Locate the 2 exhaust control valve actuator linkage retainers (1) located at each end of the exhaust control valve actuator linkage.
5. [Click here for full size](#)
6. Disengage the 2 exhaust control valve actuator linkage retainers (1) from the exhaust control valve actuator linkage and rotate them away from the center line of the exhaust control valve actuator linkage.
7. [Click here for full size](#)
8. Remove the 2 exhaust control valve actuator linkage retainers (1).
9. [Click here for full size](#)

10. Using a suitable flat bladed tool, disengage the exhaust control valve actuator linkage (1) from the exhaust control valve actuator and the exhaust muffler.

Installation Procedure

1. [Click here for full size](#)
2. Engage the exhaust control valve actuator linkage (1) to the exhaust control valve actuator and the exhaust muffler.
3. [Click here for full size](#)
4. Install the 2 exhaust control valve actuator linkage retainers (1).
5. [Click here for full size](#)
6. Rotate the 2 exhaust control valve actuator linkage retainers (1) into the center line of the exhaust control valve actuator linkage and engage.
7. [Click here for full size](#)
8. Ensure that the 2 exhaust control valve actuator linkage retainers (1) are fully seated onto both ends of the exhaust control valve actuator linkage.

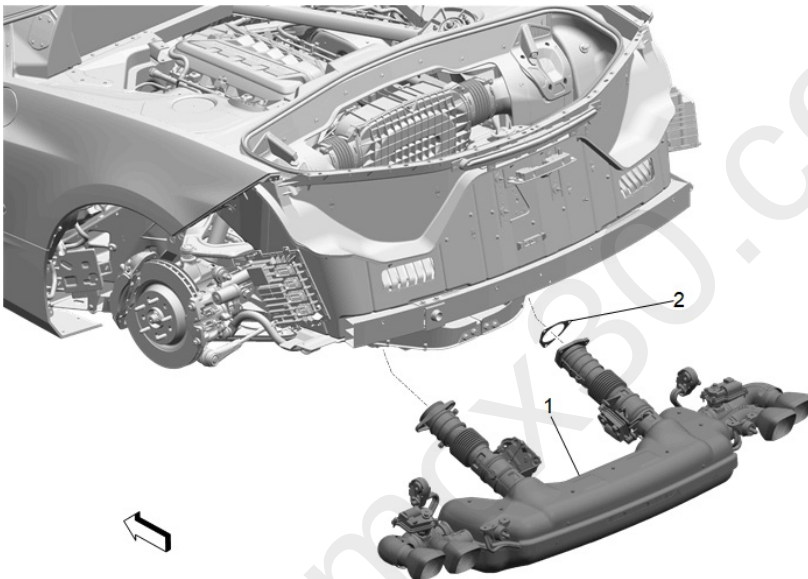

9. [Click here for full size](#)
10. Exhaust Muffler (1) >> Install - Exhaust Muffler Replacement
11. Perform the Exhaust Flow Control Valve Learn. Exhaust Flow Control Valve Learn