

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **General Information**
2. **Maintenance and Lubrication**
3. **Specifications**
- 4.

Maintenance Items

Approximate Fluid Capacities

Fluid and Lubricant Recommendations

Maintenance Replacement Parts

GM Air Filter Life System Resetting

GM Oil Life System Resetting

Tire Rotation

Tire Pressure Indicator Sensor Learn

Passenger Compartment Air Filter Replacement

Brake Pad Inspection

Cooling System Draining and Filling

Hydraulic Brake System Bleeding

Hydraulic Clutch System Bleeding

Air Cleaner Element Replacement

Gas Engine Ignition Spark Plug Replacement - Left Side

Gas Engine Ignition Spark Plug Replacement - Right Side

Drive Belt Tensioner Replacement - Accessory

Automatic Transmission Fluid Filter and Seal Replacement

Maintenance Procedure	Link
Approximate Fluid Capacities	
Fluid and Lubricant Recommendations	
Maintenance Replacement Parts	
GM Air Filter Life System Resetting	
GM Oil Life System Resetting	
Tire Rotation	
Tire Pressure Indicator Sensor Learn	
Passenger Compartment Air Filter Replacement	
Brake Pad Inspection	
Cooling System Draining and Filling	
Hydraulic Brake System Bleeding	
Hydraulic Clutch System Bleeding	
Air Cleaner Element Replacement - 6.2L (LT2)	
Spark Plug Replacement - Left Side (LT2)	
Spark Plug Replacement - Right Side (LT2)	
Drive Belt Replacement - 6.2L (LT2)	
Automatic Transmission Fluid Filter and Seal Replacement - Tremec DCT TR9080 (M1L)	