

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. HVAC


2. **Heating, Ventilation, and Air Conditioning**

3. **Repair Instructions**


- 4.

Air Inlet Housing Front Panel Replacement

Removal Procedure

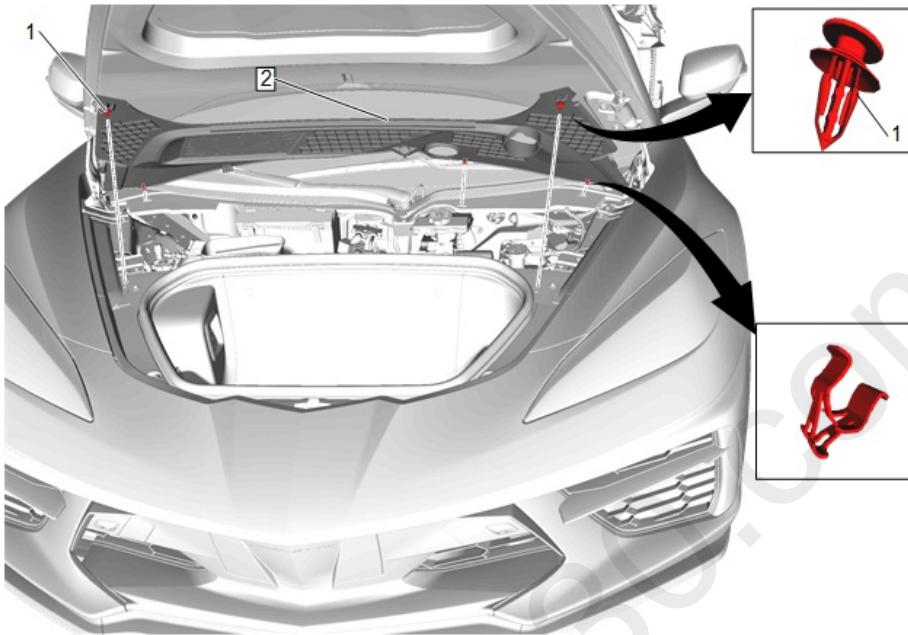

1. [Click here for full size](#)
2. Front Compartment Rear Access Cover (2) >> Remove - Front Compartment Rear Access Cover Replacement
3. Air Inlet Grille Panel >> Remove - Air Inlet Grille Panel Replacement

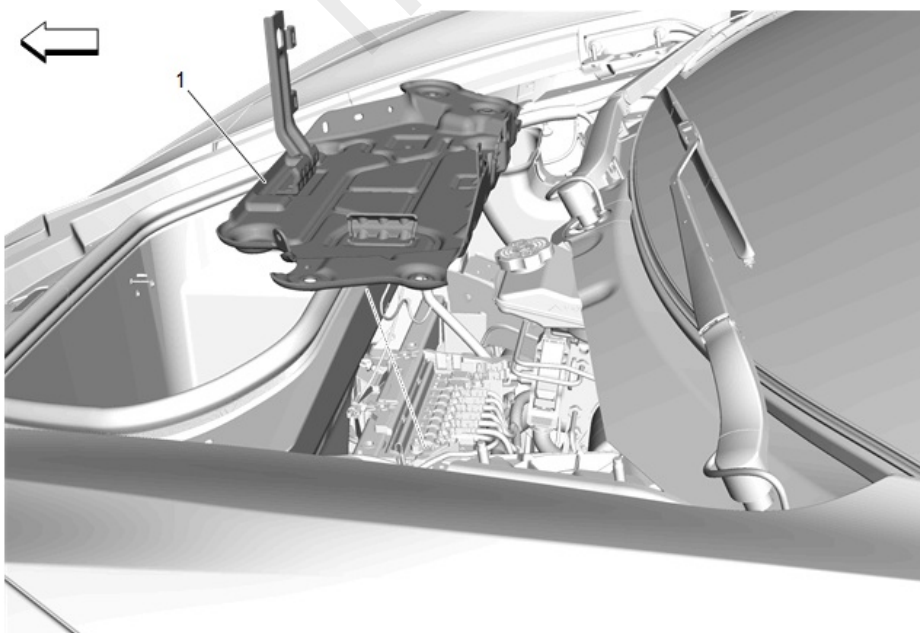


4. [Click here for full size](#)

5. Battery Tray (1) >> Remove - Battery Tray Replacement




6.
[Click here for full size](#)

7. Air Inlet Housing Nut (1) >> Remove [2x]

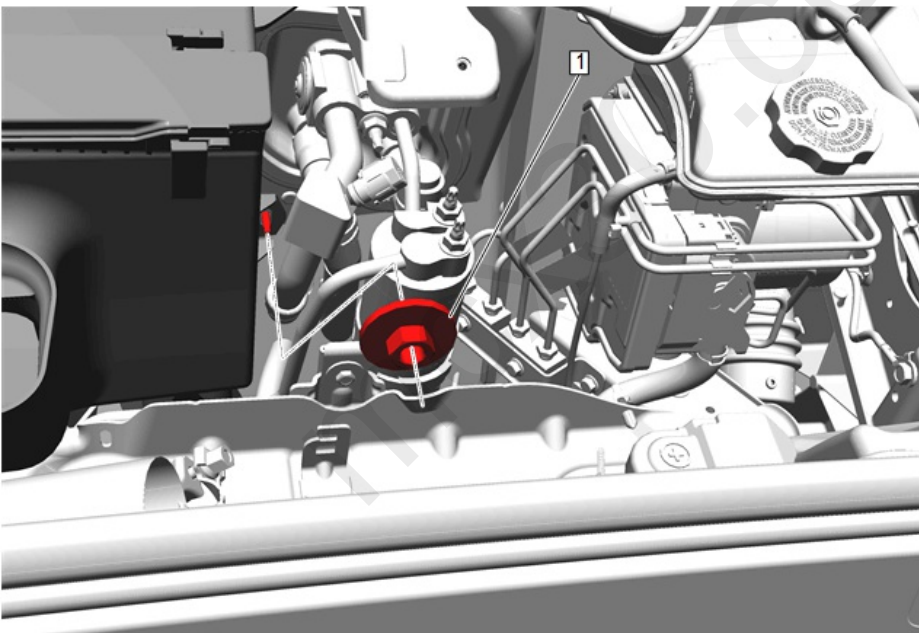


8.
[Click here for full size](#)

9. Air Inlet Housing Nut (1) >> Remove

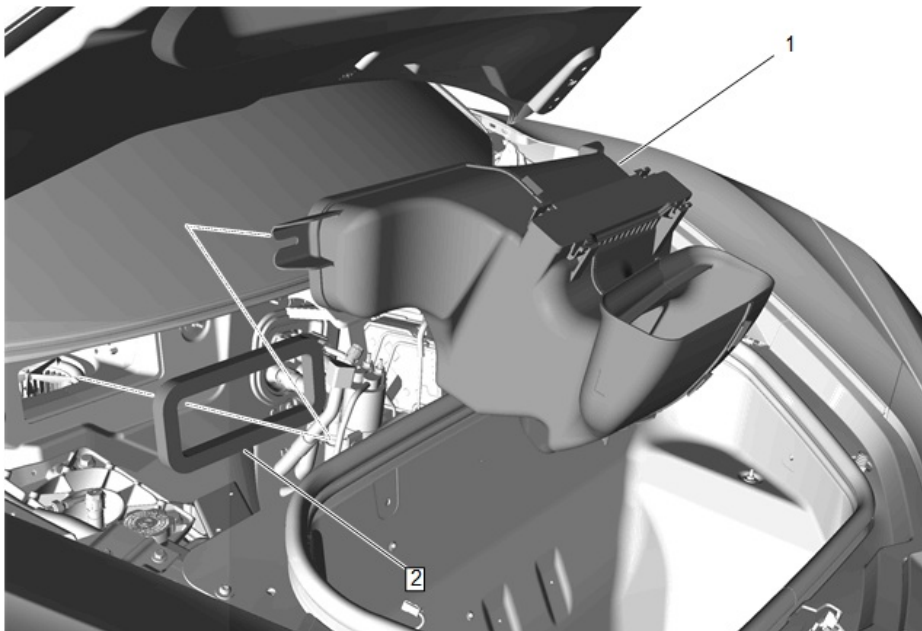


10. [Click here for full size](#)
11. Air Inlet Housing Front Panel (1) >> Remove
12. Air Inlet Housing Seal (2) >>> Remove
13. Transfer components as necessary.

Installation Procedure

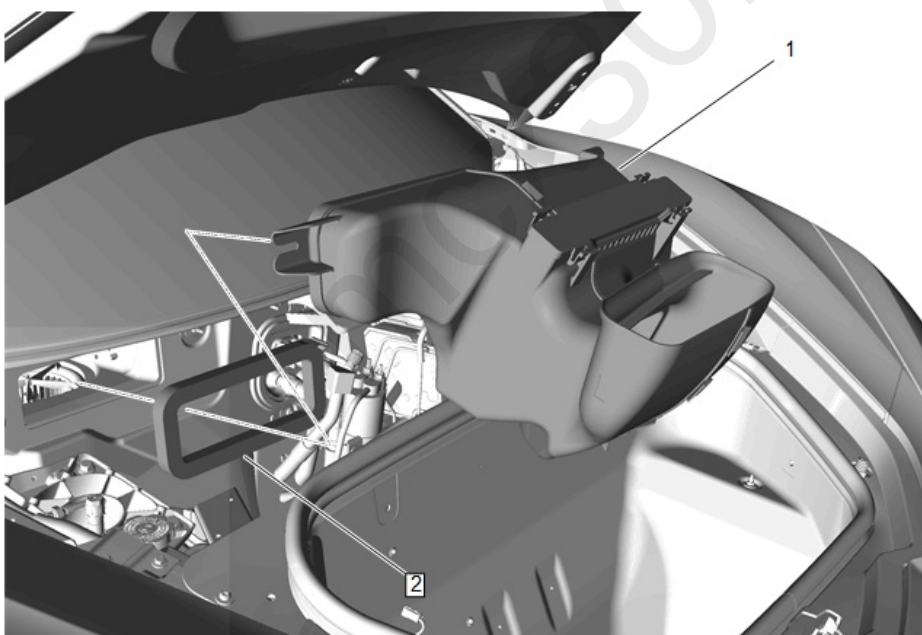

1. [Click here for full size](#)
2. Air Inlet Housing Seal (2) >>> Install
3. Air Inlet Housing Front Panel (1) >> Install

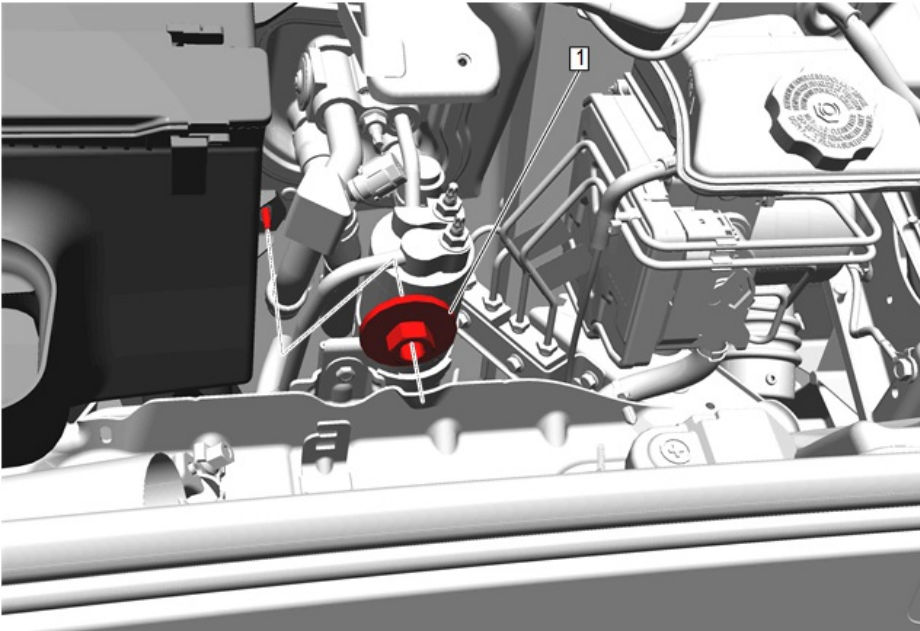

4.
Click here for full size

5. Caution:


Refer to Fastener Caution.

6. Air Inlet Housing Nut (1) >> Install and tighten 7 N-m (62 lb in)



7.
Click here for full size


8. Air Inlet Housing Nut (1) >> Install and tighten [2x]7 N-m (62 lb in)

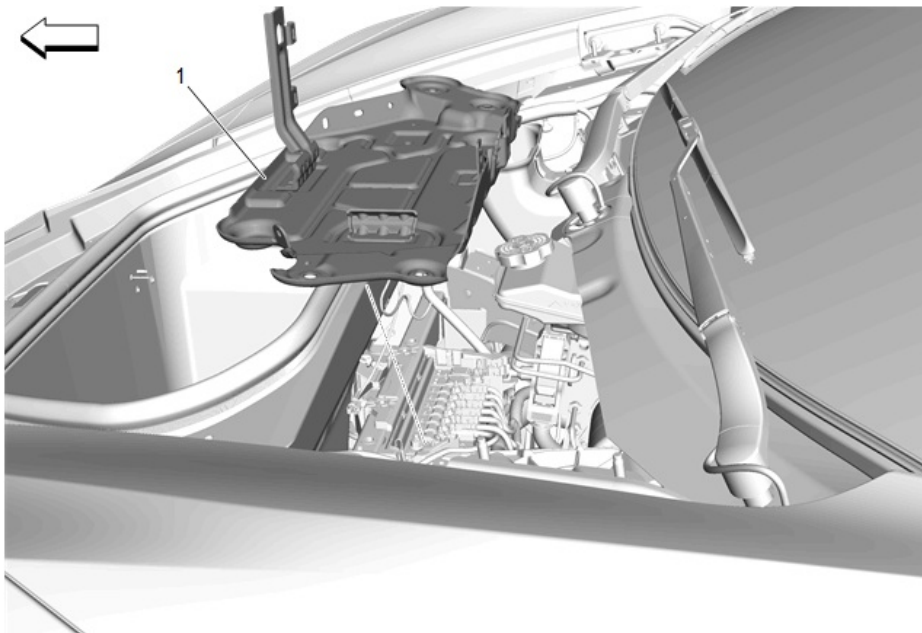

9.
[Click here for full size](#)

10. Battery Tray (1) >> Install - Battery Tray Replacement

11. Air Inlet Grille Panel >> Install - Air Inlet Grille Panel Replacement

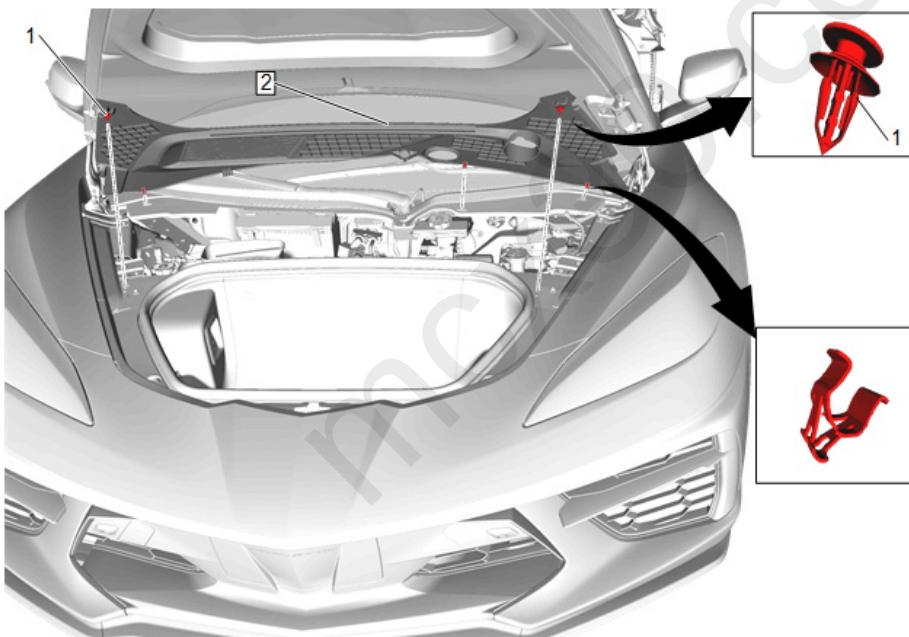

12.
[Click here for full size](#)

13. Front Compartment Rear Access Cover (2) >> Install - Front Compartment Rear Access Cover Replacement