

2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

1. HVAC


2. **Heating, Ventilation, and Air Conditioning**

3. **Repair Instructions**


- 4.

Floor Front Air Outlet Duct Replacement - Left Side

Removal Procedure

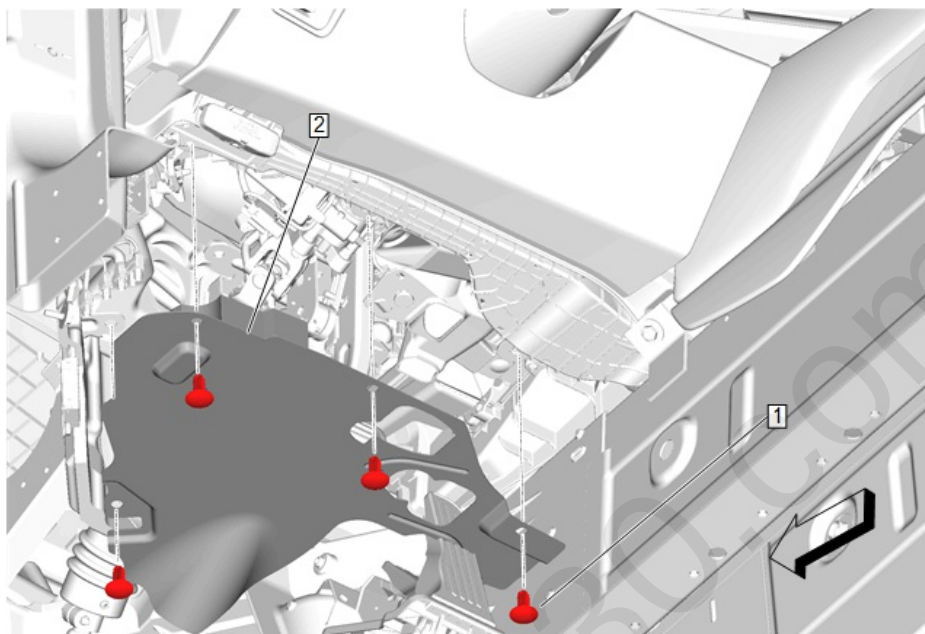


1.
[Click here for full size](#)
2. Instrument Panel Lower Trim Panel Insulator - Left Side (2) >> Remove - Instrument Panel Lower Trim Panel Insulator Replacement - Left Side

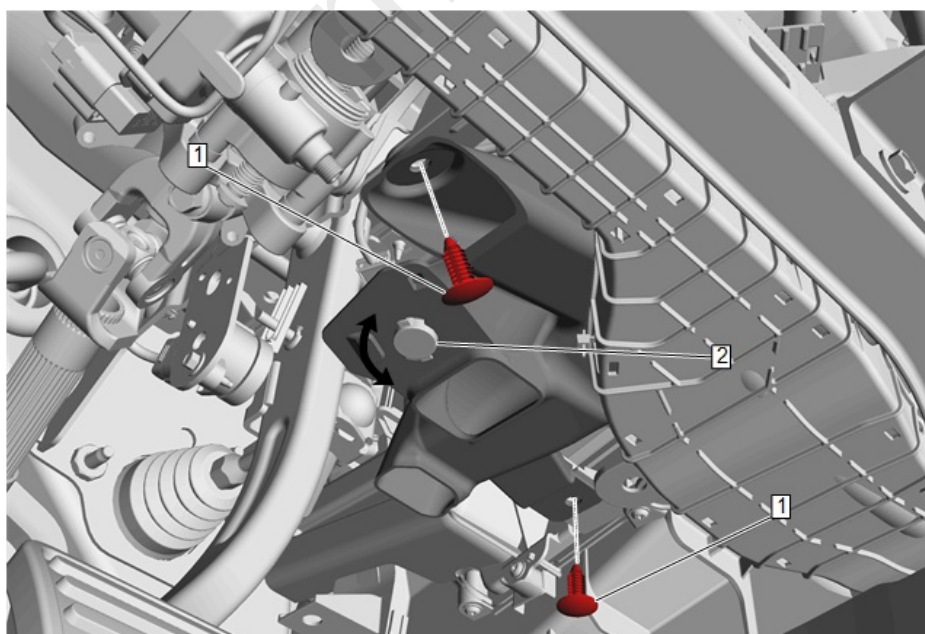


3.
[Click here for full size](#)

4. Floor Front Air Outlet Duct Retainer (1) >> Remove [2x]
5. Twist the front floor flood lamp (2) counter clock wise to remove the lamp from the floor front air outlet duct.

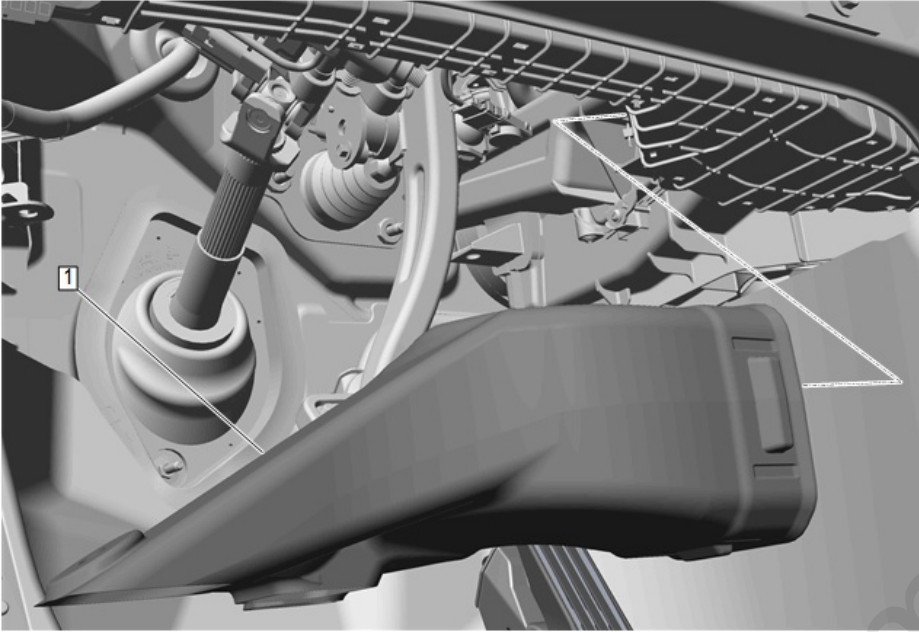


6.
[Click here for full size](#)
7. Floor Front Air Outlet Duct - Left Side (1) >> Remove


Installation Procedure

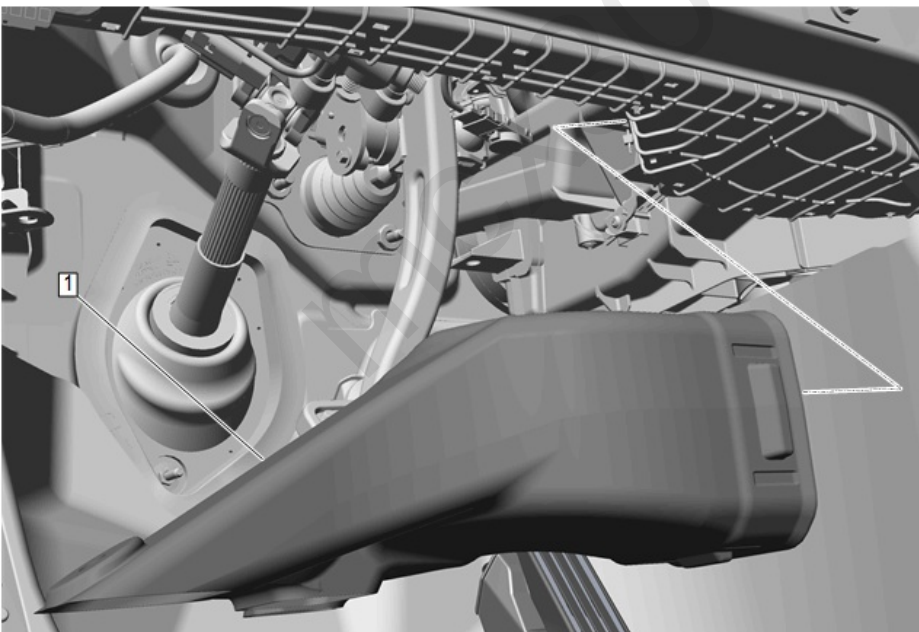

1.
[Click here for full size](#)
2. Floor Front Air Outlet Duct - Left Side (1) >> Install

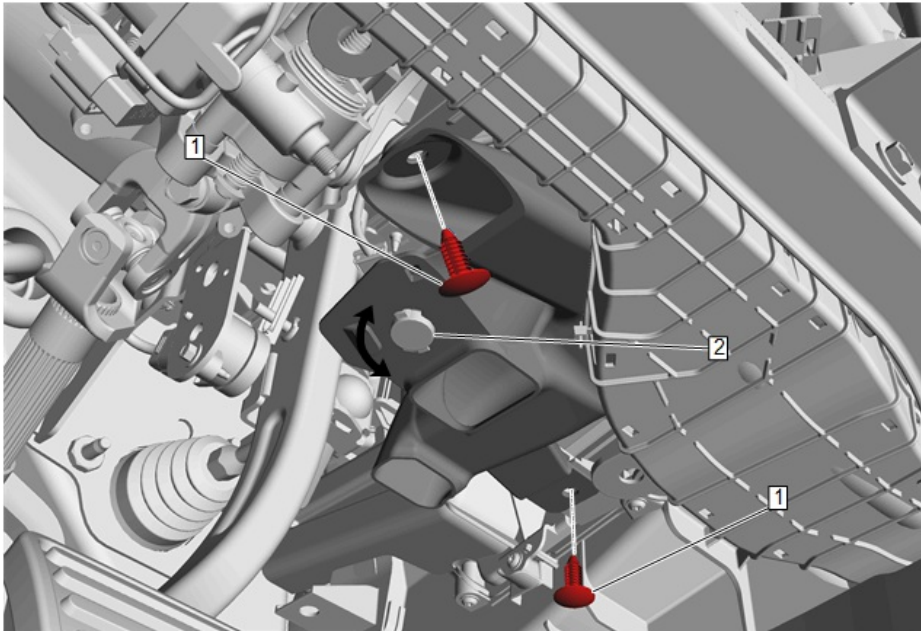

3. [Click here for full size](#)
4. Twist the front floor flood lamp (2) clock wise to install the lamp from the floor front air outlet duct.
5. Floor Front Air Outlet Duct Retainer (1) >> Install [2x]

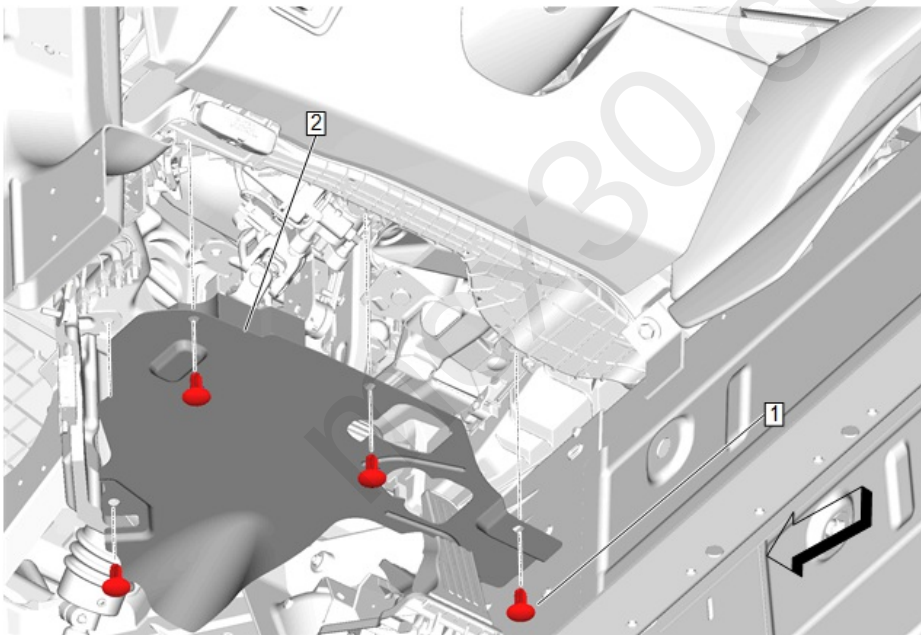

6. [Click here for full size](#)
7. Instrument Panel Lower Trim Panel Insulator - Left Side (2) >> Install - Instrument Panel Lower Trim Panel Insulator Replacement - Left Side