


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. HVAC
2. [HVAC - Automatic](#)
3. [Repair Instructions](#)
- 4.

Floor Air Temperature Sensor Replacement - Left Side (Right Hand Drive)

Removal Procedure

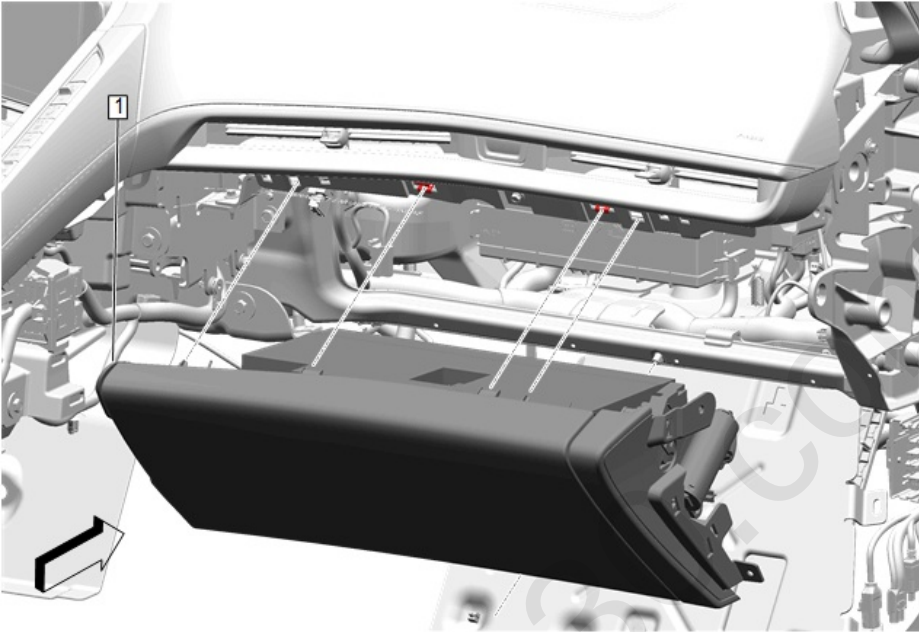

1. [Click here for full size](#)
2. Note:
Left hand drive vehicle shown, right hand drive vehicle similar.
3. Instrument Panel Compartment (1) >> Remove - Instrument Panel Compartment Replacement

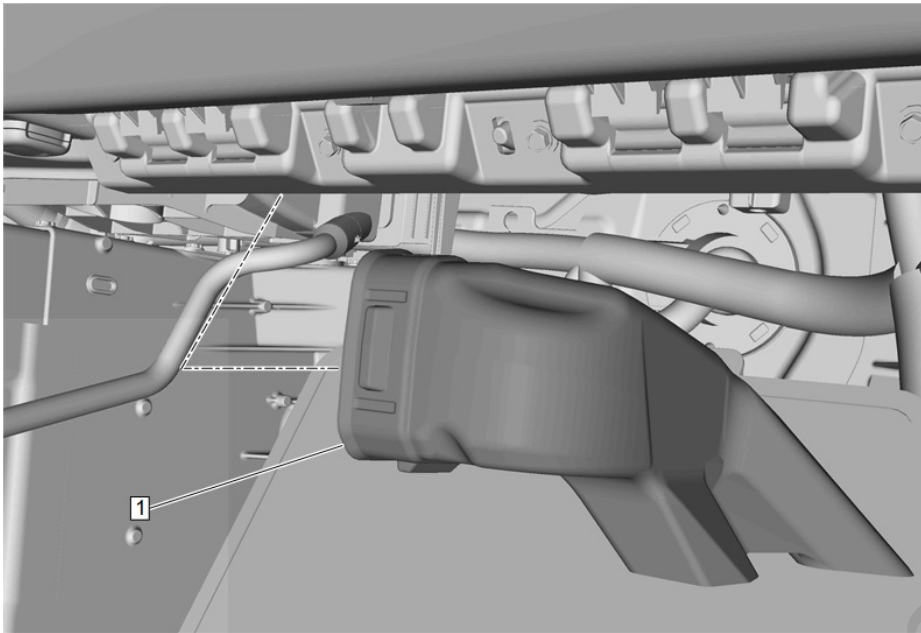

4. [Click here for full size](#)

5. Note:

Left hand drive vehicle shown, right hand drive vehicle similar.

6. Floor Front Air Outlet Duct - Right Side (1) >>> Remove - Floor Front Air Outlet Duct Replacement - Right Side

7. [Click here for full size](#)

8. Disconnect the electrical connector.


9. Floor Air Temperature Sensor - Left Side (1) >>> Remove

Installation Procedure

1. [Click here for full size](#)


2. Floor Air Temperature Sensor - Left Side (1) >>> Install

3. Connect the electrical connector.

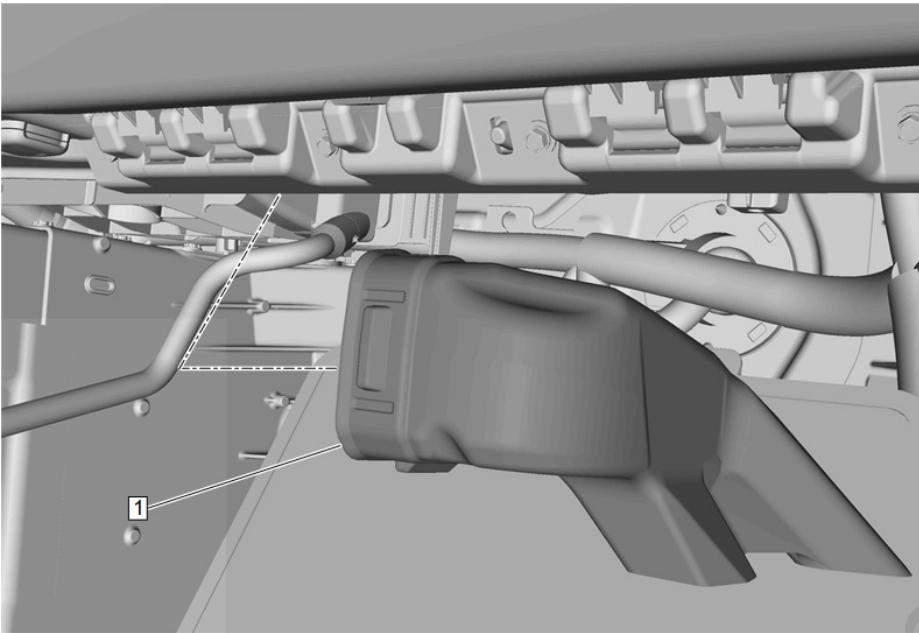

4.
[Click here for full size](#)

5. Floor Front Air Outlet Duct - Right Side (1) >> Install - Floor Front Air Outlet Duct Replacement - Right Side

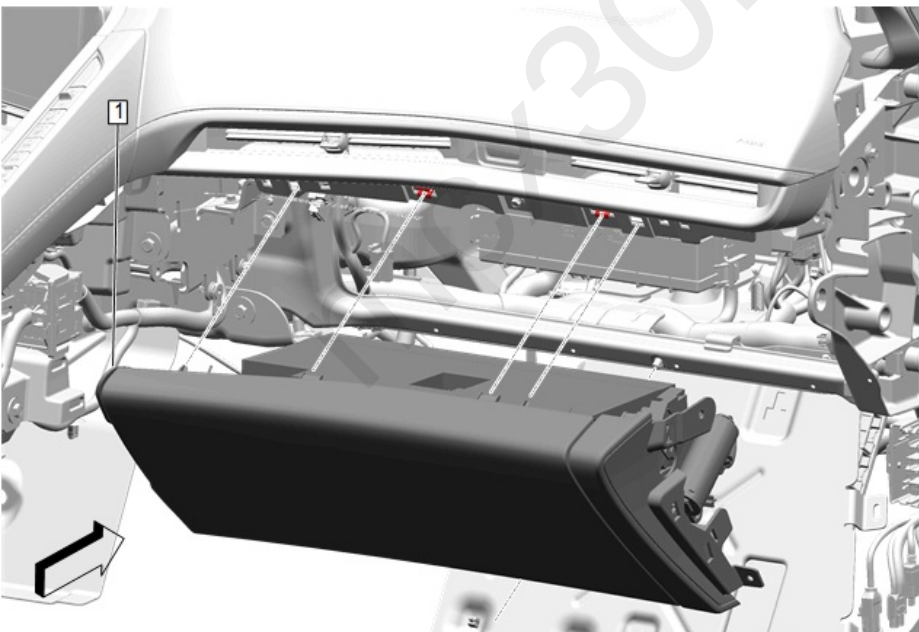

6.
[Click here for full size](#)

7. Instrument Panel Compartment (1) >> Install - Instrument Panel Compartment Replacement