

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. HVAC
2. **HVAC - Automatic**
3. **Repair Instructions**
- 4.

Floor Air Temperature Sensor Replacement - Right Side


Removal Procedure

1. Instrument Panel Outer Trim Cover - Right Side >> Remove - Instrument Panel Outer Trim Cover Replacement

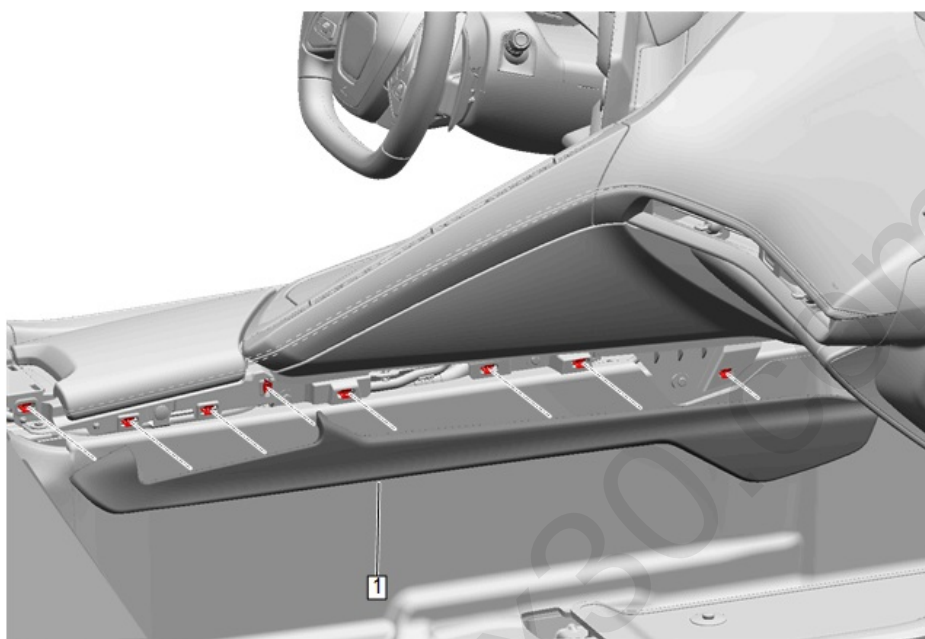

2. [Click here for full size](#)


3. Front Floor Rear Console Side Trim Panel - Right Side (1) >> Remove - Front Floor Rear Console Side Trim Panel Replacement - Right Side

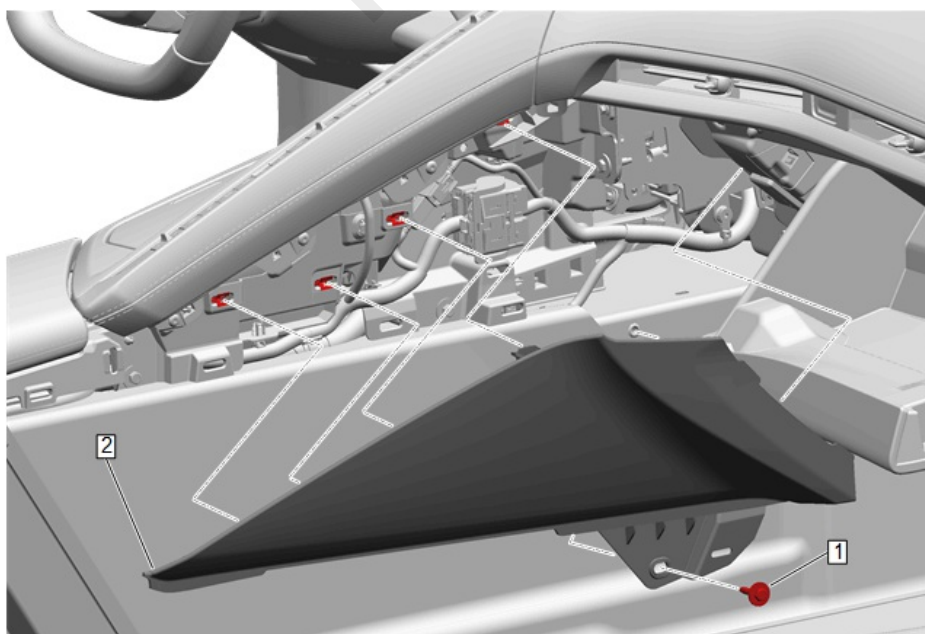

- 4.


[Click here for full size](#)

5. Front Floor Console Extension Panel - Right Side (2) >> Remove - Front Floor Console Extension Panel Replacement

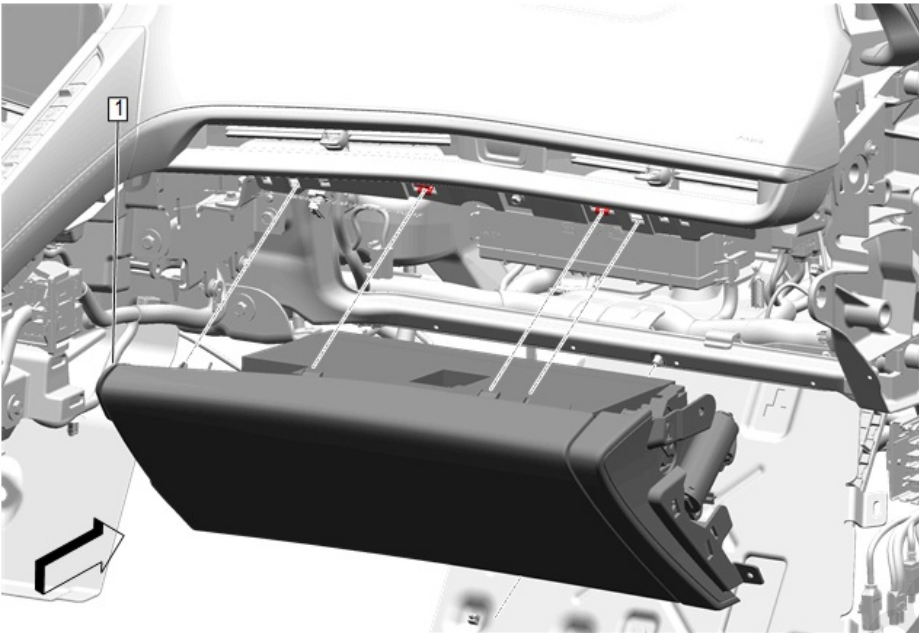

6. [Click here for full size](#)

7. Instrument Panel Compartment (1) >> Remove - Instrument Panel Compartment Replacement

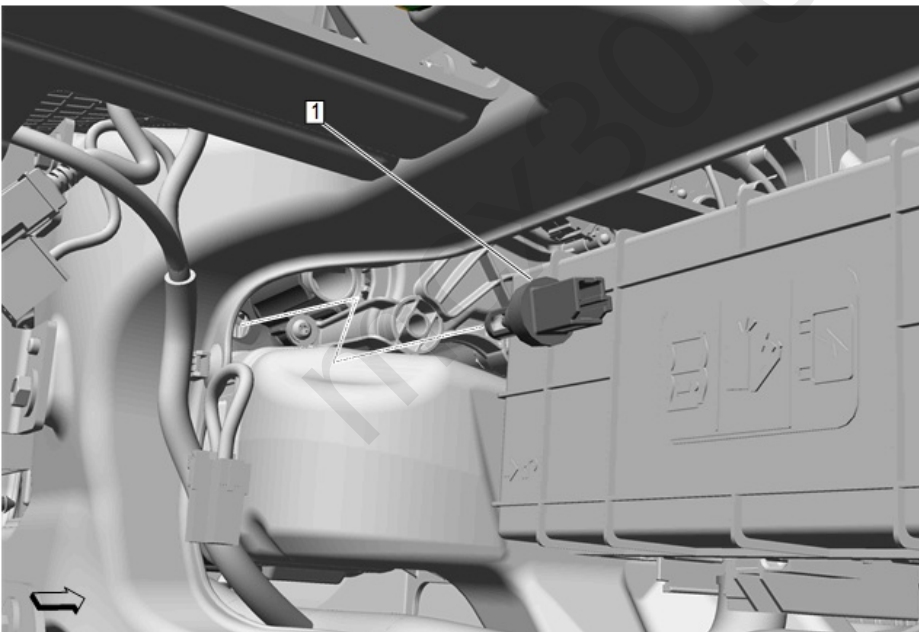


8. [Click here for full size](#)


9. Floor Air Temperature Sensor - Right Side (1) >> Remove

10. Disconnect the electrical connector.


Installation Procedure

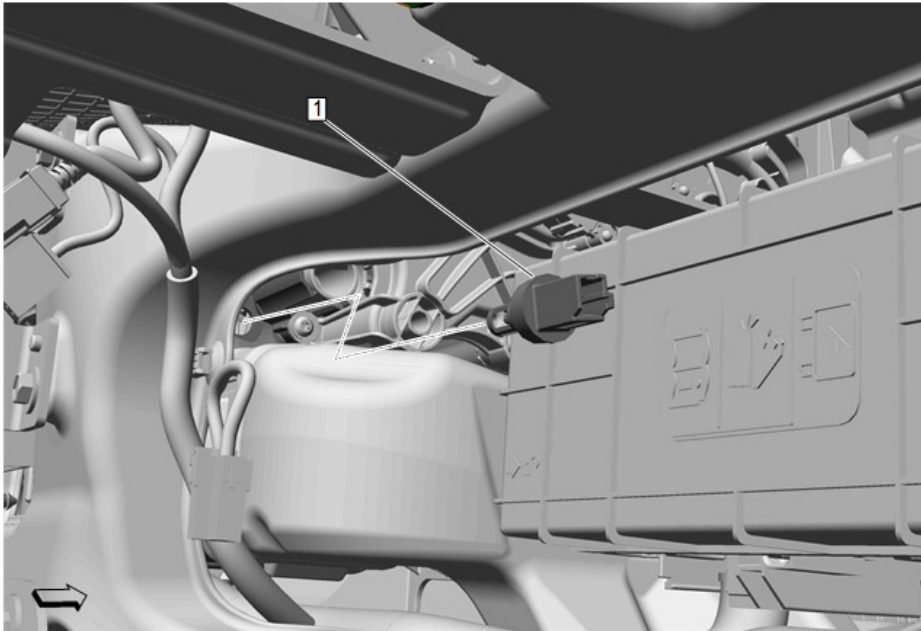

1. [Click here for full size](#)
2. Floor Air Temperature Sensor - Right Side (1) >> Install
3. Connect the electrical connector.

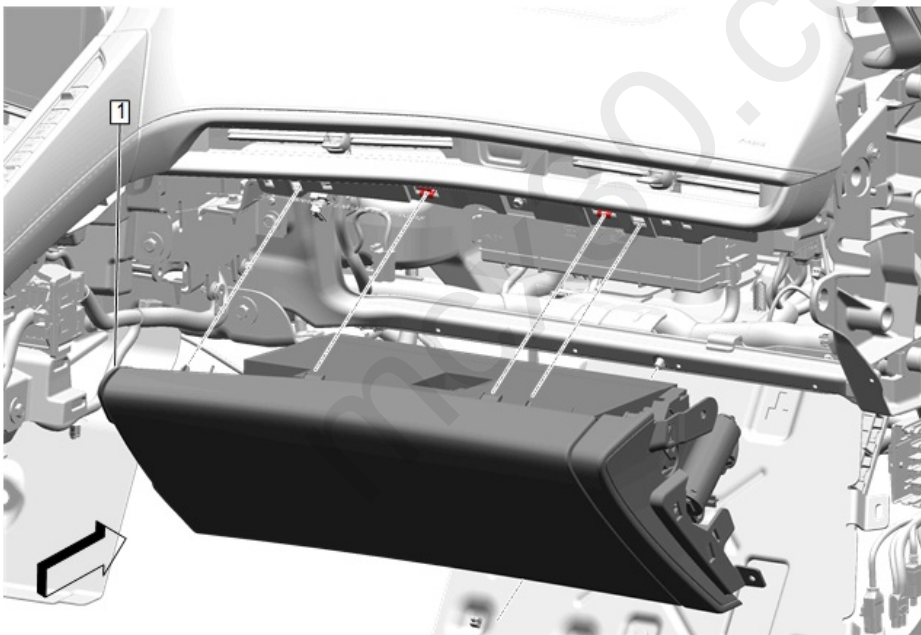


4. [Click here for full size](#)
5. Instrument Panel Compartment (1) >> Install - Instrument Panel Compartment Replacement

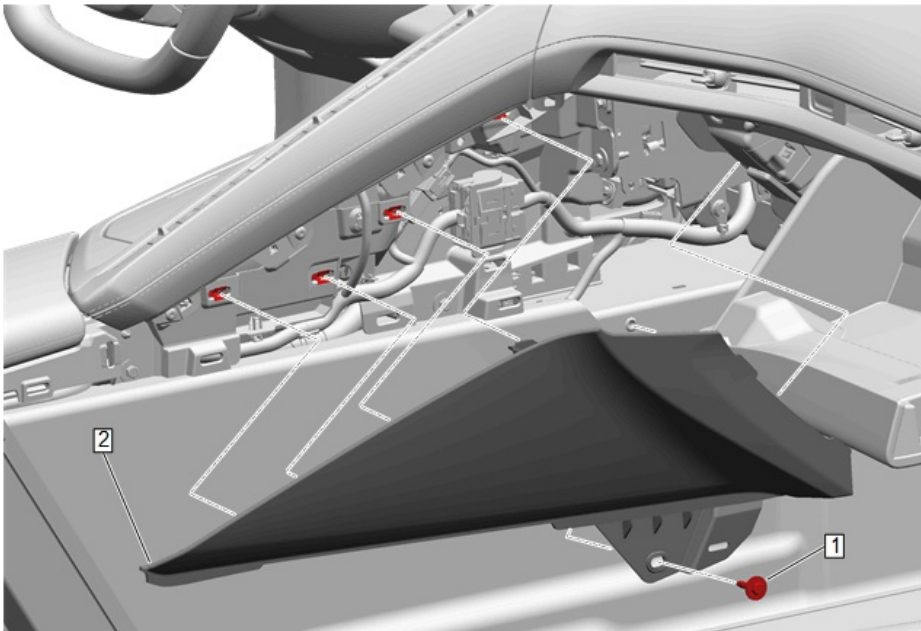

6.
[Click here for full size](#)

7. Front Floor Console Extension Panel - Right Side (2) >> Install - Front Floor Console Extension Panel Replacement

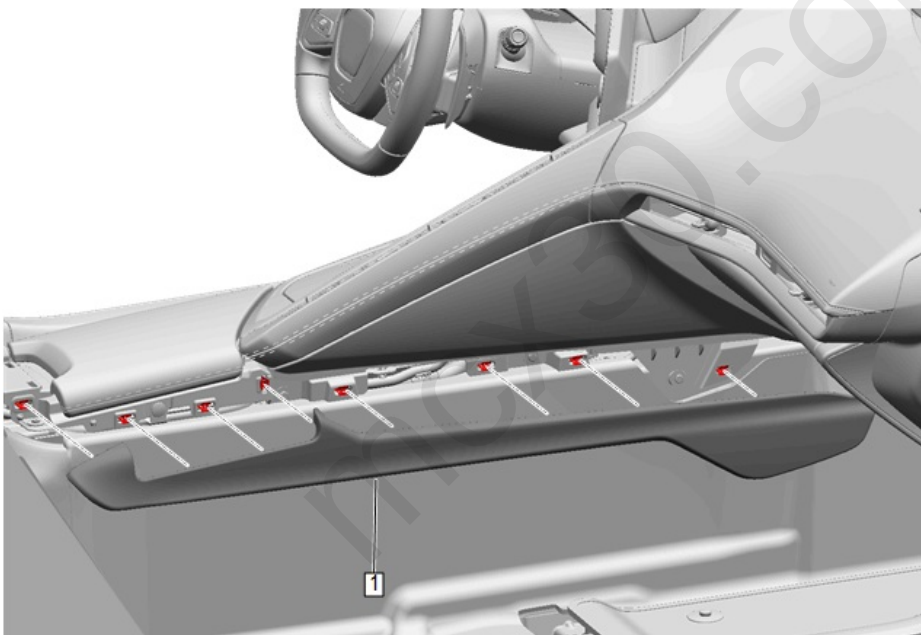

8.
[Click here for full size](#)

9. Front Floor Rear Console Side Trim Panel - Right Side (1) >> Install - Front Floor Rear Console Side Trim Panel Replacement - Right Side

10. Instrument Panel Outer Trim Cover - Right Side >> Install - Instrument Panel Outer Trim Cover Replacement

11. Clear the DTCs.