

2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)

1. [HVAC](#)

2. [HVAC - Automatic](#)

3. [Repair Instructions](#)

- 4.

Sun Load and Ambient Light and Security Indicator Sensor Replacement

Removal Procedure

1. Click here for full size
2. Insert a suitable flat-bladed plastic trim tool between the sun load and ambient light and security indicator sensor (1) and instrument panel extension to depress the detents at the arrows.
3. Sun Load Temperature and Ambient Light and Security Indicator Sensor (1) >> Remove
4. Disconnect the electrical connector.

Installation Procedure

1. Click here for full size
2. Connect the electrical connector.
3. Sun Load Temperature and Ambient Light and Security Indicator Sensor (1) >> Install