


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. HVAC
2. [HVAC - Automatic](#)
3. [Repair Instructions](#)
- 4.

Temperature Valve Actuator Replacement - Left Side (Right Hand Drive)

Removal Procedure

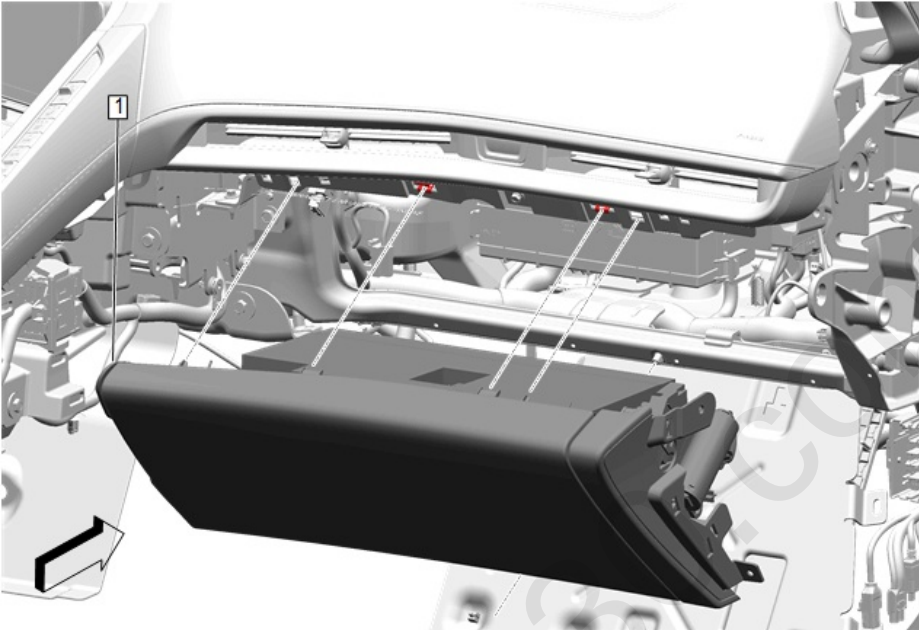


1. [Click here for full size](#)
2. Note:
Left hand drive vehicle shown, right hand drive vehicle similar.
3. Instrument Panel Compartment (1) >> Remove - Instrument Panel Compartment Replacement

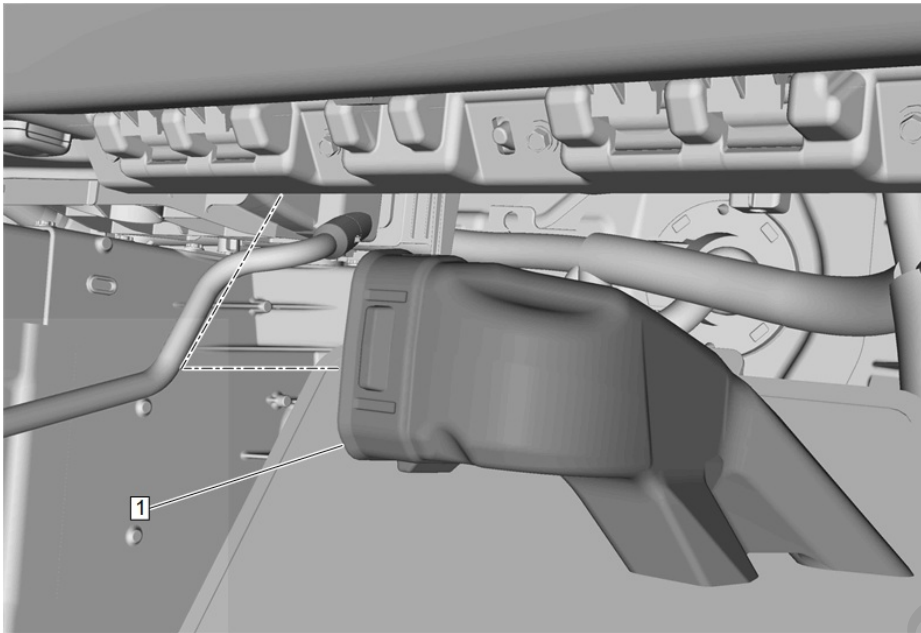

4. [Click here for full size](#)
5. Note:
Left hand drive vehicle shown, right hand drive vehicle similar.
6. Floor Front Air Outlet Duct - Right Side (1) >>> Remove - Floor Front Air Outlet Duct Replacement - Right Side
7. [Click here for full size](#)
8. Temperature Valve Actuator Bolt (1) >>> Remove [2x]
9. [Click here for full size](#)
10. Temperature Valve Actuator - Left Side (1) >>> Remove
11. Disconnect the electrical connector.


Installation Procedure

1. [Click here for full size](#)
2. Connect the electrical connector.
3. Temperature Valve Actuator - Left Side (1) >>> Install
4. [Click here for full size](#)
5. Caution:
Refer to Fastener Caution.
6. Temperature Valve Actuator Bolt (1) >>> Install and tighten [2x] 1.3 N-m (12 lb in)

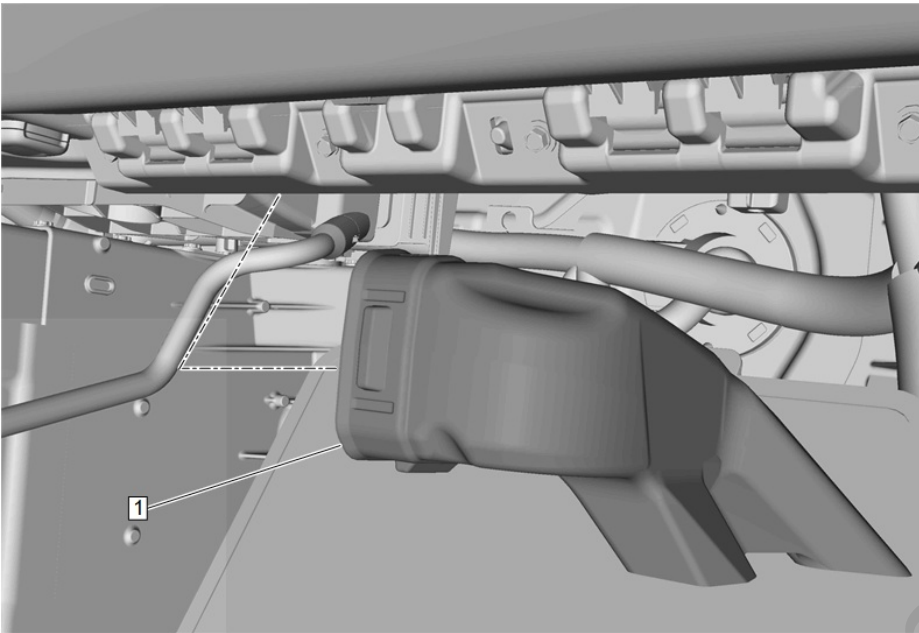

7.
[Click here for full size](#)

8. Floor Front Air Outlet Duct - Right Side (1) >> Install - Floor Front Air Outlet Duct Replacement - Right Side

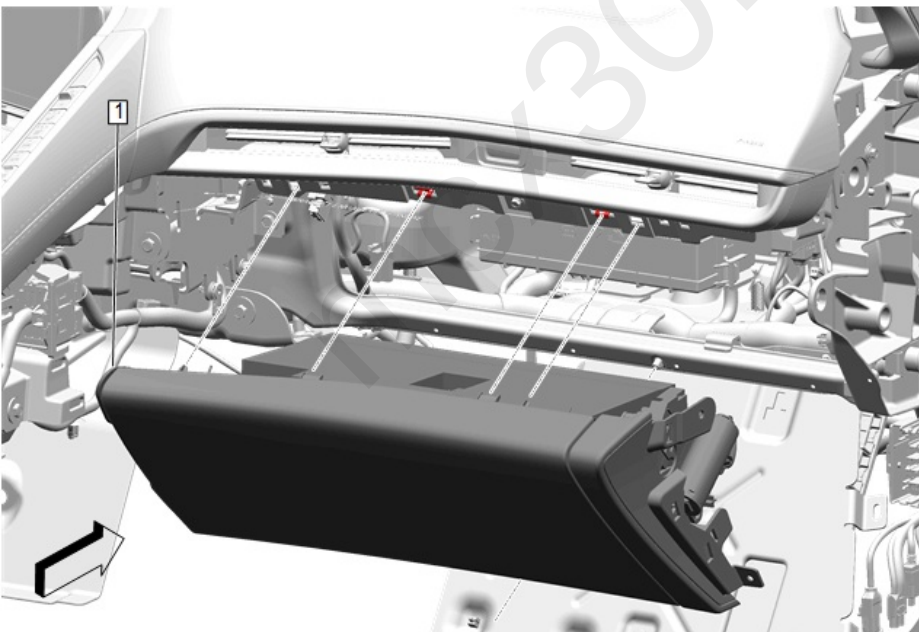

9.
[Click here for full size](#)

10. Instrument Panel Compartment (1) >> Install - Instrument Panel Compartment Replacement