

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Power and Signal Distribution**
2. **Wire and Connector Repair**
3. **Repair Instructions**
- 4.

FEP Connectors (Steering Gear)

Removal Procedure

1.
Click here for full size
2. Use a flat-bladed tool to release the locking tab on the connector.
3.
Click here for full size
4. Option 1: Twist the flat-bladed tool to push the top of the locking tab inward while pulling the connector body out.
5.
Click here for full size
6. Option 2: Pry using the flat-bladed tool to depress the locking tab while pulling the connector body out.