

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Power and Signal Distribution**

2. **Wire and Connector Repair**

3. **Repair Instructions**

- 4.

Tyco/AMP Connectors (Sensor)

Special Tools

- *EL-38125-550*™,™ Terminal Release Tool Kit
- *EL-38125-580*™,™ Terminal Release Tool Kit
- *J-38125-11A*™,™ Terminal Release Tool

For equivalent regional tools, refer to Special Tools.

Terminal Removal Procedure

1. Disconnect the connector from the component.
2.
Click here for full size
3. Insert the J-38125-11A tool into the cavity on the lower right hand face of the connector until the terminal release tang access panel slides over.
4.
Click here for full size
5. Ensure that the terminal release tang access panel is in the correct location to access the terminals.
6. Push the wire side of the terminal that is being removed toward the connector and hold it in position.
7.
Click here for full size
8. Insert the J-38125-11A into the terminal release tang access slot located behind the access panel of the connector and press down on the terminal while carefully pulling the terminal out of the connector. Always remember never use force when pulling a terminal out of a connector. If the terminal is difficult to remove, repeat the entire procedure.
9. Repair the terminal by following the Repairing Connector Terminals procedure.
10. Insert the repaired terminal back into the cavity. Repeat the diagnostic procedure to verify the repair and reconnect the connector bodies.