

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Safety and Security**
2. **Supplemental Restraints**
3. **Repair Instructions**
- 4.

Front Seat Belt Anchor Plate Tensioner Replacement



[Click here for full size
SIR Warning](#)

Warning:

Refer to

SIR Inflator Module Handling and Storage Warning.

Preliminary Procedures

1. Disable the SIR system

SIR Disabling and Enabling

- Remove the front seat.

Front Seat Removal and Installation

- Remove the front seat cushion front finish cover.

Front Seat Cushion Front Finish Cover Replacement

- Remove the driver or passenger front seat belt anchor plate tensioner cover and bolt.

Front Seat Belt Retractor Replacement

Fastener Caution.

Procedure

1. Remove the front seat belt tensioner bolt.
2. If a NEW threaded component is being installed, loosen the adhesive using a metal pick or similar tool before proceeding. If threaded component is reused, prepare the threaded component using the following steps:
 3.
 1. Remove any loose cured adhesive from the external threads of the component using a lint free cloth.
 2. Thread the cleaned component into the internal mating threads and remove to loosen trapped cured adhesive.
 3. Apply thread locking adhesive to the external threads of the component.

Adhesives, Fluids, Lubricants, and Sealers

- Ensure there are no gaps in the thread locking adhesive once applied to the component.

Tighten

45 N-m (33 lb ft)

Pretensioner Handling and Scrapping

- Enable the SIR System.

SIR Disabling and Enabling

Callout	Component Name
Warning:	
Refer to	
1	Front Seat Belt Tensioner Bolt Caution: Refer to
2	Front Seat Belt Anchor Plate Tensioner Procedure 1. Disconnect the electrical connector. 2.